



Lenovo G50-80 80E5 Battery Replacement

This guide explains how to remove and replace the battery from a Lenovo G50-80 80E5 laptop.

Written By: Abigail Hood



INTRODUCTION

Over the course of ownership of the laptop, you may have to replace the battery. This guide will instruct you on how to remove and replace the battery.

Step 1 — Battery




- Place laptop on a flat surface with the back cover facing up and the hinges facing you.

Step 2



- You will see two tabs towards the bottom of the back cover. Move the tab positioned on the right side to the right. You will know this has been done correctly when you can see the red surface beneath the tab.

Step 3

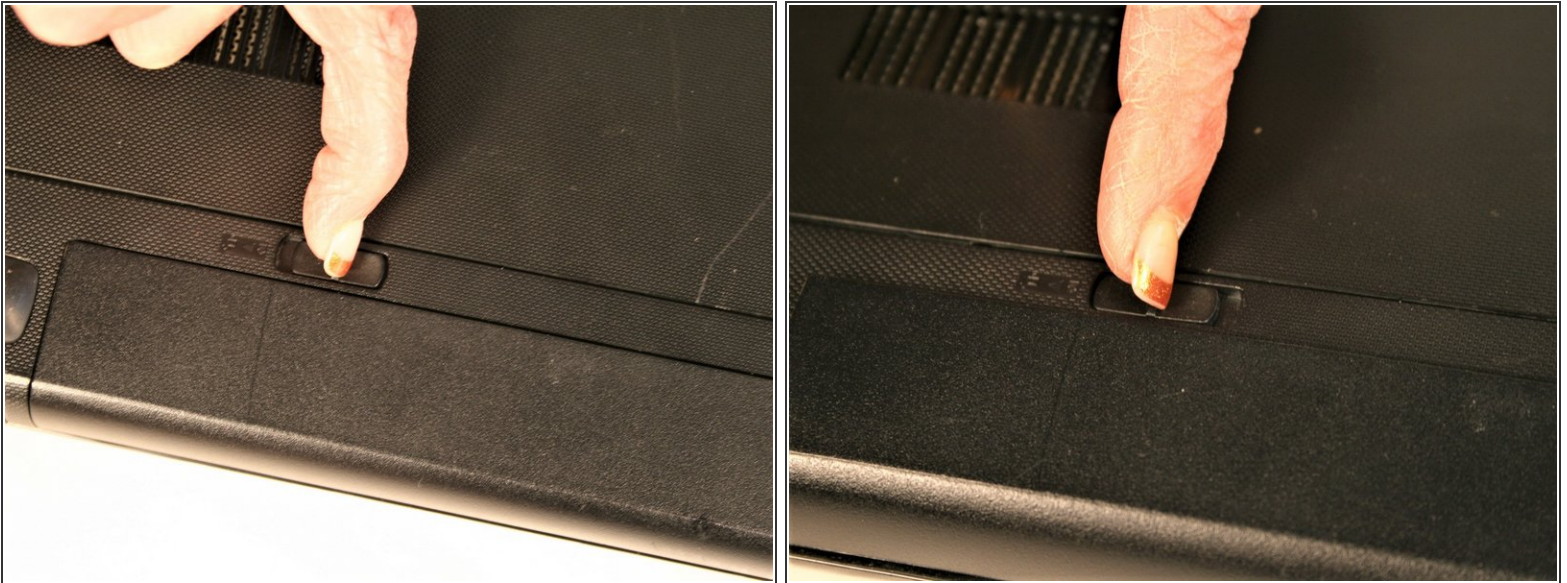

- Move the left tab to the left. This will release the battery. You will hear an audible 'click' and see the battery separate from the rest of the laptop.

Step 4



- Take hold of the battery at the top seam between it and the laptop. To remove, roll the battery towards yourself. Lastly, lift battery out.

To reassemble your device, follow these instructions in reverse order.