



# Lenovo Ideapad 110S-11IBR Battery Replacement

Step by step instructions for replacing your Lenovo Ideapad battery.

Written By: Alex Daughters



---

## INTRODUCTION


This guide will teach you to replace the battery of the Lenovo Ideapad 110S-11IBR, if faulty or to service another part.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery

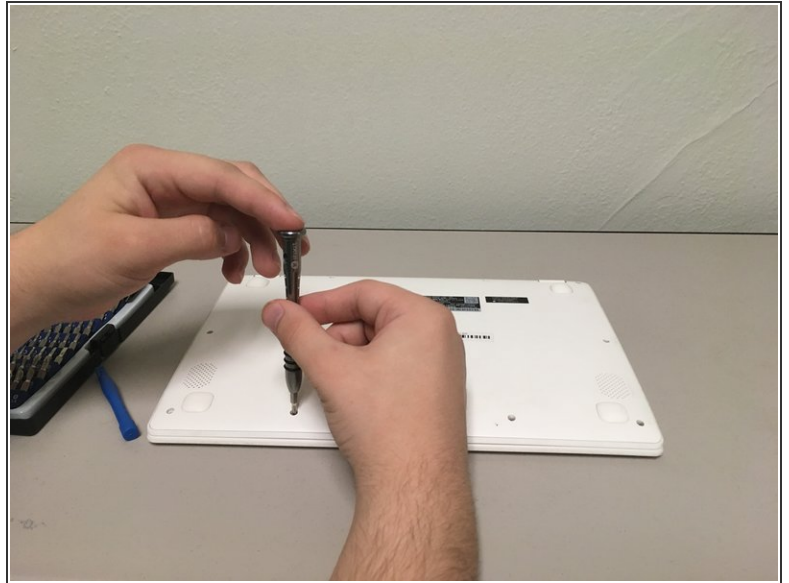


- Unscrew the eleven 4 mm Phillips screws on the bottom of the device.

## Step 2

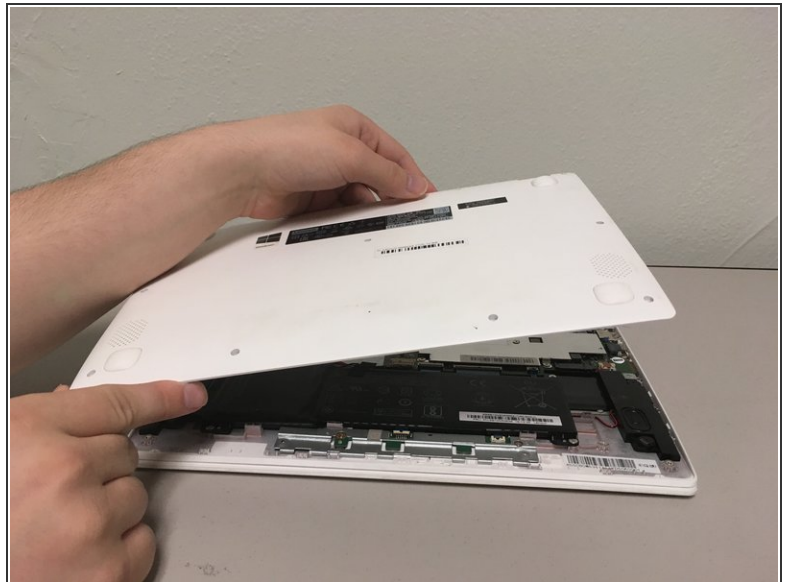


- Loosen the back lid using a plastic opening tool.
- Lift the back lid off of the device.

### Step 3

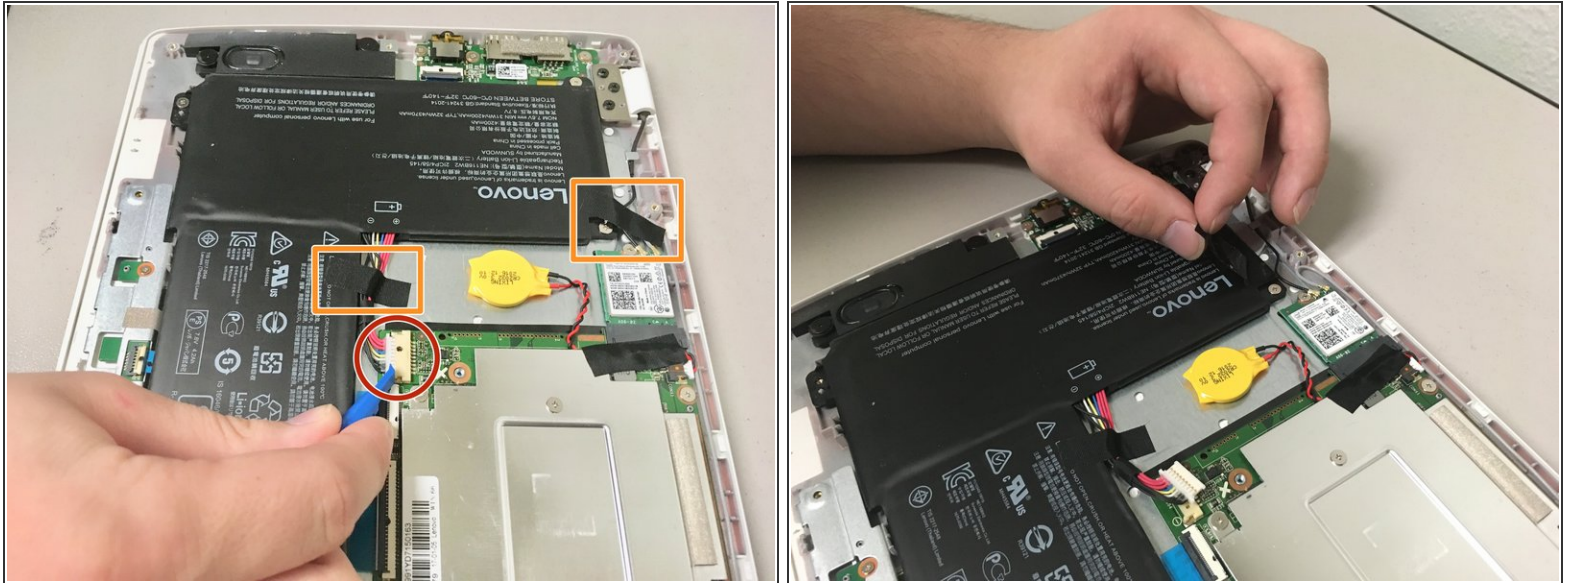

- Remove the battery connector using a plastic opening tool, from its socket.
- Remove the two pieces of tape that are holding the battery down.

### Step 4

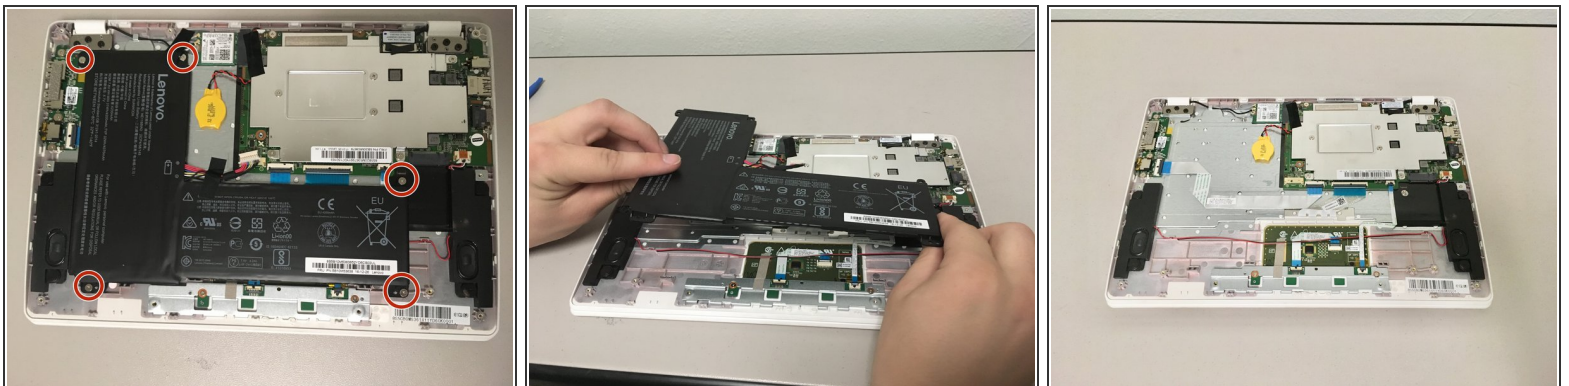

- Remove the five 4 mm Phillips screws.
- Lift the battery up and put it to the side.

To reassemble your device, follow these instructions in reverse order.