




# Lenovo IdeaPad Flex 4-1470 Removing the Back Cover

Remove the back cover to access and replace the internal components.

Written By: Demario Robinson

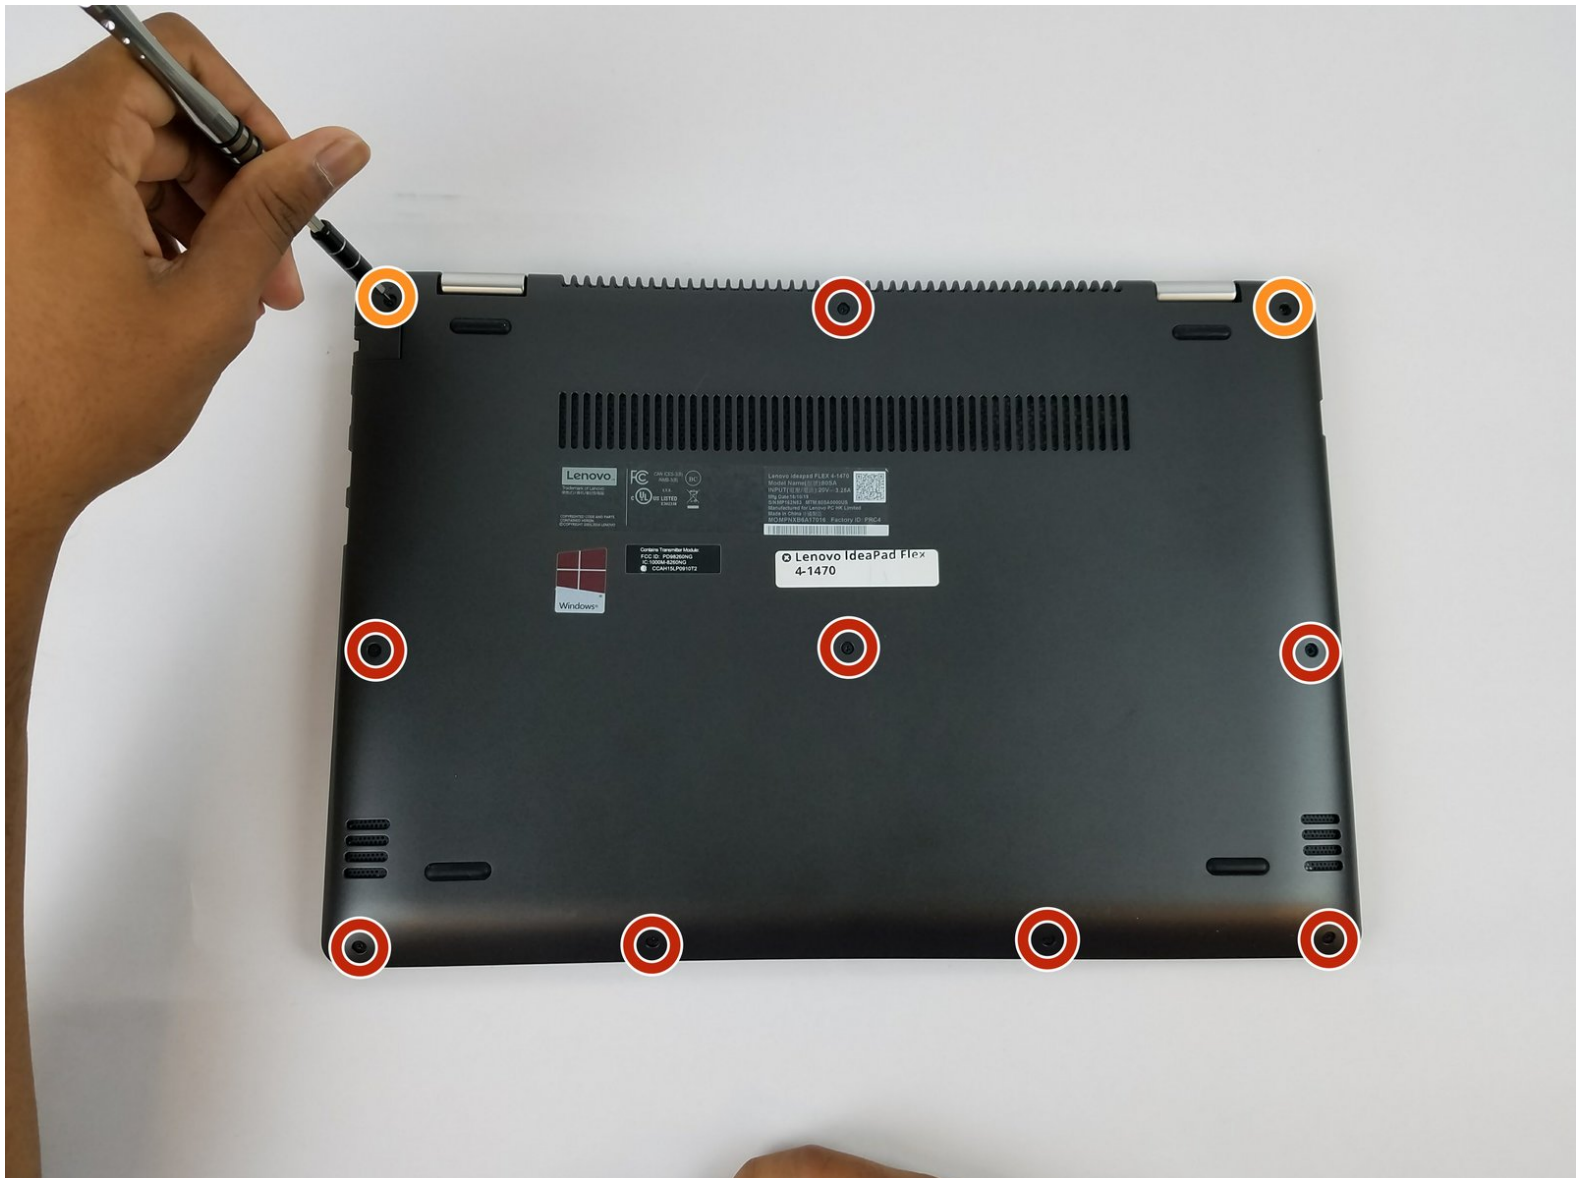

---

## INTRODUCTION


This guide will show you how to remove the cover. This is a prerequisite guide for all other replacement guides on this page. It is also useful if you need to clean out dust that may be causing overheating.

---

### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Cover

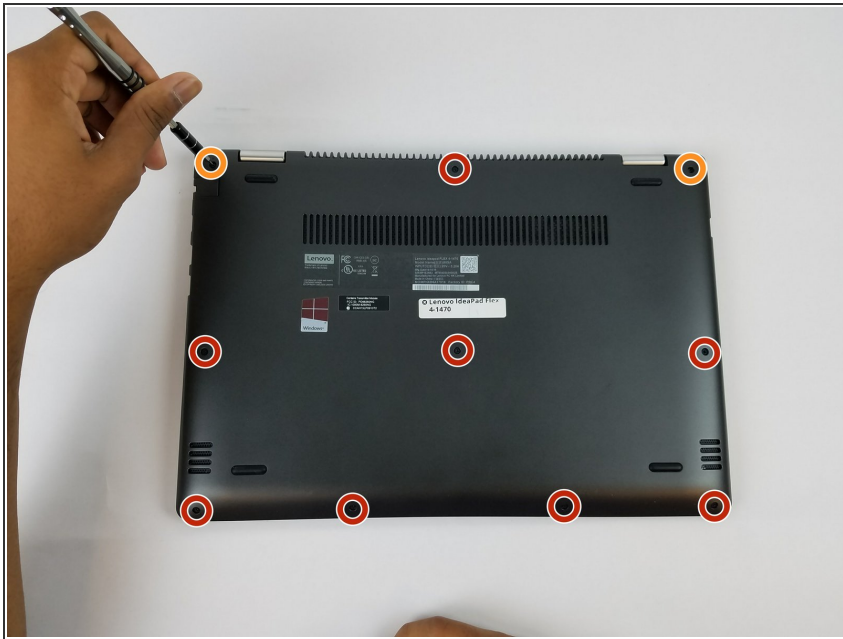

- Remove the eight 6 mm screws using a Phillips #0 screwdriver.
- Remove the two 11 mm screws using a Phillips #0 screwdriver.

## Step 2

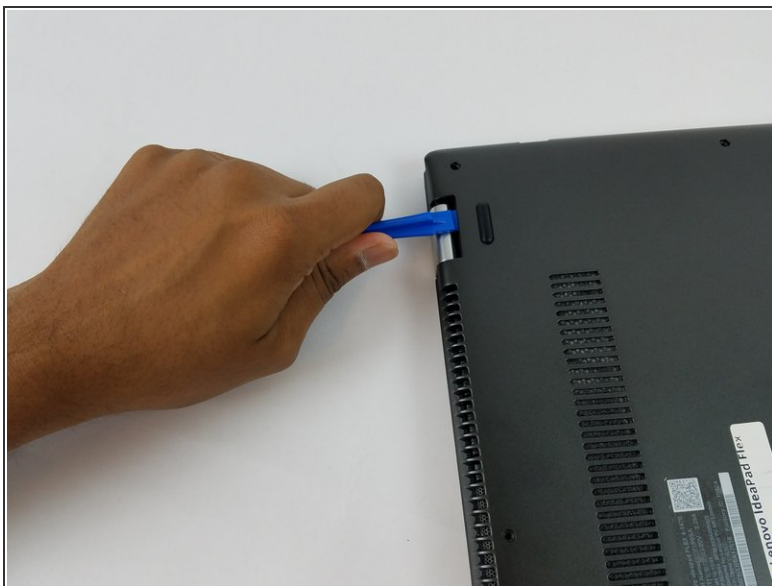

- Pry the back cover off by inserting the plastic opening tool at the hinges and wedging it between the Back cover and the body.
- Follow along the back edge with the plastic opening tool, lifting the cover off. It is normal to hear snapping/clicking sounds as the back cover is held on by clips.

To reassemble your device, follow these instructions in reverse order.