



iPhone 8 Plus Pentalobe Screws Replacement

Remove or replace the pentalobe screws that secure the display in the iPhone 8 Plus.

Written By: Adam O'Camb



INTRODUCTION

Use this guide to remove or replace the two pentalobe (five-point) screws securing the iPhone's display. These screws are a proprietary Apple design, requiring the use of a specialized P2 screwdriver.

TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)
-

Step 1 — Pentalobe Screws



- ⚠ Before you begin, discharge your iPhone battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.
- Power off your iPhone before beginning disassembly.
- Remove the two 3.5 mm pentalobe screws from the bottom edge of the iPhone.
- i Opening the iPhone's display will compromise its waterproof seals. Have [replacement seals](#) ready before you proceed past this step, or take care to avoid liquid exposure if you reassemble your iPhone without replacing the seals.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-22 04:10:48 PM.