



# DualShock 4 CHU-ZCT2U Outer Shell Replacement

Remove the outer shell of the Dualshock 4.

Written By: David Seale



## INTRODUCTION

This will show you how to remove the outer shell of the DualShock 4 so you can replace it or get inside the controller.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)

### PARTS:


- [DualShock 4 Controller Front Panel \(CUH-ZCT2U\)](#) (1)
- [DualShock 4 Controller Rear Panel \(CUH-ZCT2U\)](#) (1)

## Step 1 — Outer Shell



- Unscrew the four 6.5mm screws, using a Phillips-Head screwdriver.
- Pry the two halves of the shell apart using a plastic opening tool.
- ⓘ Be careful, as there will be a ribbon connecting the inner workings of the controller. It will not separate into two parts just by pulling apart the shell.

## Step 2

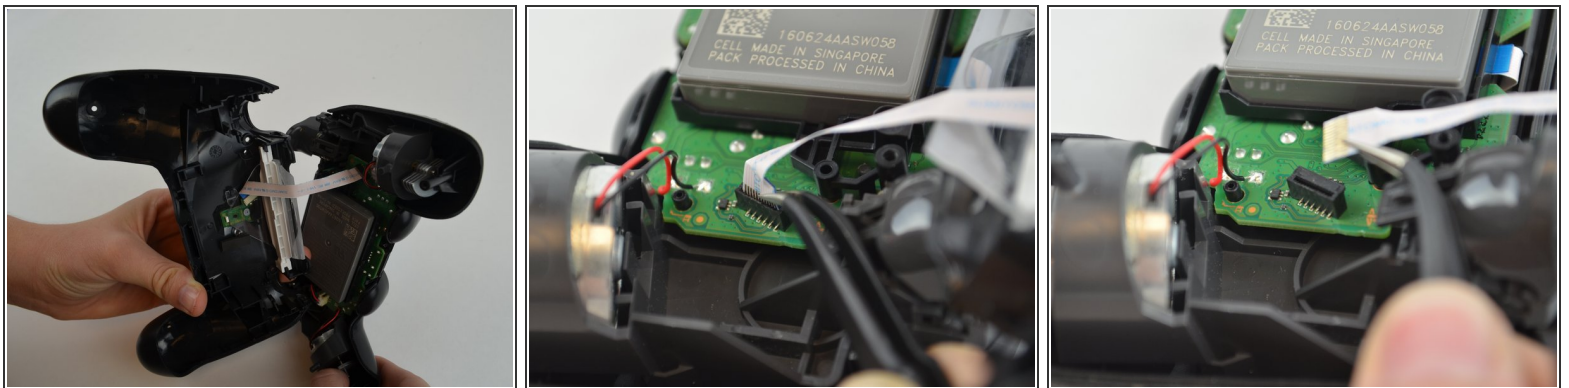

- Pull the ribbon cable out of the motherboard port to fully separate the two halves, using a pair of tweezers.

To reassemble your device, follow these instructions in reverse order.