



Amazon Echo Dot 2nd Generation Speaker Replacement

Replace the speaker in an Amazon Echo Dot 2nd Generation.

Written By: Alexis White



INTRODUCTION

Use this guide to remove and replace the speaker in the Amazon Echo Dot 2nd Generation.

TOOLS:

- [T8 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Speaker



- Power off and unplug the echo
- Using the plastic opening tool, peel off the rubber layer on the bottom of the echo

Step 2



- Use the T8 screwdriver bit to unscrew the four 1.6mm torx screws
- Remove the black, cylindrical base

Step 3



- Tap the base against the palm of your hand so that the black speaker component comes out

To reassemble your device, follow these instructions in reverse order.