



HP G62-340US Memory Replacement

A brief guide on how to replace the RAM in an HP G62-340.

Written By: Yun Yang



INTRODUCTION

A brief guide on how to replace the RAM in an HP G62-340.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Memory




- Turn off the computer.
- Unplug the charging cable from the computer.
- Turn your laptop over and place it on a firm surface.

Step 2



- Locate the memory module compartment.
- Use a screwdriver to remove the three Phillips PM2.5x6.0 captive screws and remove the cover on the memory module compartment.

Step 3

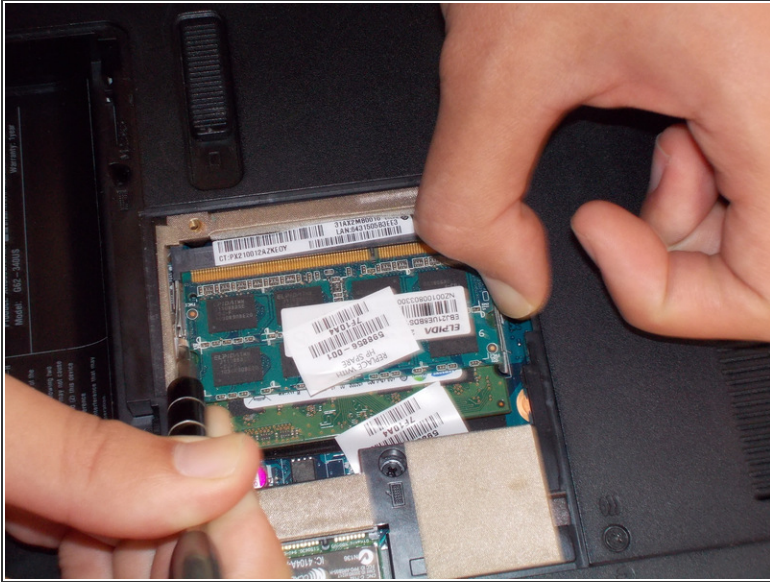

- If you need to remove memory before installing the new memory, release the memory using a small wooden tool, or fingernail, to spread the clips holding the memory.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-12-29 12:06:58 AM.