



# Dell Chromebook 3180 LCD Replacement

This guide shows you how to replace the LCD panel for a Dell Chromebook 3180.

Written By: Jon



## INTRODUCTION

This guide shows you how to replace the LCD panel for a Dell Chromebook 3180.

---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



### PARTS:

- [Dell Chromebook 11 3180 LCD Bezel](#) (1)
-

## Step 1 — Prepare CB for LCD Bezel Removal



- Open the chromebook until its completely flat on the table
- Remove both the left and right hinge caps
- Remove a total of 4 screws. One in each corner.

## Step 2 — Remove the LCD Bezel




- Use a plastic pry tool or blade and start in the top left corner or first left plastic ridge.

### Step 3 — Remove LCD screen



- Remove a total of 4 screws. One in each corner
- Lift up the LCD screen from within the LCD assembly frame.
- On the back of the LCD screen, remove the tape and LCD connector

### Step 4 — Install New LCD Screen

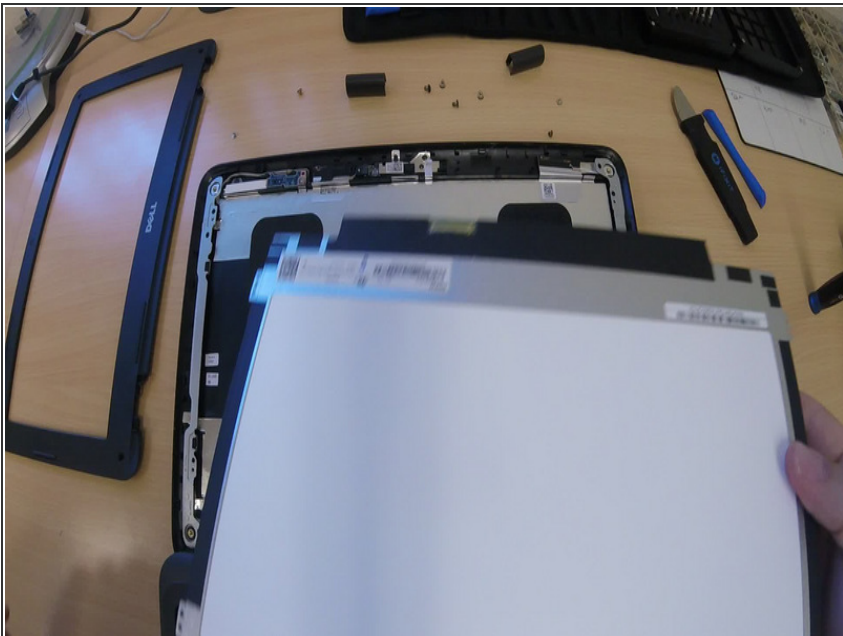

- Attach the LCD connector
- re-apply the tape to the LCD connector
- Set the new LCD screen into the LCD assembly frame while matching up the screw ports in each corner

## Step 5 — Reinstall LCD Bezel



- When installing the LCD bezel, look for the plastic hinge outlines on each side and match them up with the metal hinges on the chromebook.
- Snap the LCD bezel in place until it is flush with the entire LCD assembly

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-03-30 07:11:55 PM.