



# Acer Chromebook C710-2856 Back Cover Replacement

This guide will help you replace the back cover of your Acer Chromebook C710-2856.

Written By: Justin Ogihara



## INTRODUCTION

Use this guide to replace the back cover of your device.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Back Cover



- Flip the device over and remove the 4.3 mm screw using a Phillips #1 screwdriver.
- Remove the back cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-07-29 07:45:06 AM.