




Alienware 17 R2 Memory Modules Replacement

Written By: Terrence15

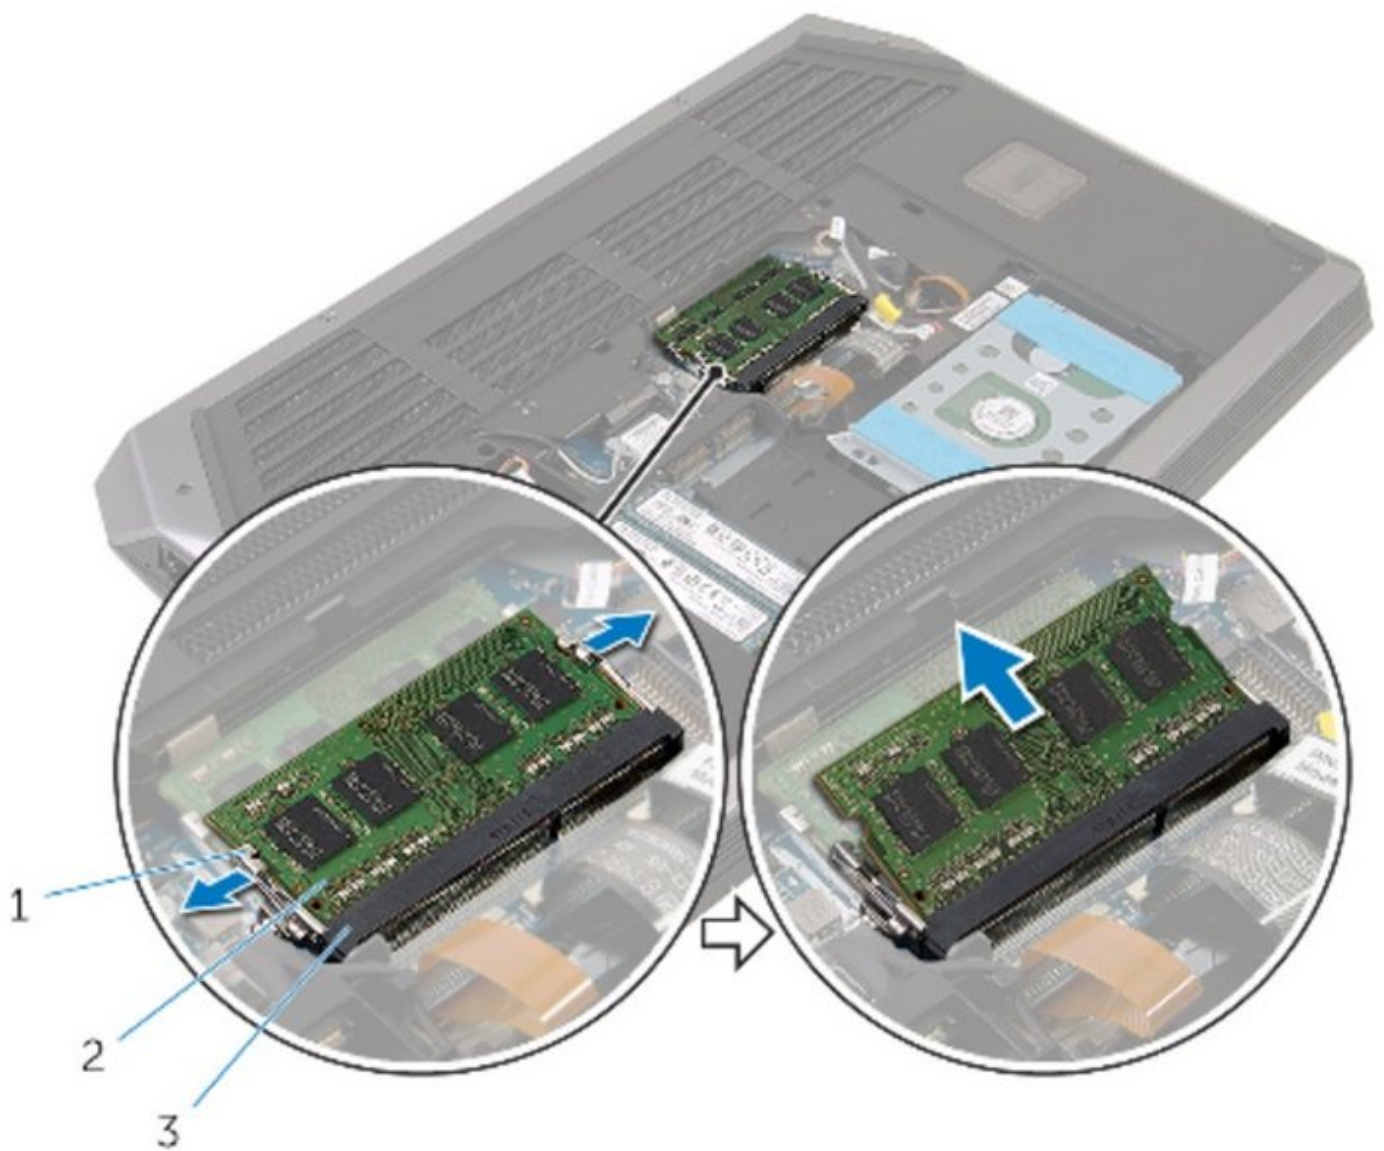


INTRODUCTION

In this guide, we will be showing you how to remove and replace the Memory Modules.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-



Step 1 — Popping up Memory Module

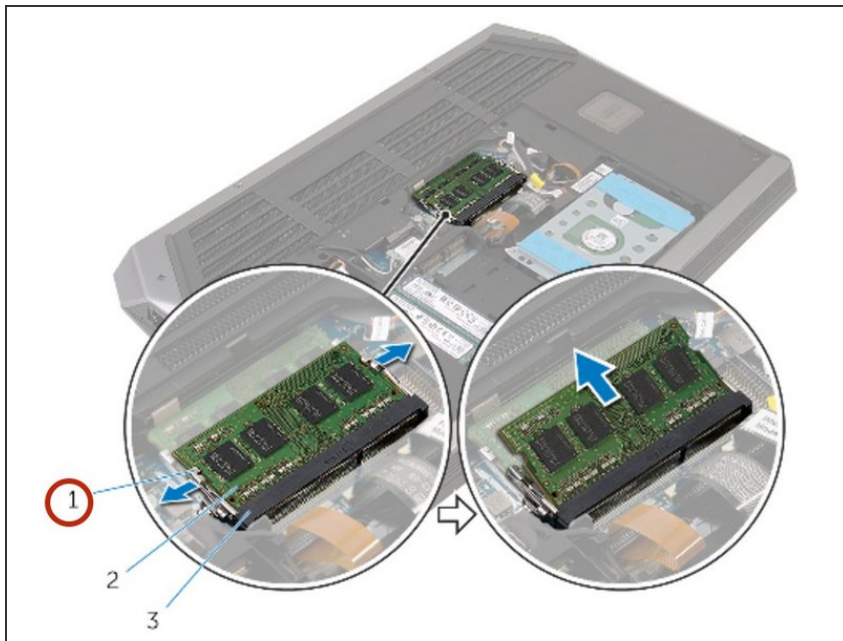

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Remove the base panel.
- Using your fingertips, carefully spread apart the securing clips on each end of the memory-module slot until the memory module pops up.

Step 2 — Remove Memory Module

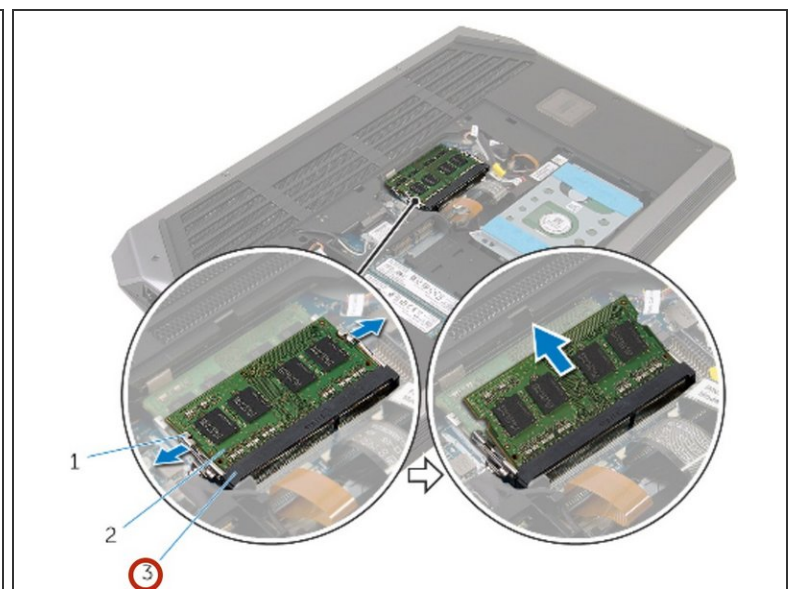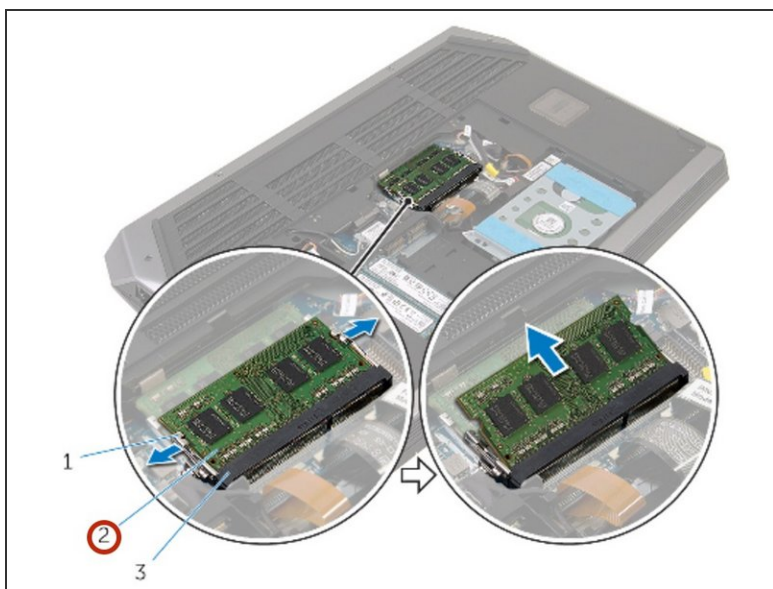


- Slide and remove the memory module from the memory-module slot.

Step 3 — Aligning the Notch

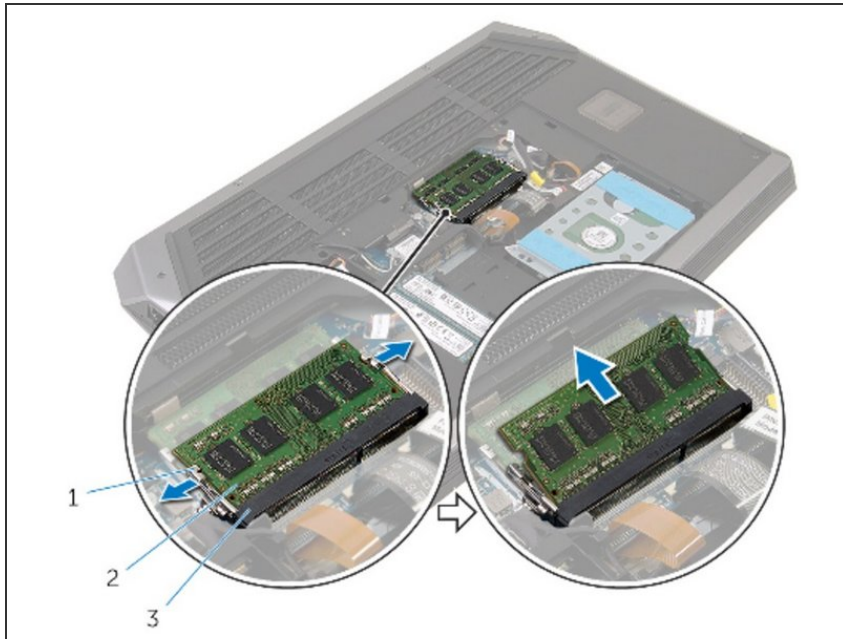

- Align the notch on the **new** memory module with the tab on the memory-module slot.

Step 4 — Installing Memory Module

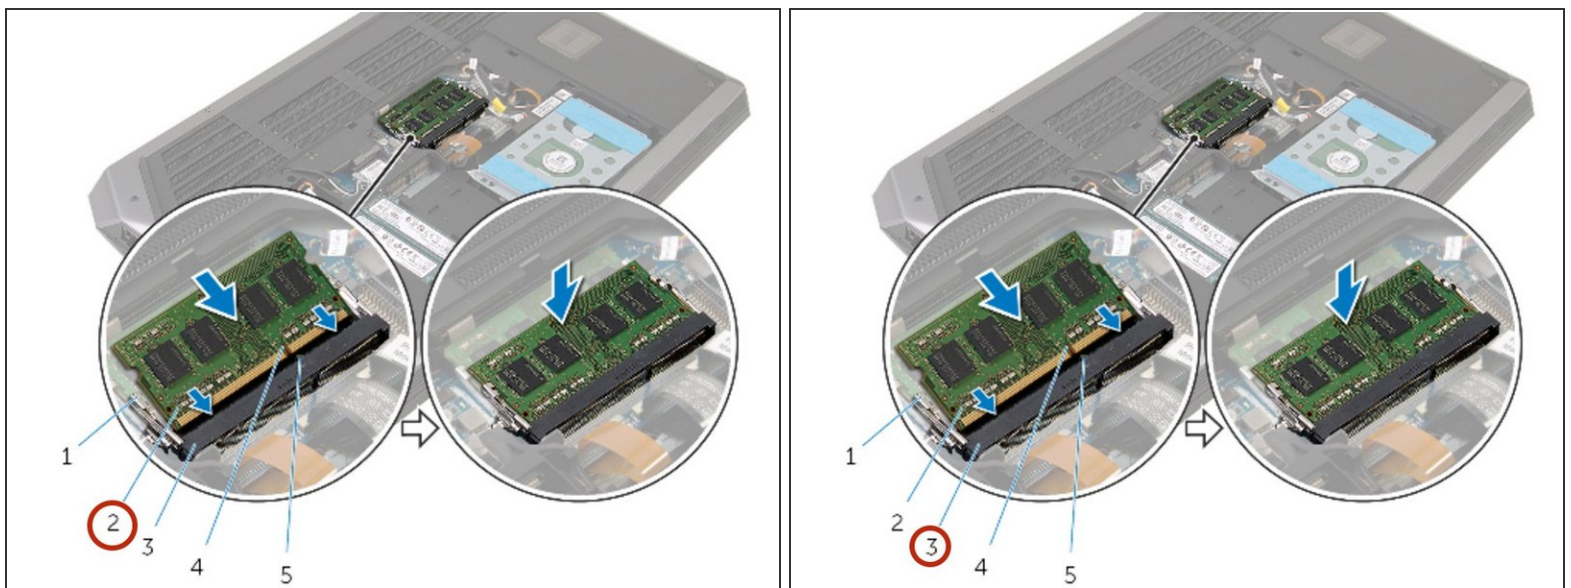

- Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.

i If you do not hear the click, remove the memory module and reinstall it.

To reassemble your device, follow these instructions in reverse order.