



# PowerBook G4 Aluminum 17" 1.67 GHz (High-Res) Battery Replacement

Written By: Walter Galan



---

## INTRODUCTION

Replace a worn out battery for longer intervals between recharging.


---



### PARTS:

- [G4 Aluminum 17" Battery](#) (1)
-

## Step 1 — Battery

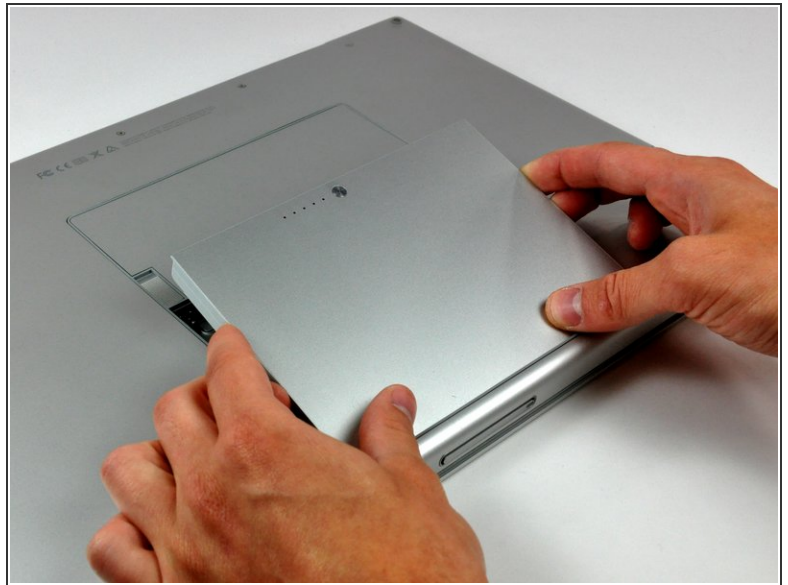

- Use your thumbs to push the two battery retaining tabs away from the battery.
- The battery should pop up enough to rotate it toward yourself and lift it out of the lower case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-18 06:49:56 PM.