




Bissell Powerglide Cordless Battery Replacement

Brief instructions for Bissell Powerglide Cordless Battery Replacement.

Written By: Joseph Adam Johnson

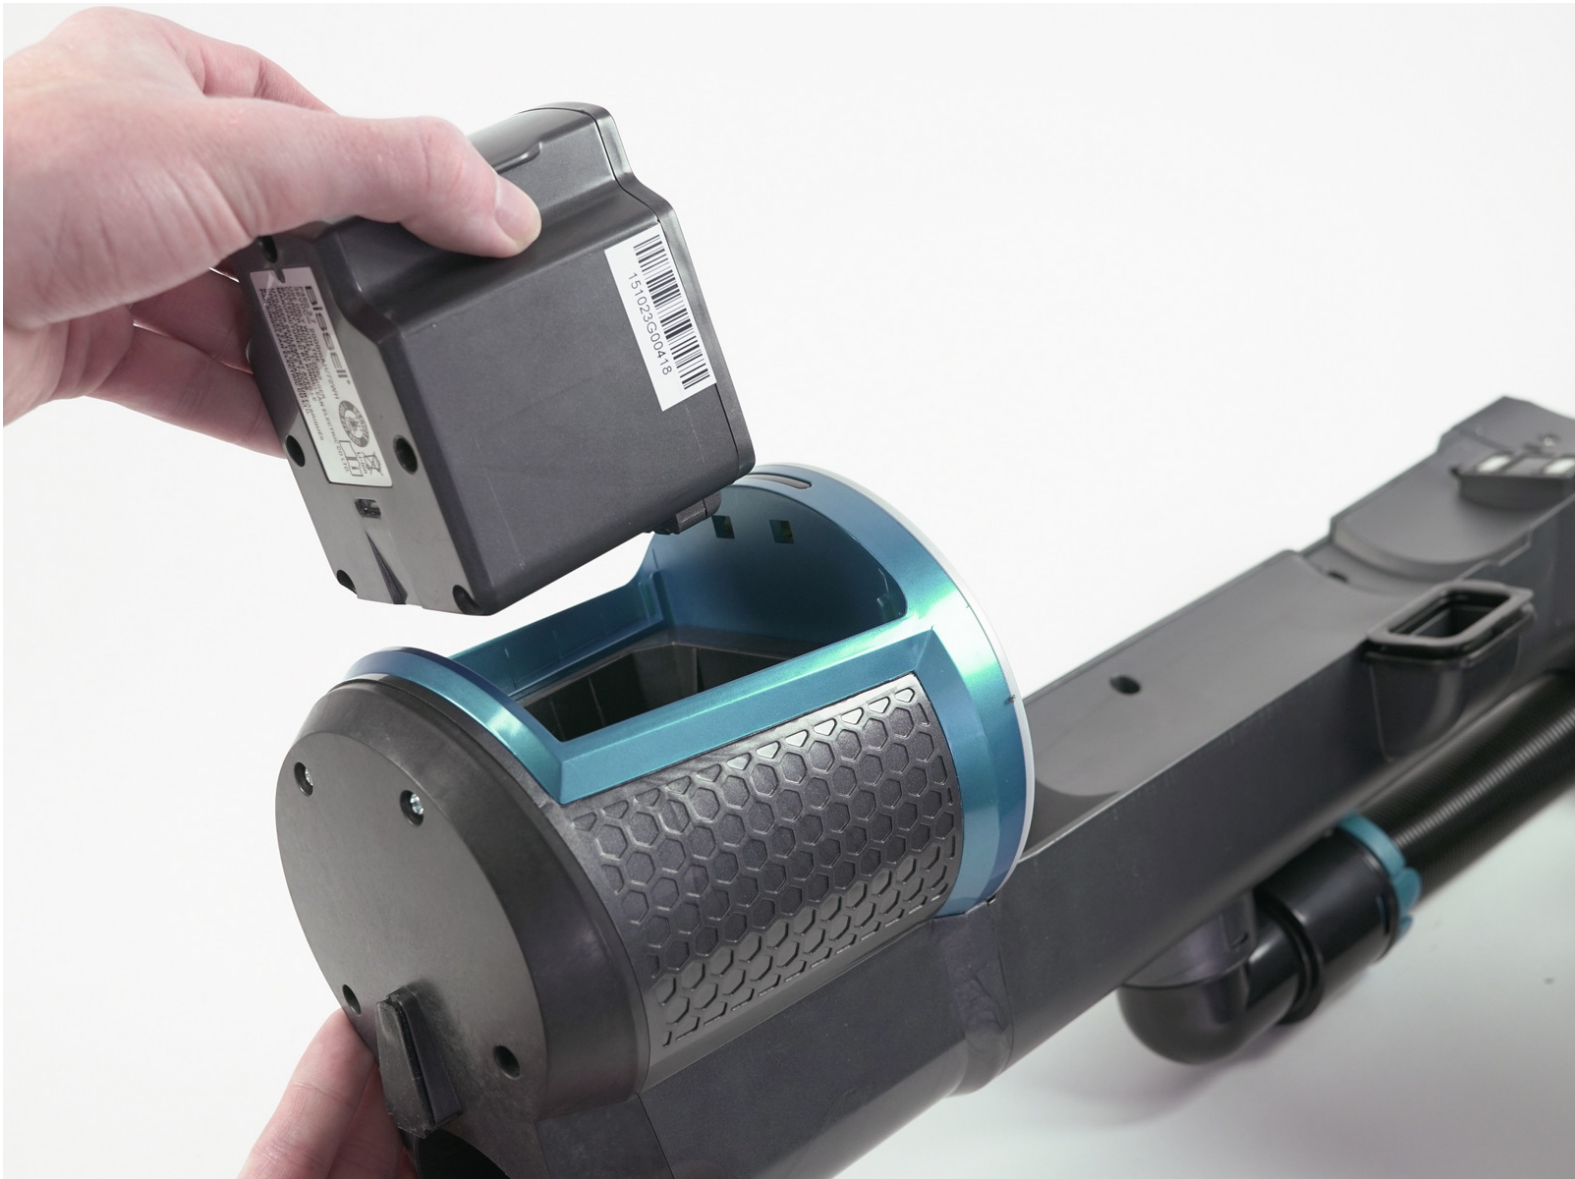



TOOLS:

- [Fingers](#) (1)



PARTS:

- [Bissell Powerglide Cordless Battery Pack](#) (1)
- [Bissell Cordless Vacuum Charger](#) (1)

Step 1 — Battery



- Open the battery bay door by depressing the gray switch and pulling out.

Step 2



- Remove the battery with a strong pull.

To reassemble your device, follow these instructions in reverse order.