



Shark Rocket Professional Dust Cup Replacement

This guide will demonstrate how to remove the dust cup on the Shark Rocket Professional for replacement or emptying.

Written By: Theo Watkins



INTRODUCTION

This is a very simple guide demonstrating how to remove the dust cup of the vacuum. Despite its simplicity, this guide is important as removing the dust cap gives us access to a number of other parts.

Step 1 — Dust Cup



- First, locate the button that says "Dust Cup". It is right next to the power button at the base of the handle.
- Press the button down completely; you should feel a click.

Step 2



- Grab the handle of the dust cup, then pull up and away from the vacuum.
- ⓘ You must press the button and pull the dust cap simultaneously at first to release the latch.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-03-28 04:34:56 AM.