



Dell Inspiron 15z 5523 CD Drive Replacement

If you are having trouble with your computer reading your disk the problem could be you CD Drive itself.


Written By: Christian Chavez



INTRODUCTION

Teaching the disassembly of the CD Drive and replacement of a new part to allow for full function.

Step 1 — CD Drive

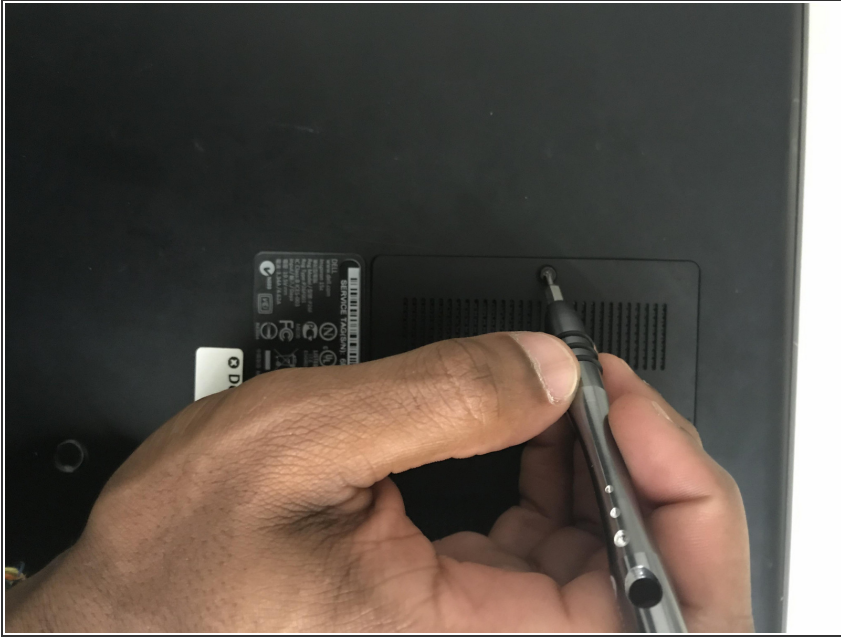

- Start by flipping your computer over. Then using a small screw driver unscrew the back-plate.

Step 2



- Remove the back-plate from the computer by grabbing it and pulling up.

Step 3



- Once the Back-Plate is off use your fingers to grab onto the CD Reader and pull straight out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-06-05 01:01:59 AM.