



Main Click Buttons

Open mouse and work with its bottom half. Use iFixit toolkits to remove the black click button covers of your Logitech G602 gaming mouse.

Written By: Jerico Morales




INTRODUCTION

Use this guide to remove the black covers protecting the mouse's white click button pieces.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Slip Joint Pliers](#) (1)
-

Step 1 — Click Buttons

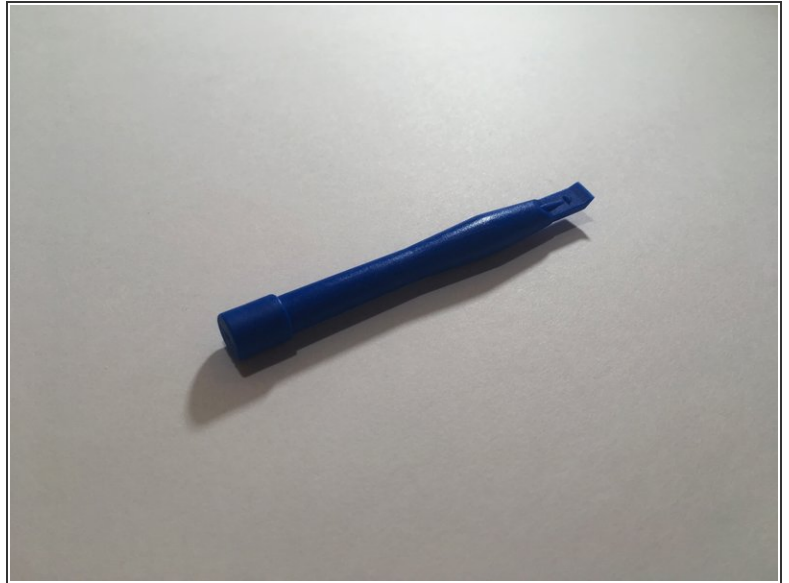

- Use a blue spudger to pry all 4 mouse feet off the bottom of the mouse.

Step 2




- Use a #00 screwdriver (3x5mm) to unscrew all 6 screws from under the mouse feet.

Step 3




- Use a blue spudger to open the bottom battery port.

Step 4

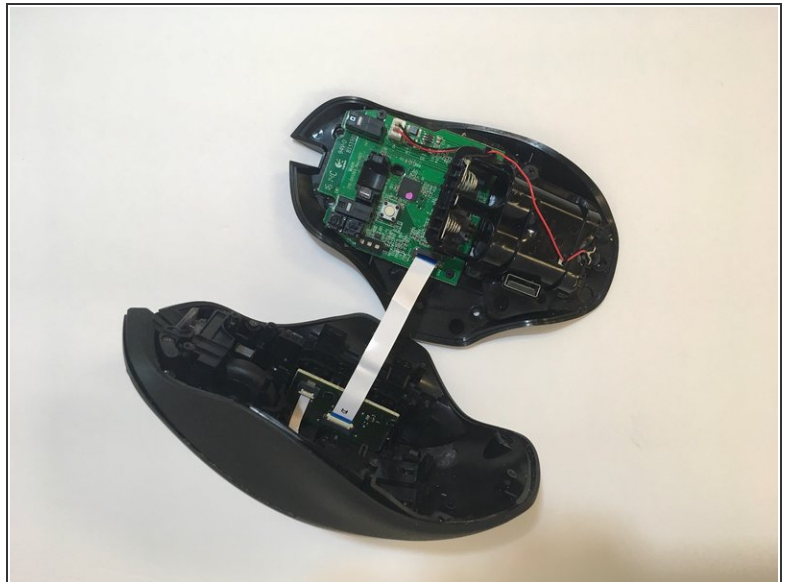

- Lift the top of the mouse from the base of the mouse (separate mouse in half) to expose the internal hardware.

Step 5

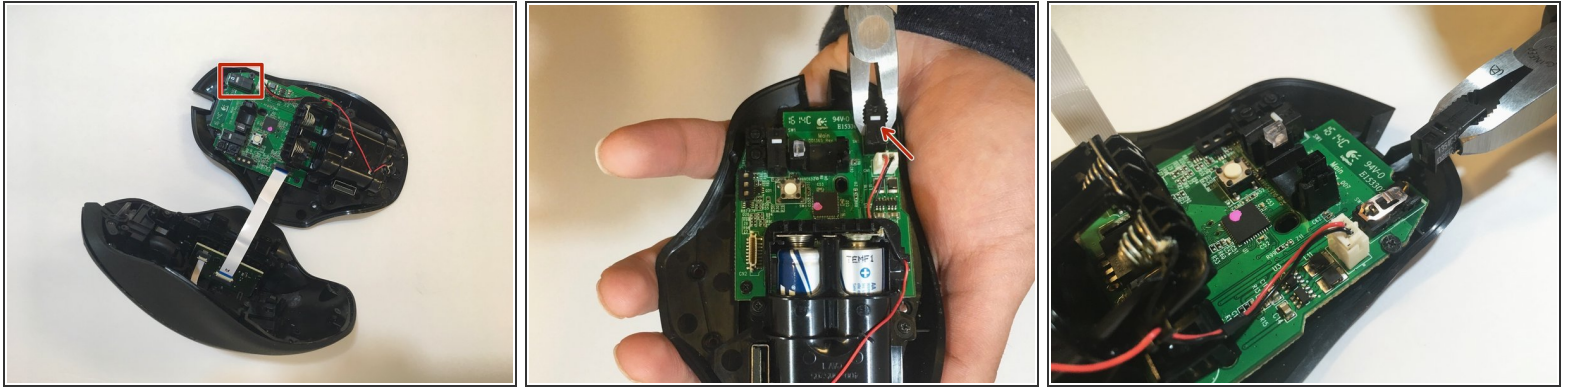

- Use pliers to grip and remove the black covers over the button — the black cover and the button, a small white plastic piece, should come off).

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-27 02:42:56 AM.