



# Tristar Blender Disassembly

Tristar blender used for blending and mixing all kind of ingredients.

Written By: koen merkx





## TOOLS:

- [Phillips #1 Screwdriver](#) (1)




## PARTS:


- [Housing](#) (1)

## Step 1 — Tristar Blender Disassembly




 The assembled mixer.

## Step 2

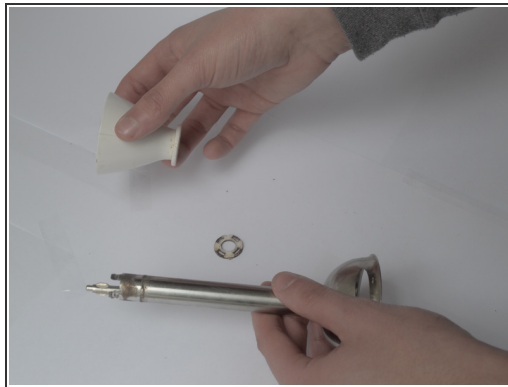




- To disassemble the 3 parts you've got to disconnect the little ring. Use a screw driver to get the ring loose.

### Step 3

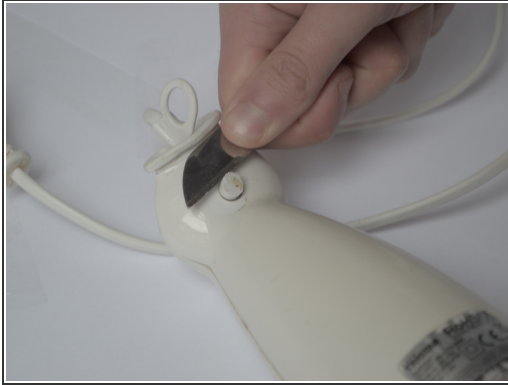



- Unscrew 3 screws to open the casing.

### Step 4

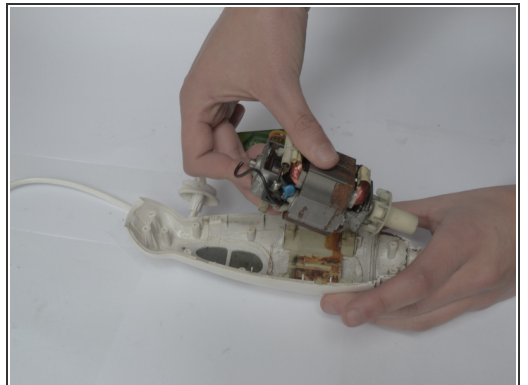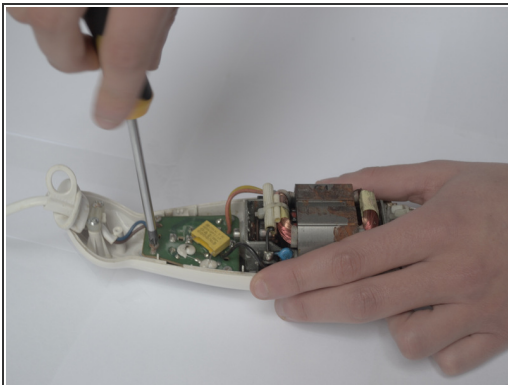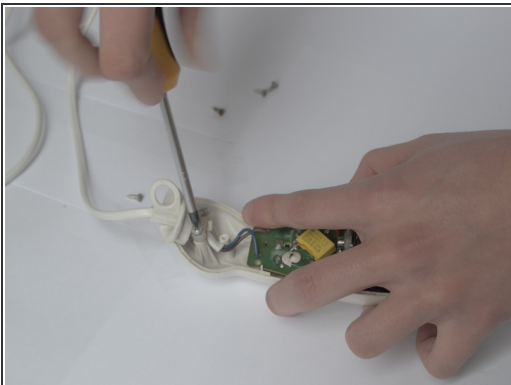

- Unscrew 4 screws to disassemble the printplate and 2 to unscrew the wiring. Then you can lift the motor out by hand.

## Step 5

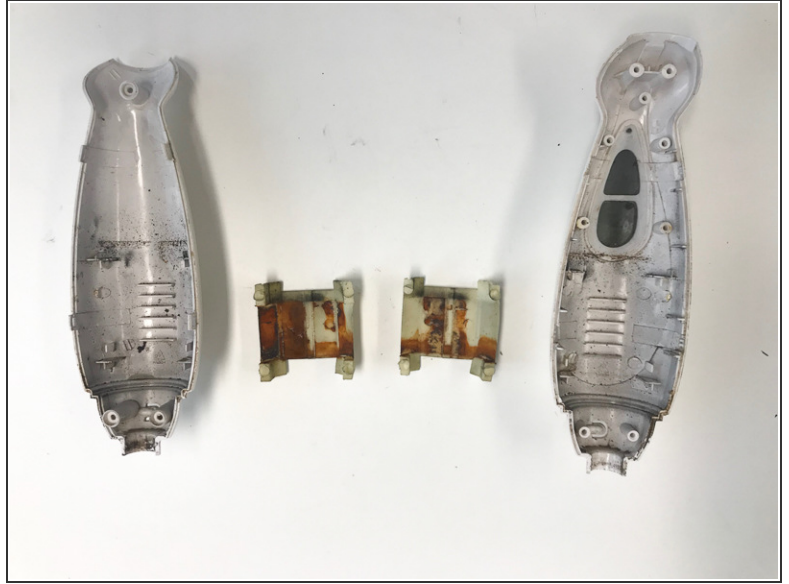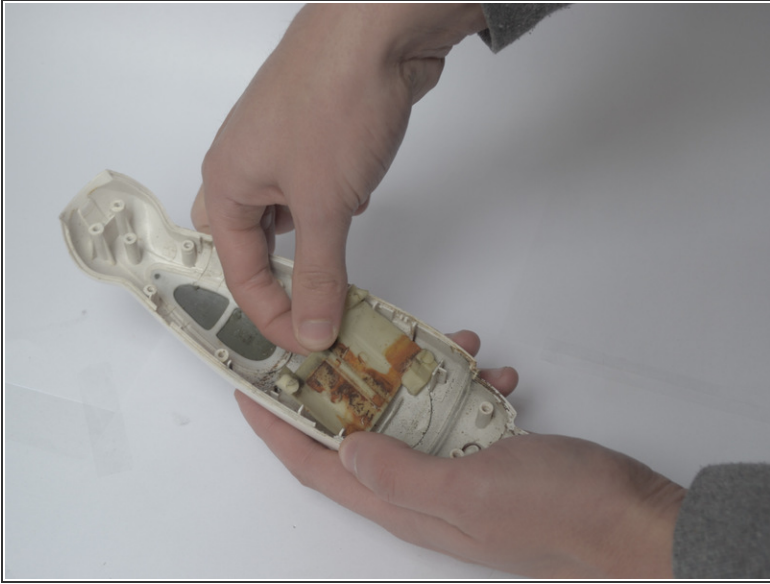

- To disassemble the motor holders you can slide them of the casing.

un-screw 3 screw froms the housing

This document was last generated on 2018-04-05 02:20:48 PM.