



Logitech Extreme 3D Pro Disassembly of the handle

This guide will show how to disassemble the handle of a Logitech Extreme 3D Pro joystick.

Written By: Emanuel Canela



INTRODUCTION

After extended use certain parts may require cleaning or replacement. This guide will assist you in safely disassembling the top handle portion of the joystick.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Disassembly of the handle



- Remove these three Phillips #1 screws:
 - Two 10mm screws.
 - One 7mm screw.

Step 2



- Using your fingers, lower the rubber boot to reveal two screws underneath the joystick.
- Remove the two 10mm Phillips #1 screws.

Step 3



- Pull apart the joystick chassis by hand.
- Release this clip located underneath the hand rest
- ⓘ The circuit board will be loose and may fall down.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-12 04:08:03 PM.