




# Dell Inspiron 15-5552 Battery Replacement

The following guide will give instructions on how to properly replace the battery on your Dell Inspiron 15-5552.

Written By: Mitchell Roberts

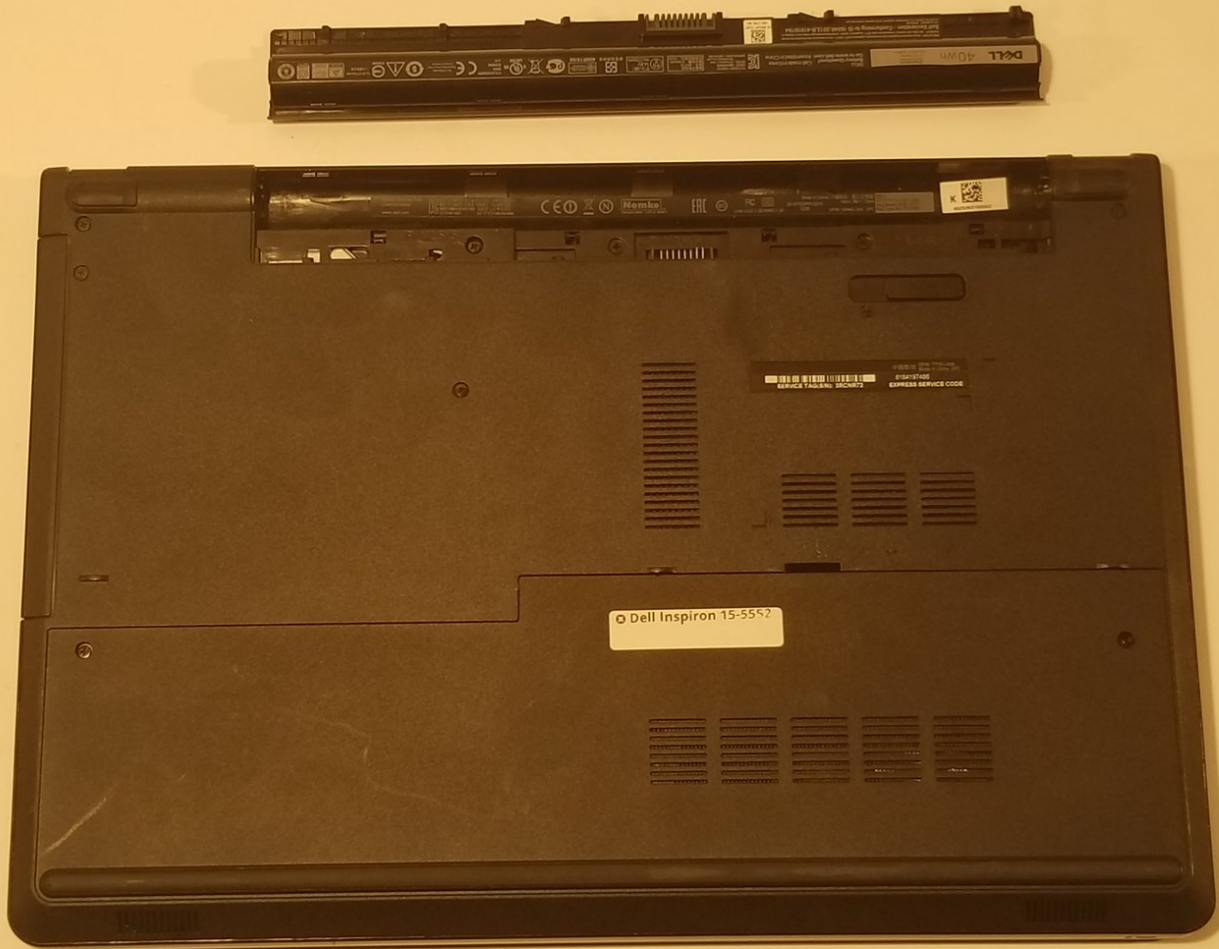


## Step 1 — Battery




- Make sure the laptop is powered down before you remove the battery.

## Step 2

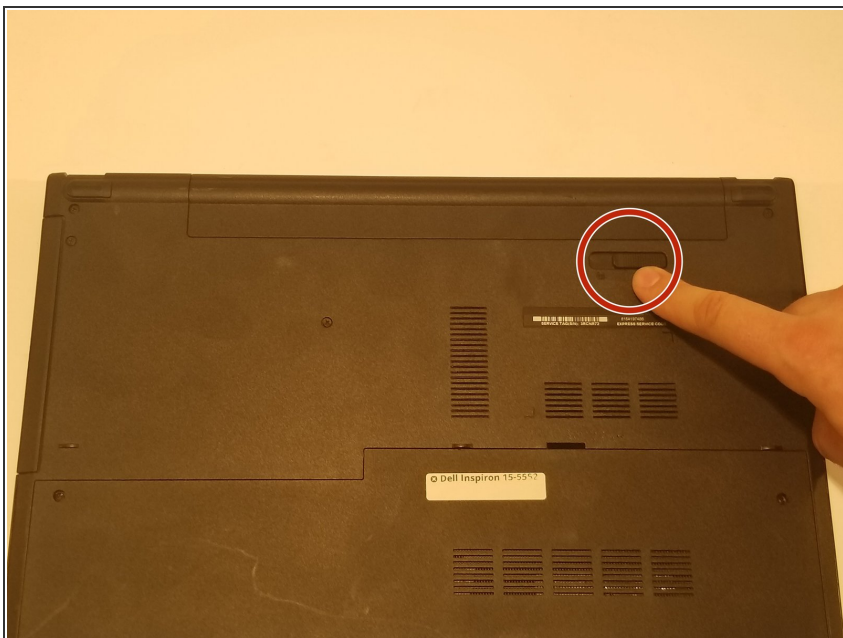


- Locate the battery release switch on the bottom of the laptop.

### Step 3

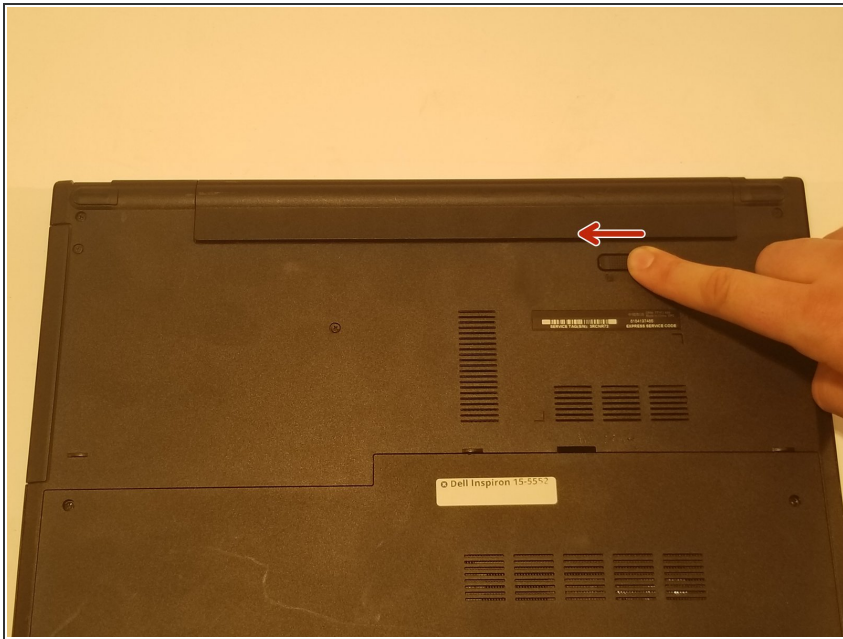

- Slide the battery release switch away from the lock symbol towards the “unlock” position. A click sound will let you know it has unlocked.

### Step 4

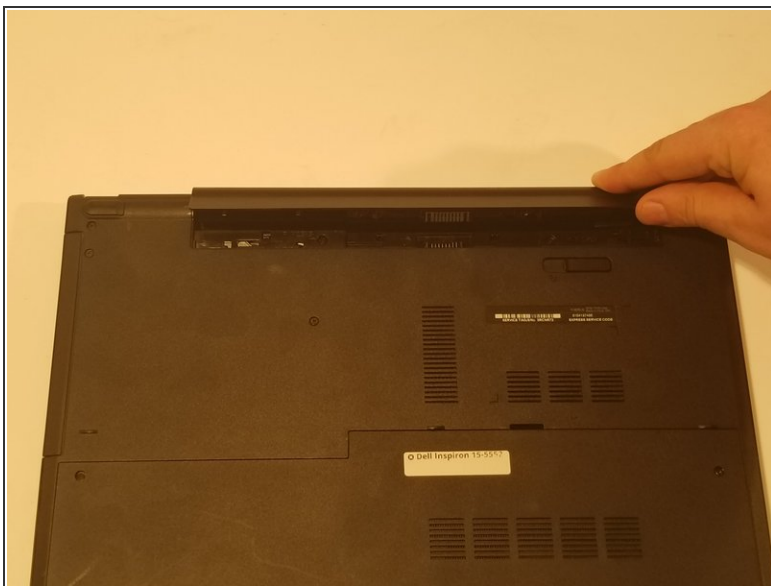

- The battery will rotate outward by lifting the bottom lip that pops out, and rotating it towards the top of the laptop until the battery comes free from the laptop.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-16 07:35:28 PM (MST).

