



# HP 15-ac121dx Battery Replacement

This guide walks through the removal and replacement of a Battery on a HP 15ac121dx.

Written By: Jack Causey



## INTRODUCTION

This guide walks through the removal of a HP 15ac121dx battery.

## Step 1 — Battery



- Remove all external devices from the computer.
- Remove the charging cord from the computer.

## Step 2



- Turn off the computer by holding the power button.

### Step 3



- To remove the battery, slide the left slider on the back to the unlocked position.

### Step 4



- Push the right slider inwards.
- Remove the battery out by pulling straight out and to the right.

Replace Battery and reassemble your device by following the above instructions in reverse order.

This document was last generated on 2019-07-20 02:45:08 AM.