



# HP 15-ac121dx Battery Replacement

This guide walks through the removal and replacement of a Battery on a HP 15ac121dx.

Written By: Jack Causey



## INTRODUCTION

This guide walks through the removal of a HP 15ac121dx battery.

## Step 1 — Battery



 
- Remove all external devices from the computer.
- Remove the charging cord from the computer.

## Step 2




- Turn off the computer by holding the power button.

### Step 3

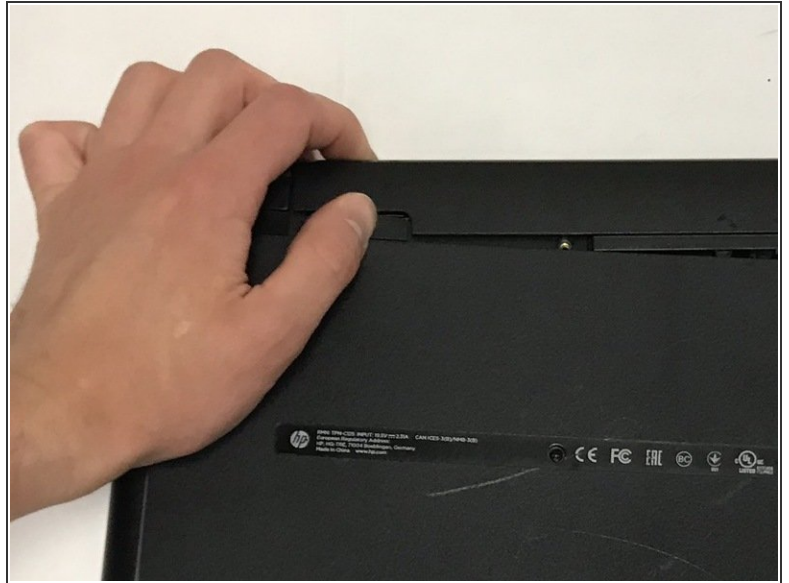

- To remove the battery, slide the left slider on the back to the unlocked position.

### Step 4

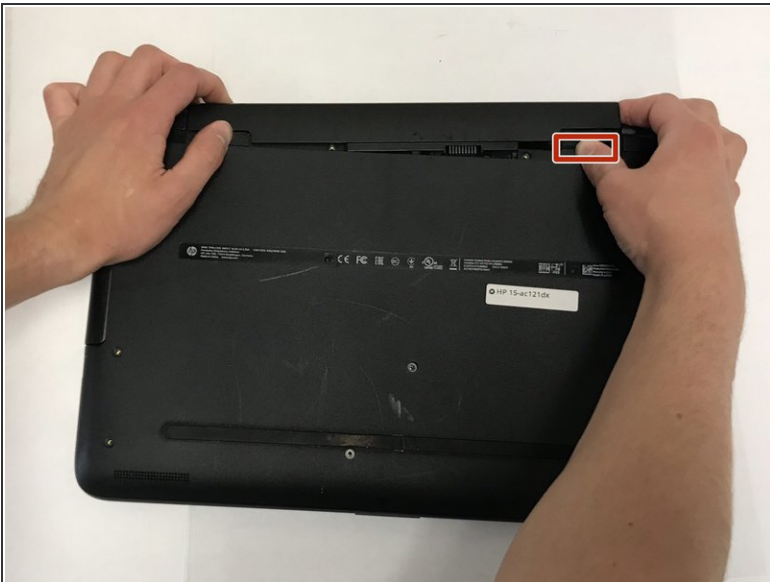 

- Push the right slider inwards.
- Remove the battery out by pulling straight out and to the right.

Replace Battery and reassemble your device by following the above instructions in reverse order.