



# Acer Aspire V5-122P-0468 Battery Replacement

Replace your faulty or dying battery in your Acer Aspire V5-122P-0468 laptop.

Written By: Nat McCormick



---

## INTRODUCTION

If your battery will not charge fully, drains quickly, or shows inconsistent battery percentage this would be a good replacement. Prior to starting this guide, disconnect the power supply from the laptop.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Anti-Static Wrist Strap](#) (1)
-

## Step 1 — Battery



- Remove the nine 4mm screws with a PH0 screwdriver.
- Remove the two 6mm screws with a PH0 screwdriver.

## Step 2



- Remove the black rubber tab on the back of the computer
- Remove the 4mm screw hidden underneath the black tab with a PH0 screwdriver.

### Step 3




- Orient the computer upside down, with the hinges facing away from you.
- Find the black plastic piece in the SD card slot on the right side of the computer.
- Remove the plastic piece by sliding it out of the SD card slot.

### Step 4



- Insert a spudger at these eight locations to disengage the plastic tabs from the housing cover, and pry apart.
  - Continue around the entire perimeter of the cover with the spudger.
- ⓘ Use a spudger to pry the cover around I/O ports.

## Step 5

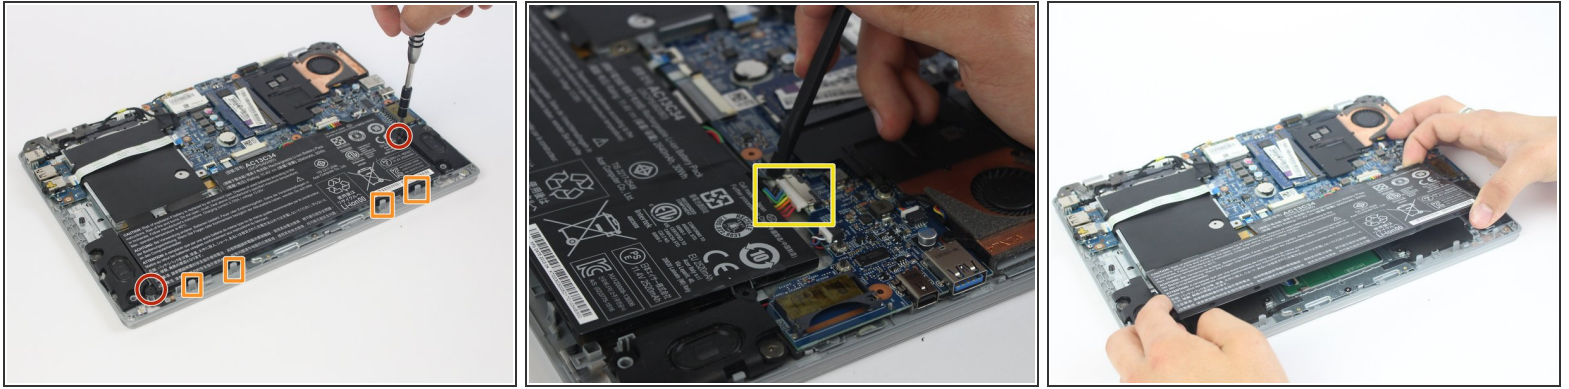

- Remove the two 4mm screws using a PH0 screwdriver.
- Depress the tabs holding the battery with a spudger.
- Disconnect the battery connector from the motherboard using a spudger.
- Pull the battery up and away from the laptop to remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-15 03:12:29 PM.