




# Dell Alienware 15 R2 Memory Modules Replacement

Written By: Terrence15

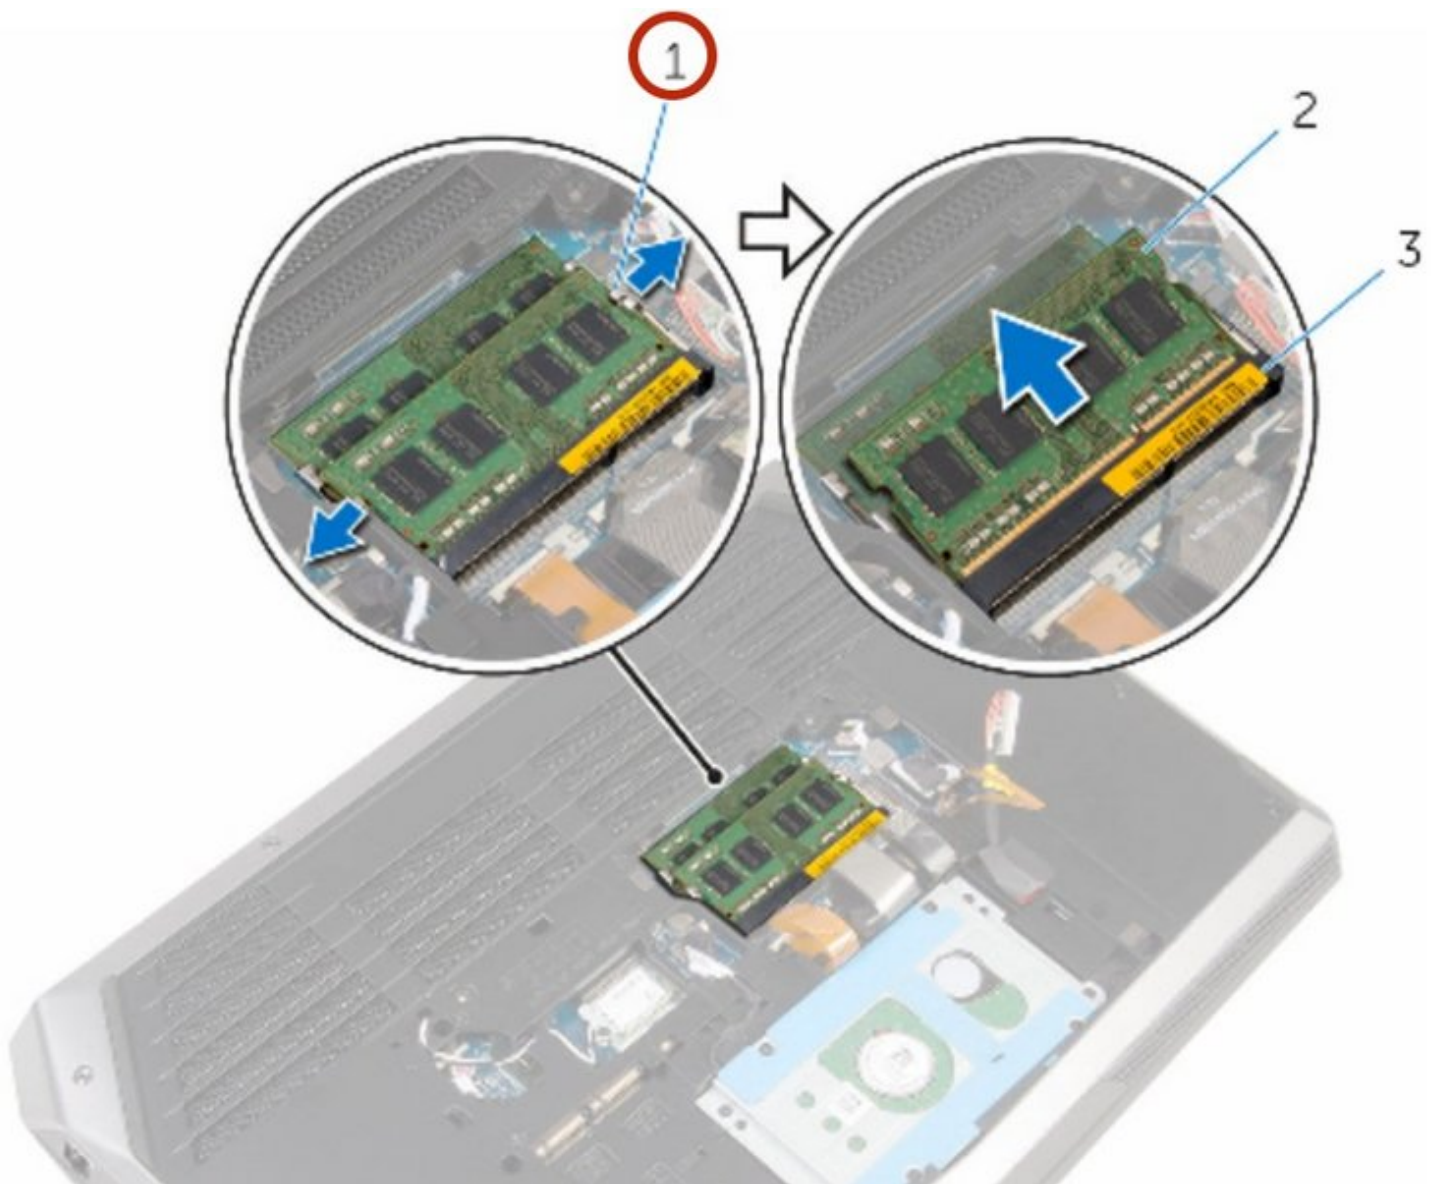

---

## INTRODUCTION


In this guide, we will show you how to remove and replace the Memory Modules.

---

### TOOLS:

- [Pro Tech Toolkit](#) (1)
-


## Step 1 — Popping up the Memory Module

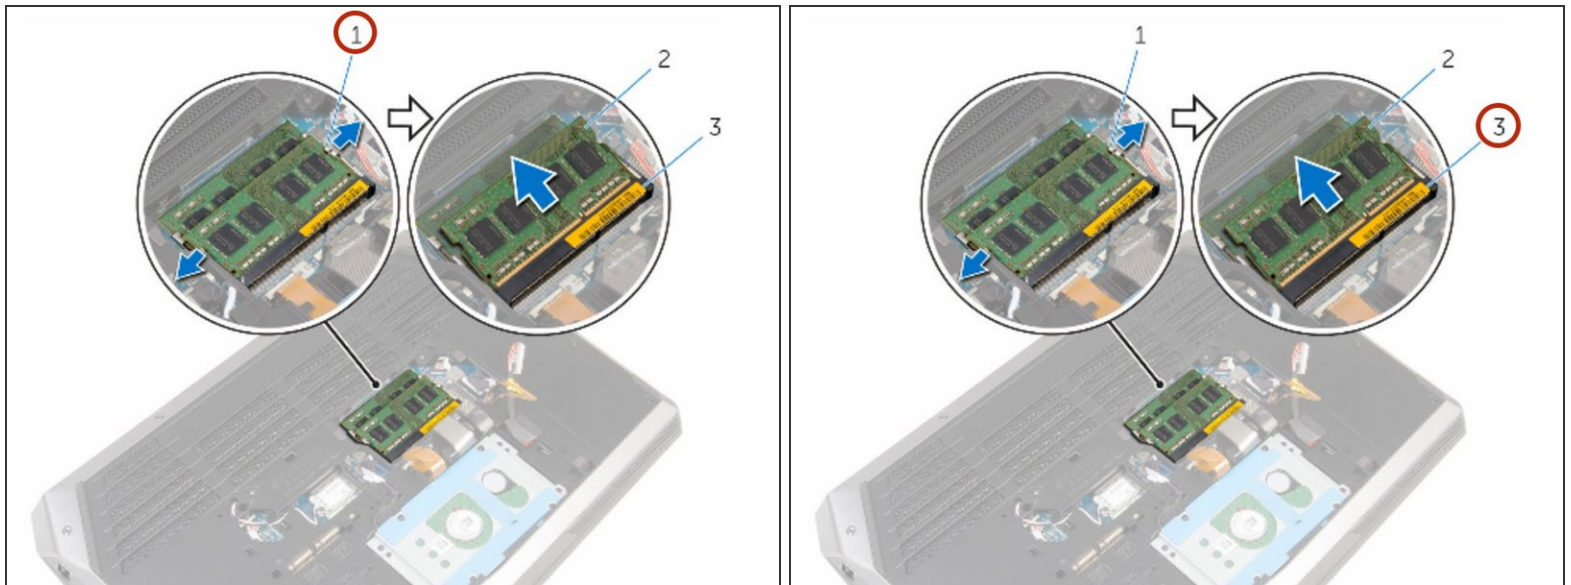

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Using your fingertips, carefully spread apart the securing clips on each end of the memory-module slot until the memory module pops up.

## Step 2 — Remove the Memory Module

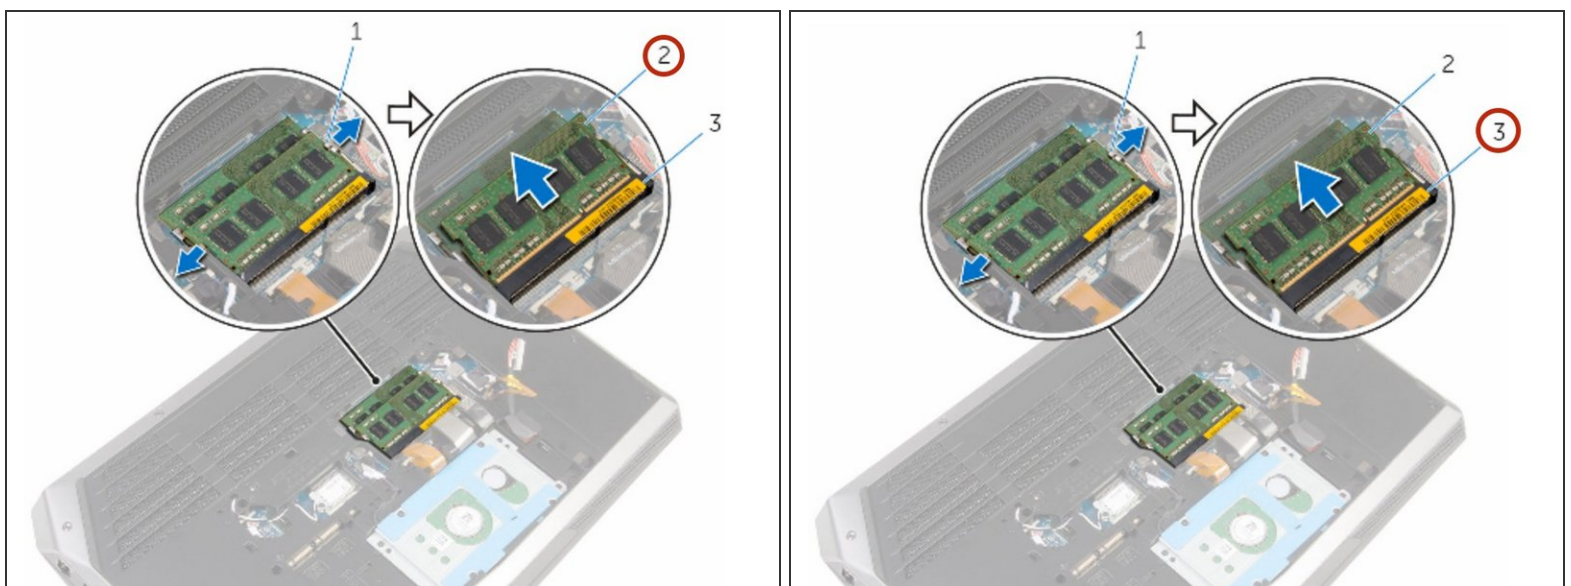


- Slide and remove the memory module from the memory-module slot.

### Step 3 — Align the Notch

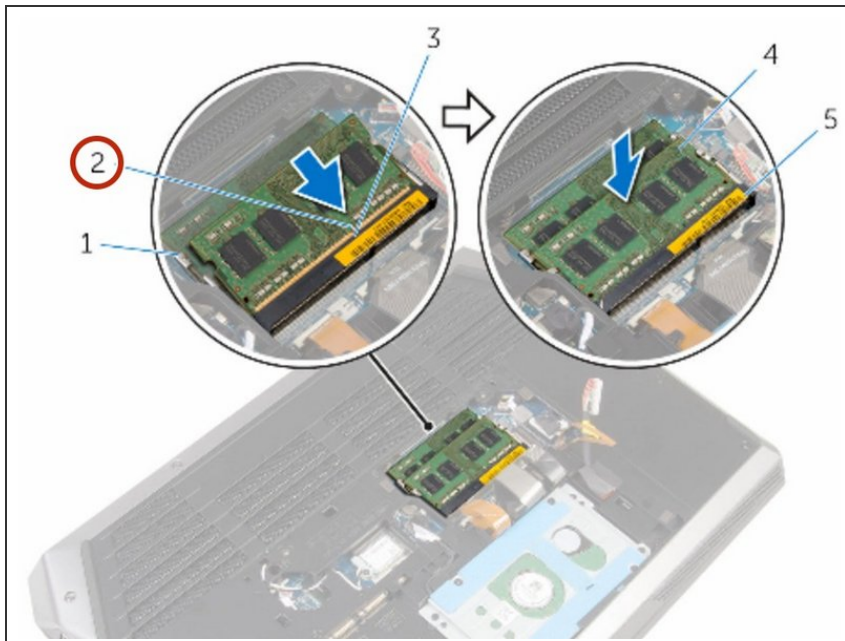

- Align the notch on the **NEW** memory module with the tab on the memory-module slot.

### Step 4 — Sliding the Memory Module

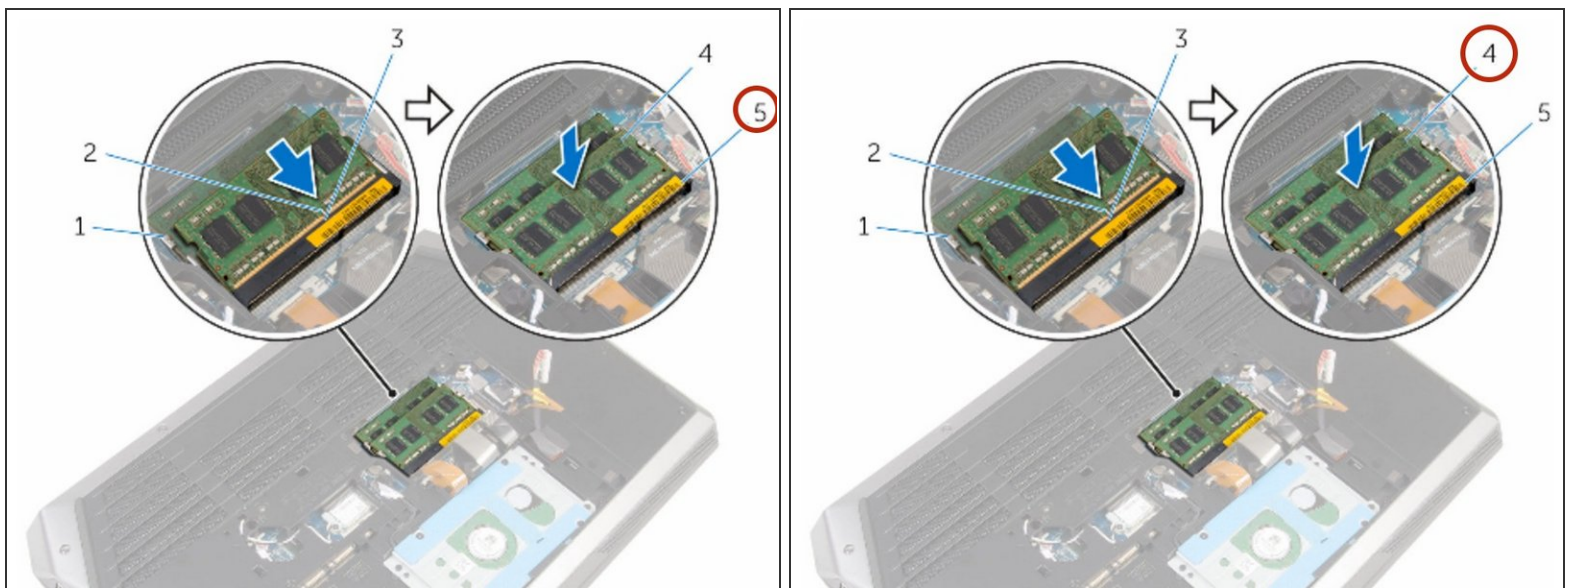

- Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.

**i** NOTE: If you do not hear the click, remove the memory module and reinstall it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-20 10:23:25 PM.