



# Dell Inspiron 11-3164 Screen Replacement

This guide will allow you to replace the screen in your Dell Inspiron 11 3162/3164 laptop.

Written By: Michael Kendziora



**TOOLS:**

- [JIS #1](#) (1)

**PARTS:**


- [Dell Inspiron 11 screen](#) (1)

## Step 1 — Screen



- Lay the laptop flat with its bottom up exposing the screws holding it together. Unscrew these eight screws with a JIS #1 screwdriver and put them aside.
- Use your screw driver to pry off the plastic cover exposing the last screw in the middle.
- Remove the screw and save the plastic cover to put back on later when done.

## Step 2

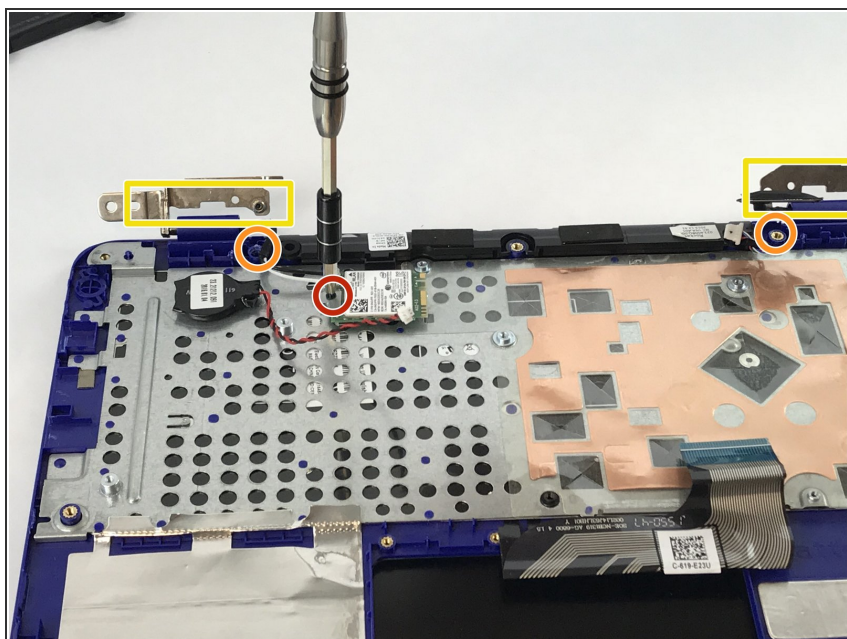

- Remove this one screw with the JIS #1 screwdriver in order to take off the holding plate for the wifi card adapter. Then remove the adapter.
- Unscrew these two screws with a JIS#1 screwdriver.
- Peel back the two metal brackets to remove the screen.

To reassemble your device, follow these instructions in reverse order.