


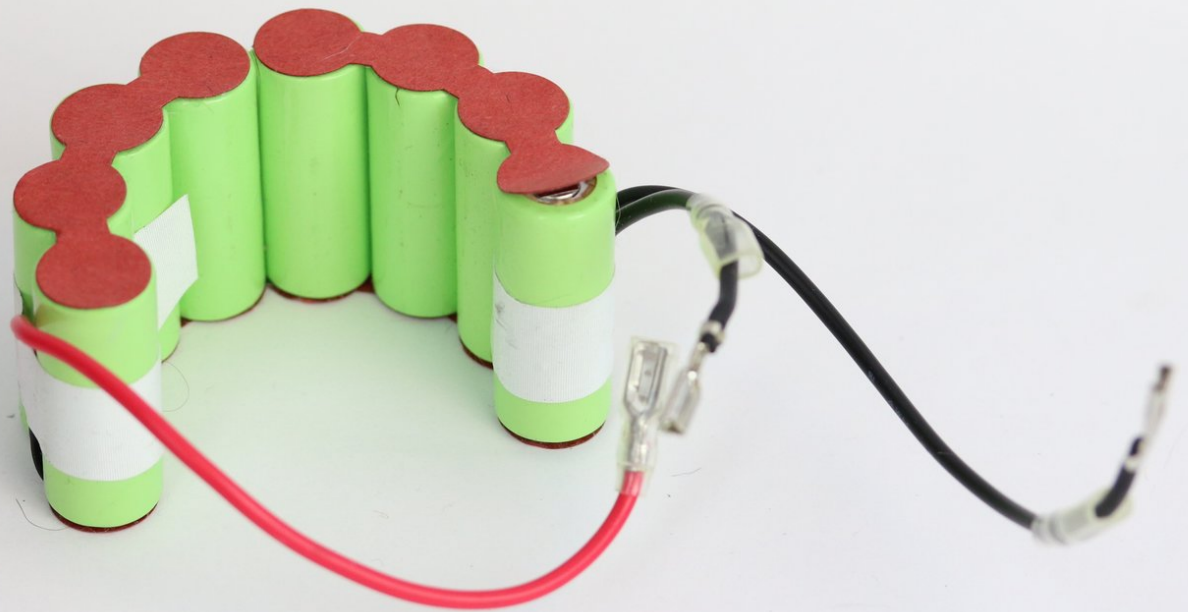

Insignia NS-VCS14SL7 Battery Replacement

Use this guide to troubleshoot and replace the Insignia NS-VCS14SL7 battery.

Written By: Trevor Rau



INTRODUCTION

The Insignia 2-in-1 Handheld/Stick vacuum, over time, will lose its ability to work for extended amounts of time. Use this guide to access the battery for replacement and troubleshooting.

TOOLS:


- [Phillips #2 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery





- Push down the black button to release the dust cup.
- Pull the dust cup up and away from handheld portion to remove.

Step 2

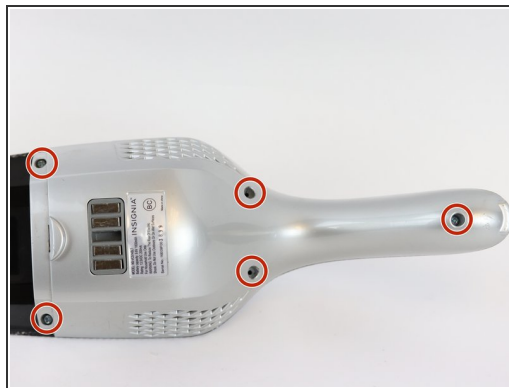


- Remove the five 12.0 mm screws on the back of the handheld portion using the Phillips #2 screwdriver.
- Lift the silver cover off of the black body of the handheld portion to expose the battery and wiring.

Step 3

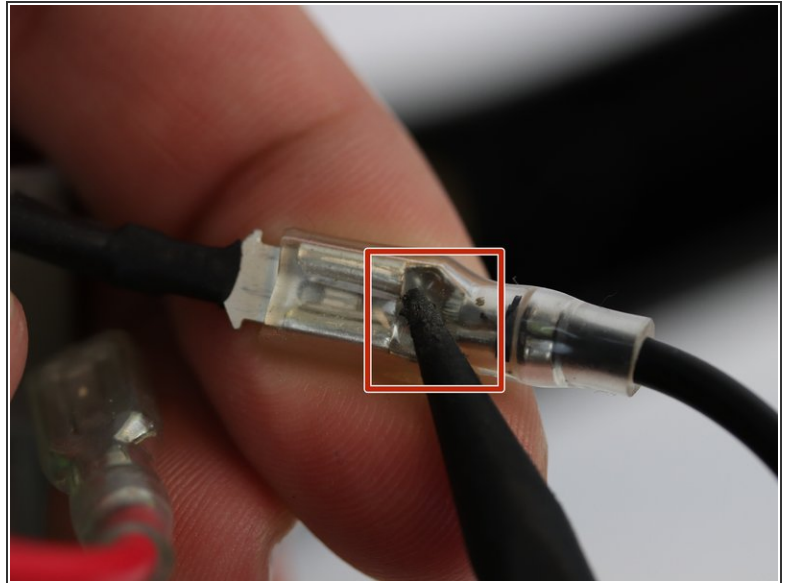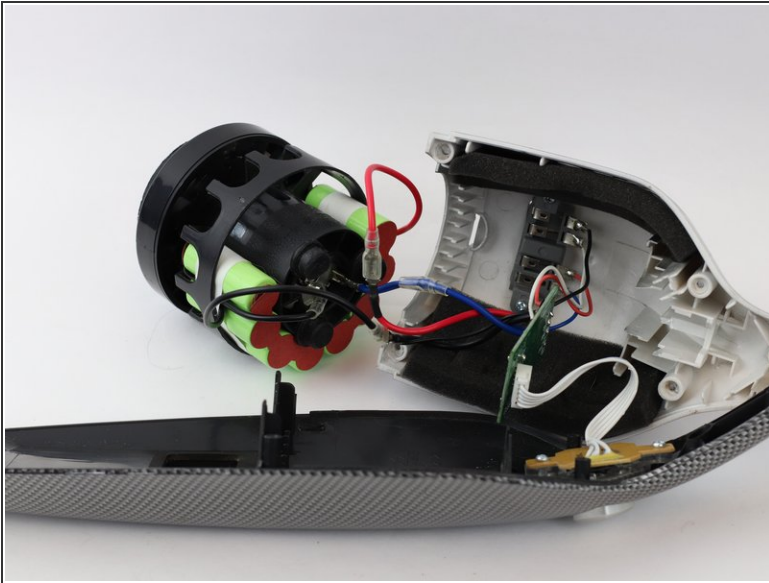

- Pull apart the red and black wires.
- Do so for all of the wires. (Red x1, Black x2)

Step 4

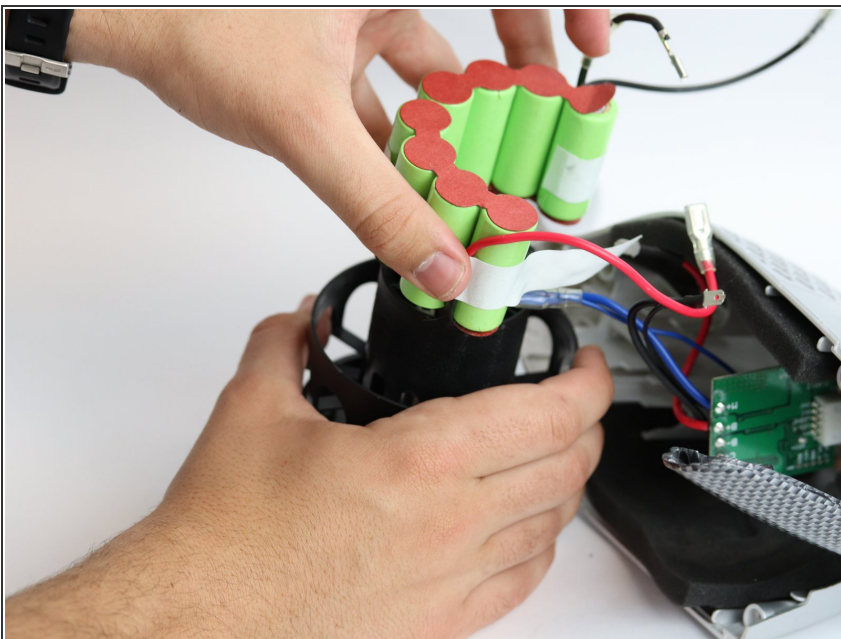

- Remove the tape holding the battery to the black housing.
- Slide the entire battery bundle out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-23 04:13:36 AM.