



# Cuisinart DCC-1100 Heating Element Replacement

This guide will instruct you about how to replace the Cuisinart DCC-1100 Heating Element.

Written By: Tanvirul Arafin



---

## INTRODUCTION

In this guide you will learn how to replace the Cuisinart DCC-1100 Heating Element if you are having issues with the device heating up. Please have a replacement heating element ready and potentially extra thermal paste. Also unplug the machine before beginning work.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Heating Element



- Remove the coffee pot and unplug the maker.
- Flip the coffee maker over so that way the bottom is facing you.

## Step 2



- Remove the five 1.6mm Phillips #1 screws from the bottom.
- Remove the bottom cover.





### Step 3



- Remove the two 1.6mm Phillips #0 screws from the heating element.
- Lift up the heating element and remove the hot plate.

### Step 4

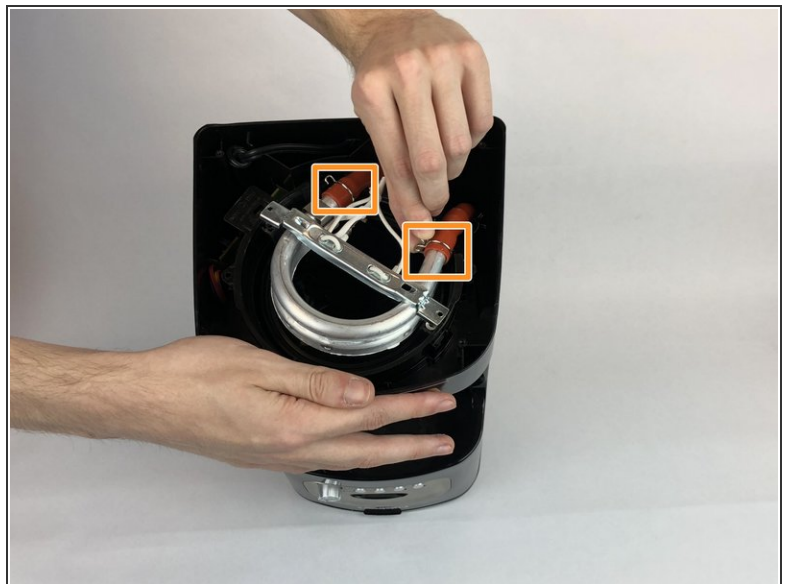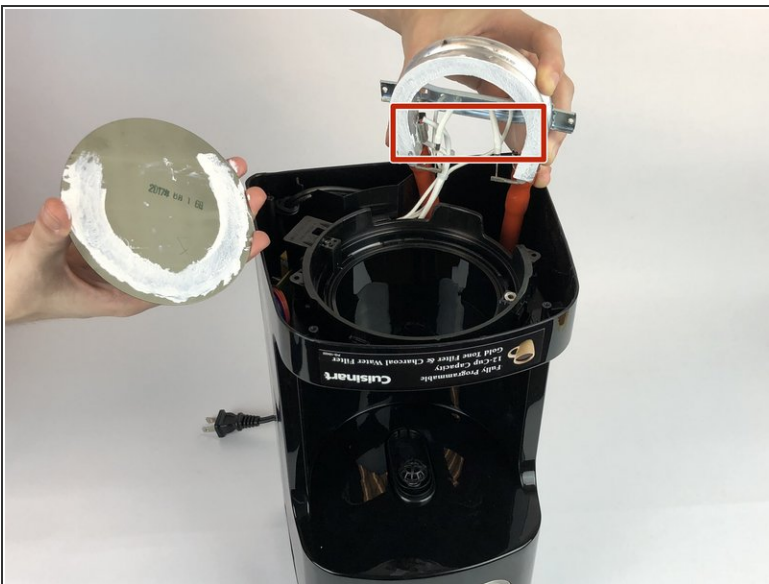

- Disconnect the heating element.
- Pinch the tube clips and remove from tubes from the heating element.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-26 12:04:36 AM.