



HP 15-ac121dx Back Panel Replacement

This is a prerequisite guide on how to remove the back of the laptop.

Written By: Ashton Martin



INTRODUCTION

Use this guide to replace the back panel of your device.

TOOLS:


- [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel



- Locate the CD Compartment panel and gently slide it out.

Step 2

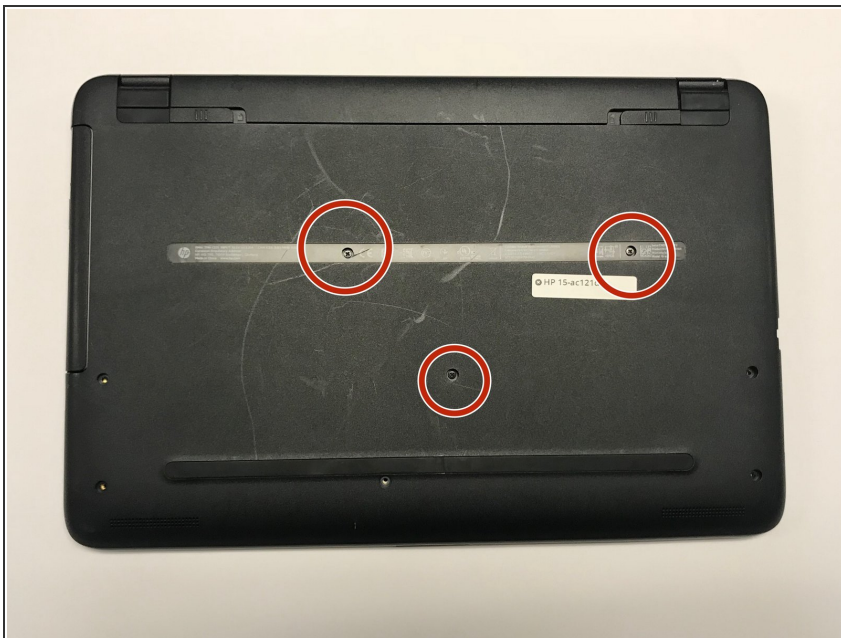

- Remove the back of the laptop by unscrewing the screws shown.
- Also remove the other 5 Phillips screws lining the back cover.

Step 3



- Using the prying tool, wedge it underneath the back of the laptop and do the same all around until the back comes off.
- Dont forget to unscrew 2 screws under 2 plastic tabs (one on each hinge). The lid will not come off without them being removed!

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-03-12 12:53:47 PM.