




# Dell Alienware 18 Base Cover Replacement

Written By: darrius

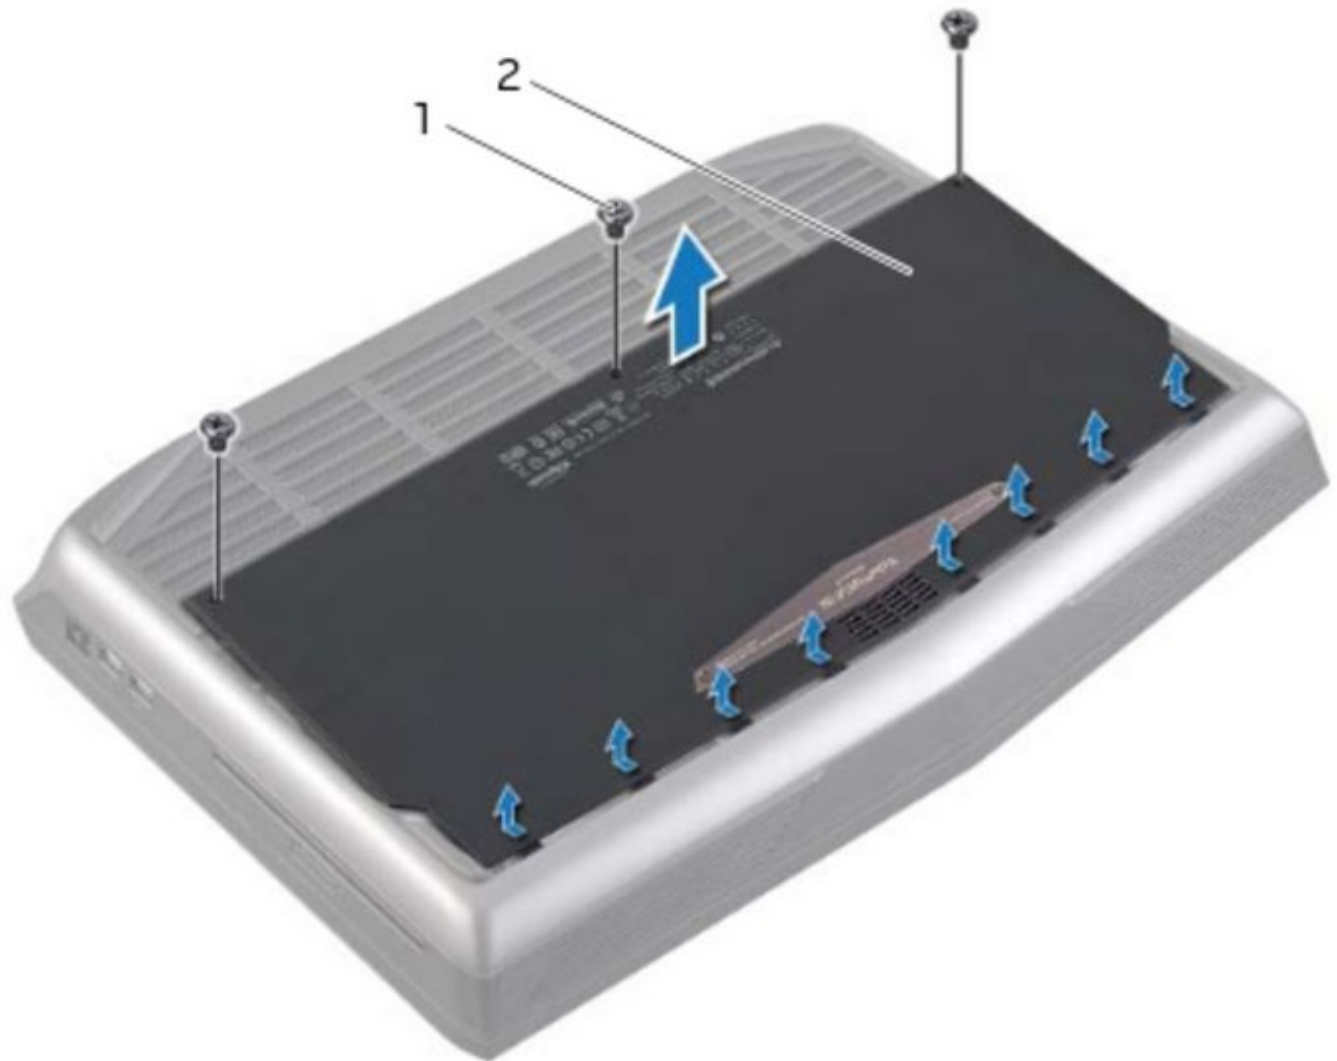

---

## INTRODUCTION

In this guide, we will be showing you how to remove and replace the Base Cover.

---

### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Before You Begin



**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before You Begin](#).

## Step 2 — Removing the Screws

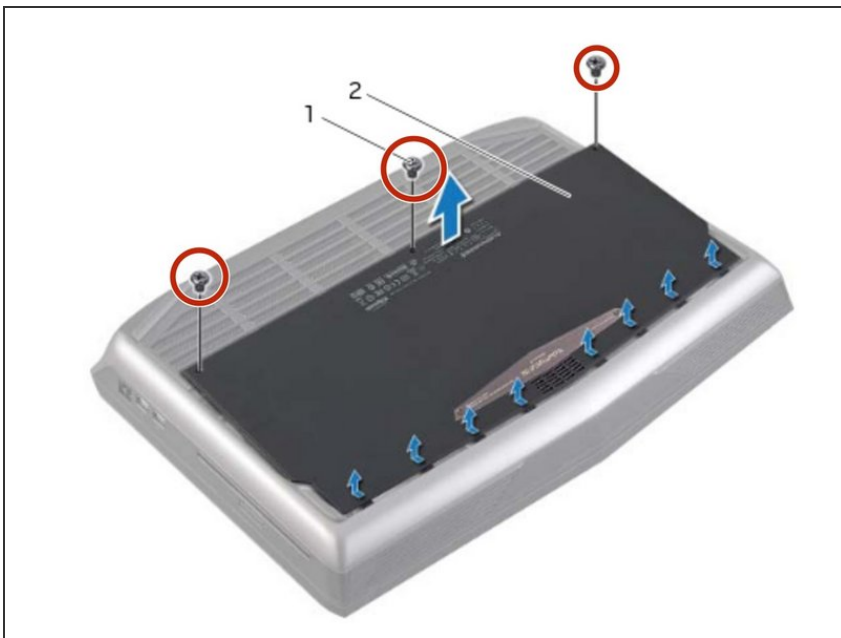

- Remove the screws that secure the base cover to the computer base.

### Step 3 — Slide the Cover




- Slide the base cover towards the rear of the computer and lift it off the computer base.

### Step 4 — Replacing the Base Cover



- Align the tabs on the **NEW** base cover with the slots on the computer base and slide the base cover into place.

## Step 5 — Replacing the Base Cover

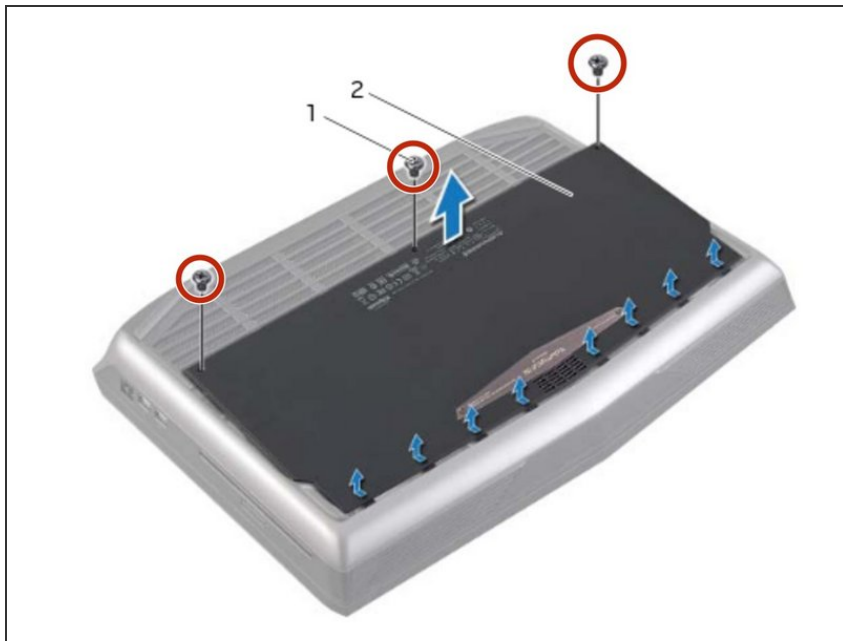

- Replace the screws that secure the base cover to the computer base.

This document was last generated on 2019-08-25 01:03:17 PM.