



# Toshiba Satellite C55-B5200 RAM Replacement

How to replace the RAM on a Toshiba Satellite C55-B5200 laptop.

Written By: Pablo Andrade



---

## INTRODUCTION


How to replace the RAM on a Toshiba Satellite C55-B5200 laptop.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery

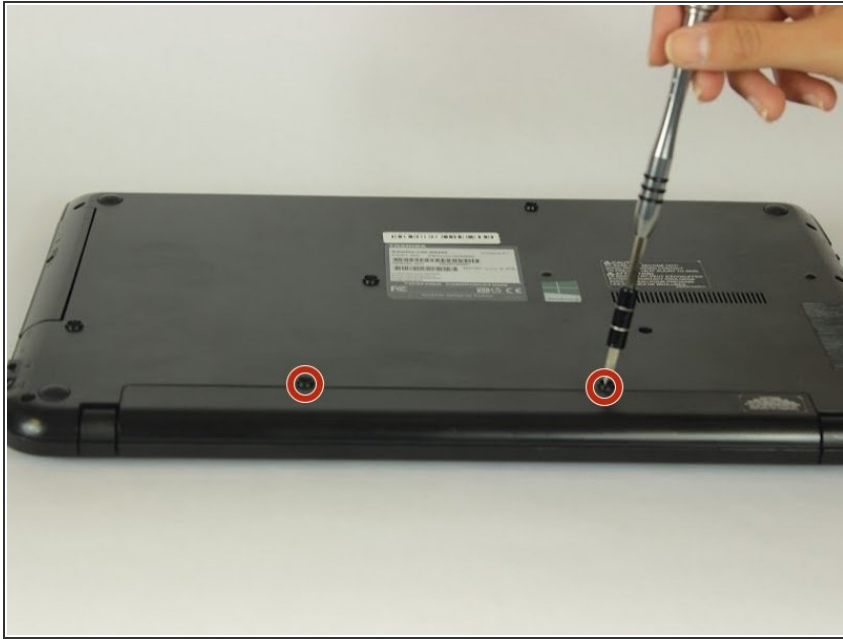


- Turn the laptop off and remove all sources of power.
- Flip the laptop over so that way the bottom is facing towards you.
- Remove the two 6.6mm Phillips #0 screws from the battery.

## Step 2




- Pull the battery out of the laptop.

### Step 3 — RAM

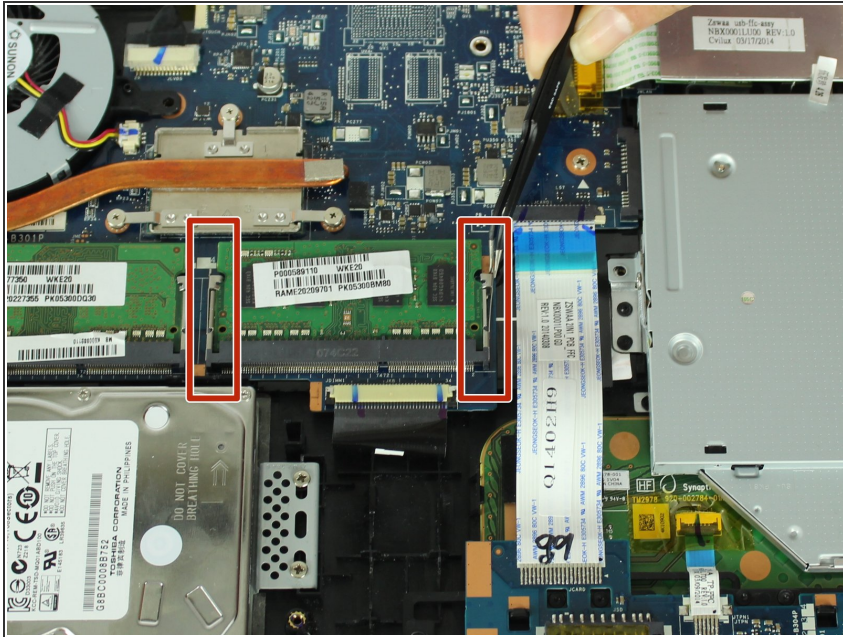

- Flex the metal retaining clips on the side of the RAM away from one another.
- ⓘ If done correctly, the RAM will pop out of its lock.

### Step 4

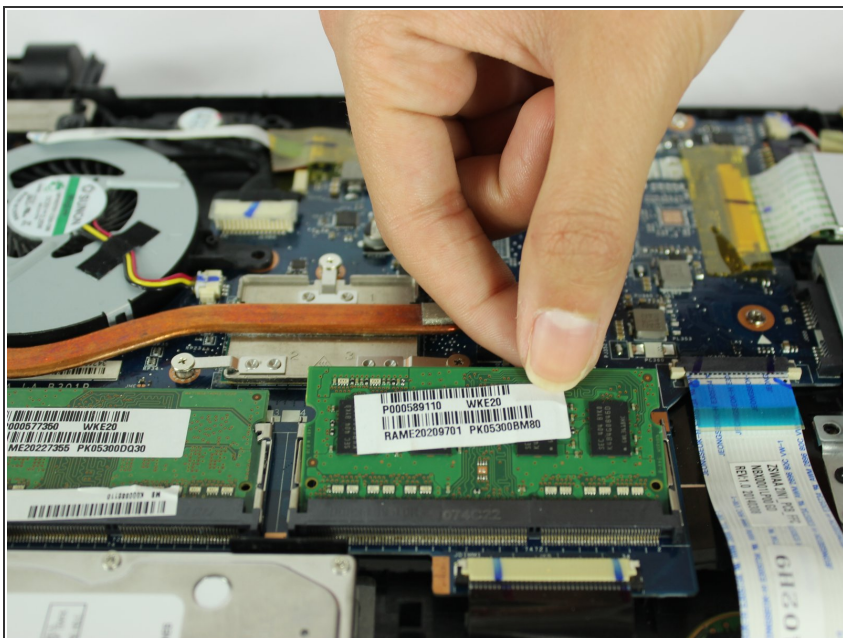

- Pull the RAM out of the socket to remove.

To reassemble your device, follow these instructions in reverse order.