




PowerBook G4 Aluminum 17" 1.67 GHz (High-Res) Memory Door Replacement

Written By: Andrew Bookholt

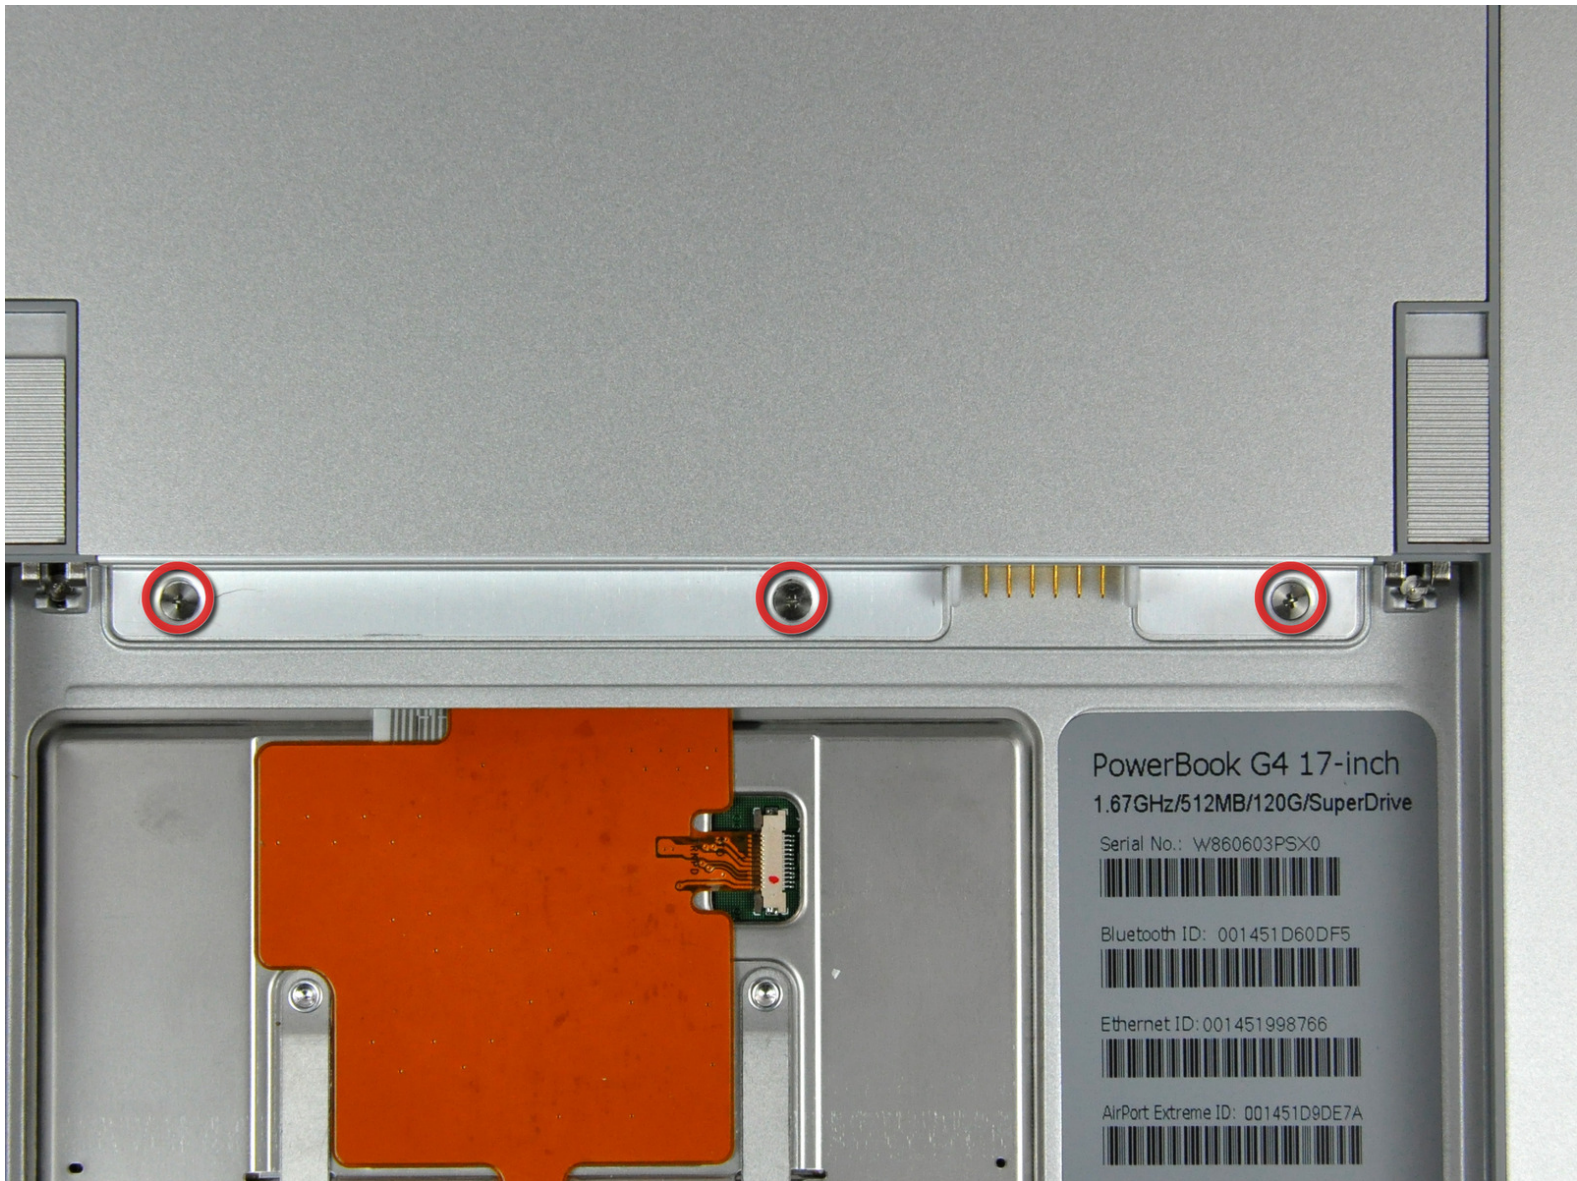

INTRODUCTION

Remove your memory door to access the RAM chips.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)



PARTS:


- [G4 Aluminum 17" Memory Door](#) (1)
-

Step 1 — Battery

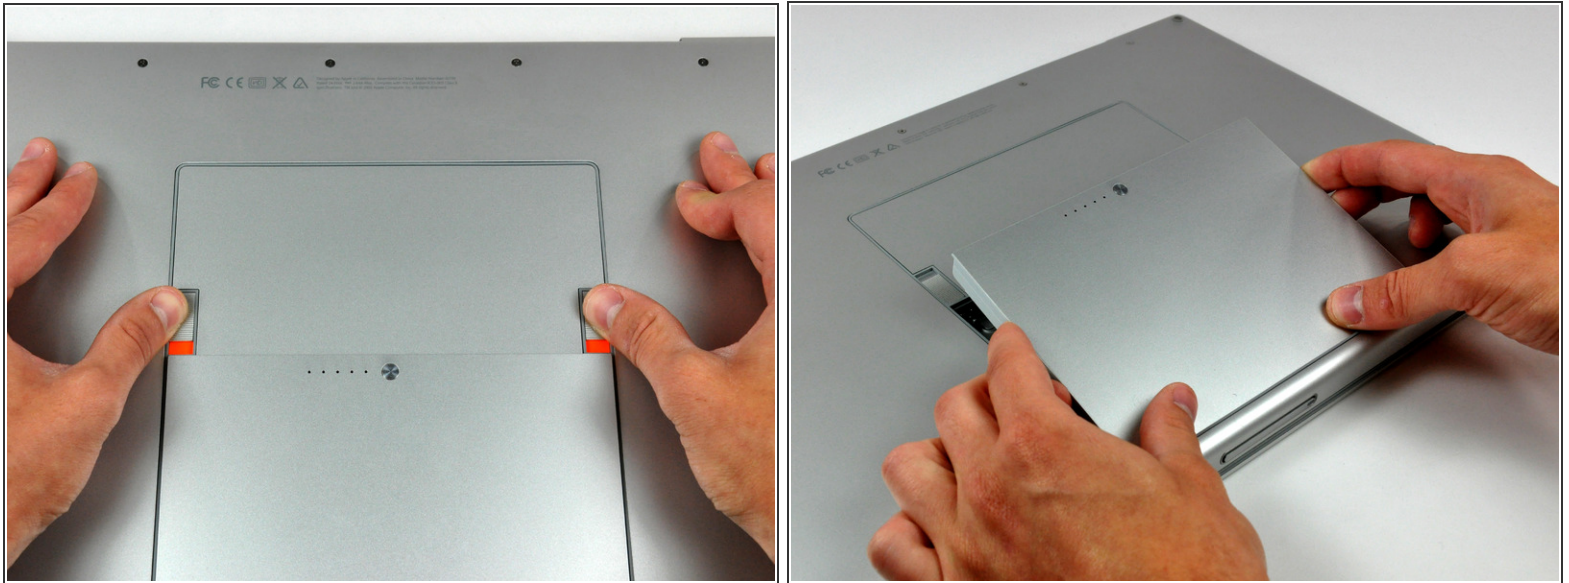


- Use your thumbs to push the two battery retaining tabs away from the battery.
- The battery should pop up enough to rotate it toward yourself and lift it out of the lower case.

Step 2 — Memory Door

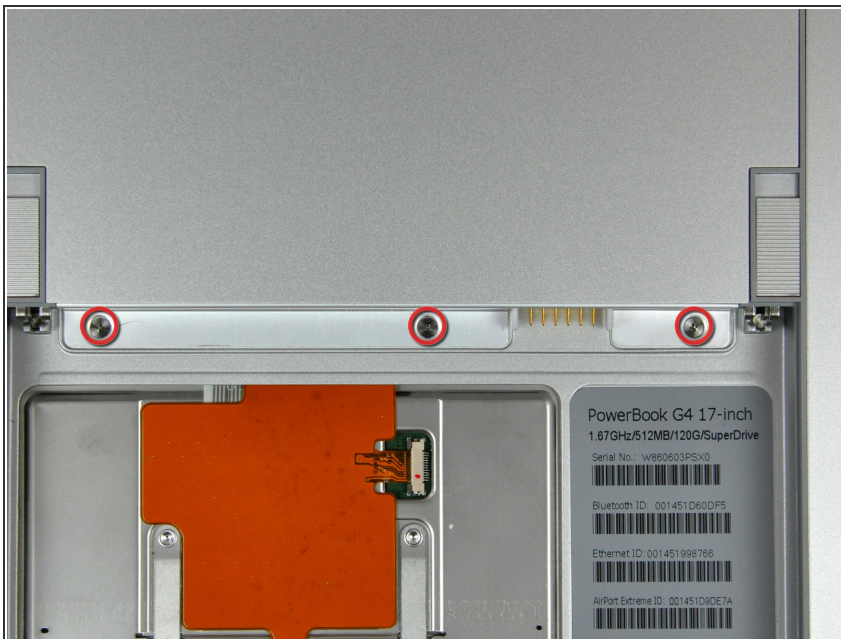

- Remove the three 2.3 mm Phillips screws securing the memory cover to the lower case.

Step 3

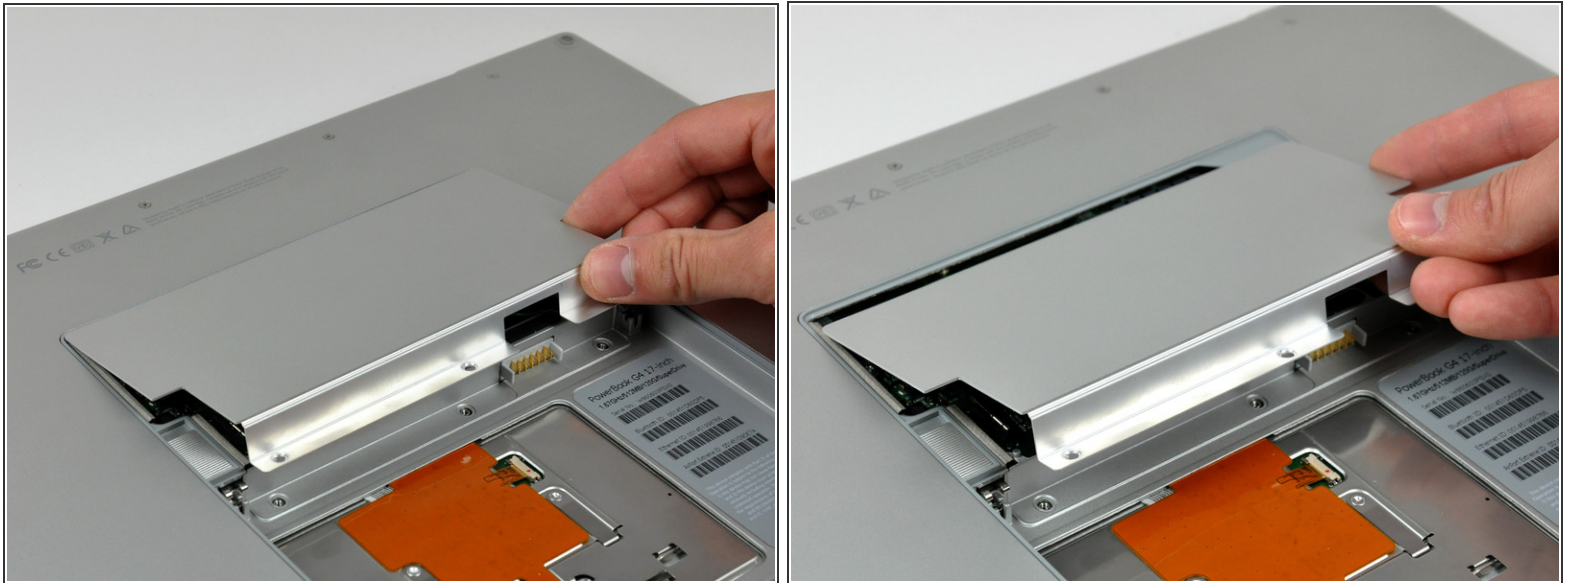

- Lift the memory cover slightly and pull it toward yourself to remove it from the lower case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-09-13 04:12:09 PM.