



Canon PowerShot SD1400 IS User Interface Panel Replacement

Replace your broken or unresponsive button panel in order to use the camera.

Written By: Braxton Beal



INTRODUCTION

The buttons on the user interface panel can become broken or stuck. This guide will show how to replace the user interface panel on the device.

TOOLS:

- [Metal Spudger](#) (1)
- [iFixit Opening Tools](#) (1)
- [64 Bit Driver Kit](#) (1)

PARTS:

- [Canon Powershot SD1400 IS Back Panel Replacement Kit](#) (1)

Step 1 — User Interface Panel



- Remove the 2.0 mm Phillips screws on both sides of the camera using the J00 bit from the 54 bit Driver Kit
- There will be 4 total screws that need to be removed, 2 on each side

Step 2



- Remove the 4.0 mm Phillips screw located on the bottom of the camera

Step 3



- Remove the front face panel of the camera.
- The face can be removed by hand with a firm pressure. If one point of the face is stuck to the body, ensure that there is not a screw remaining at that position to hold it in place.

Step 4



- Remove the rear panel of the camera.
- This can be done by hand without tools using firm pressure

Step 5



- Remove the user interface panel by hand
- The panel may fall out on its own, this is normal.
- Replace the user interface panel by setting it in position.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 09:13:23 AM.