



ASUS X552LAV-BBI5N08 Battery Replacement

This is a battery replacement guide for the ASUS X552LAV-BBI5N08 laptop.

Written By: Jason Vo



INTRODUCTION

This guide will walk you through the process of replacing a dead or dying battery in a ASUS X552LAV-BBI5N08.

Step 1 — Battery



i Battery is not showed in pictures.

- Flip the laptop face down.

Step 2



- Slide the right button to the left.
- Hold the left button to the right.
- While you hold the left button in position, slide the battery out by pushing it away from you.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-06-23 03:21:48 AM.