



# Insignia NS-VCS14SL7 Brush Head Replacement

Use this guide to troubleshoot and replace the Insignia NS-VCS14SL7 vacuum head brush.

Written By: Thibaut Pilot



---

## INTRODUCTION

The Insignia 2-in-1 Handheld/Stick vacuum brush bristles can become worn down from continuous use. The bristles in the head might get damaged and need replacement, or the head might become obstructed with debris. Use this guide to help replace the brush head in the event of imperfect performance.

---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)

## Step 1 — Brush Head



- Unscrew the single 12.0 mm Phillips #2 screw on the right side of the bottom of the vacuum head.
- Lift and pull up on the brush retention clip.
- Pull brush up and out to remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-21 04:13:02 AM.