




# Alienware M11x Memory Module Replacement

Written By: darrius

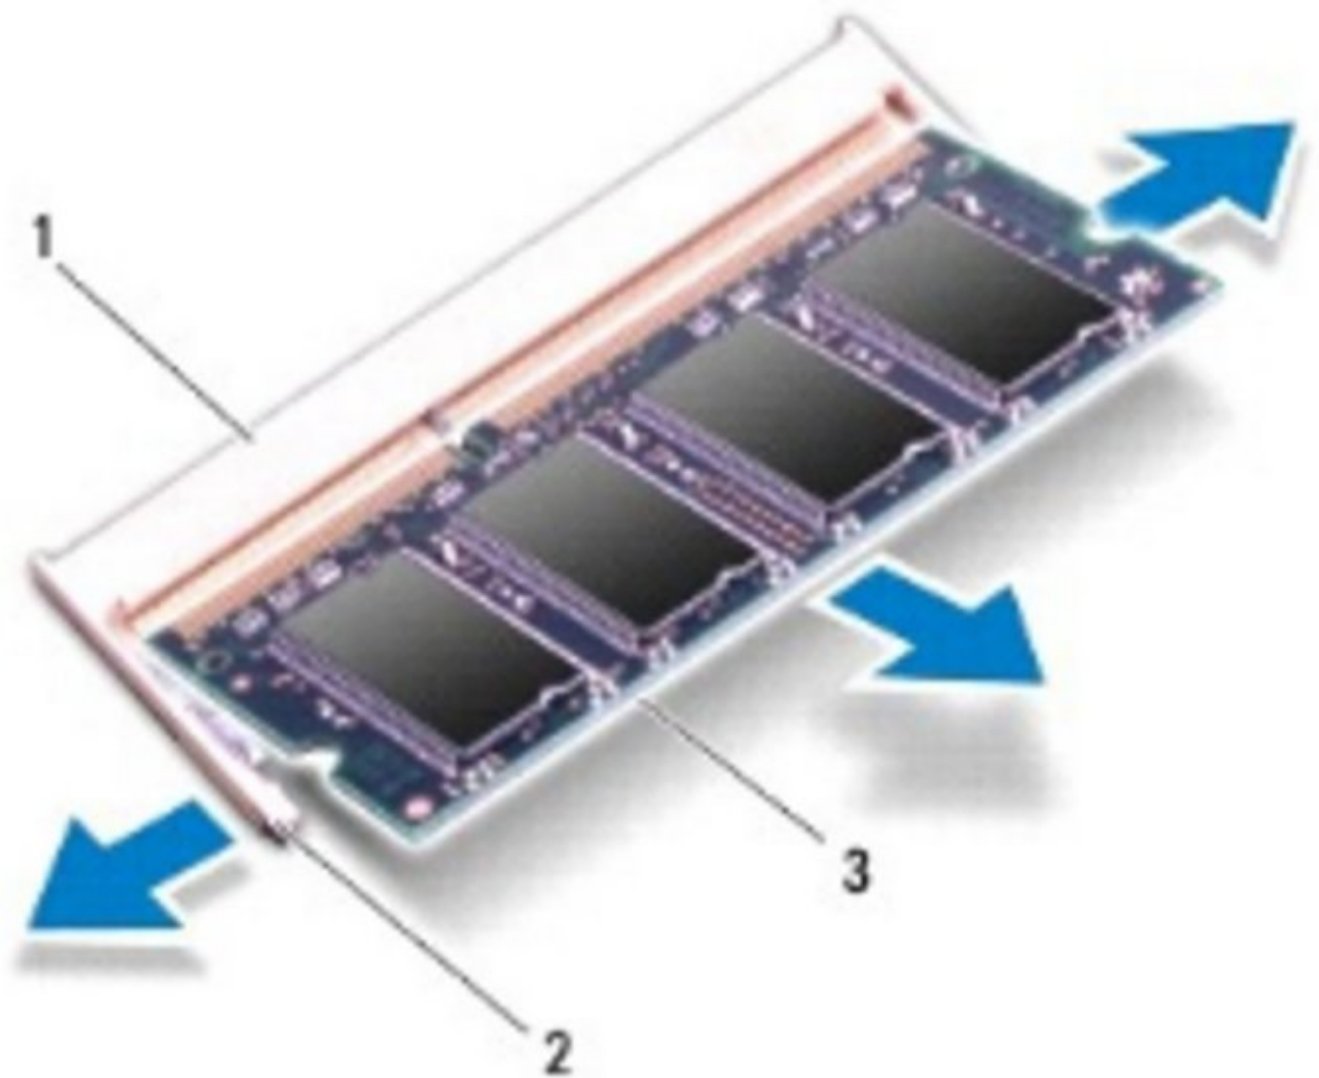

---

## INTRODUCTION


In this guide, we will be showing you how to remove and replace the Memory Module.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


## Step 1 — Introduction

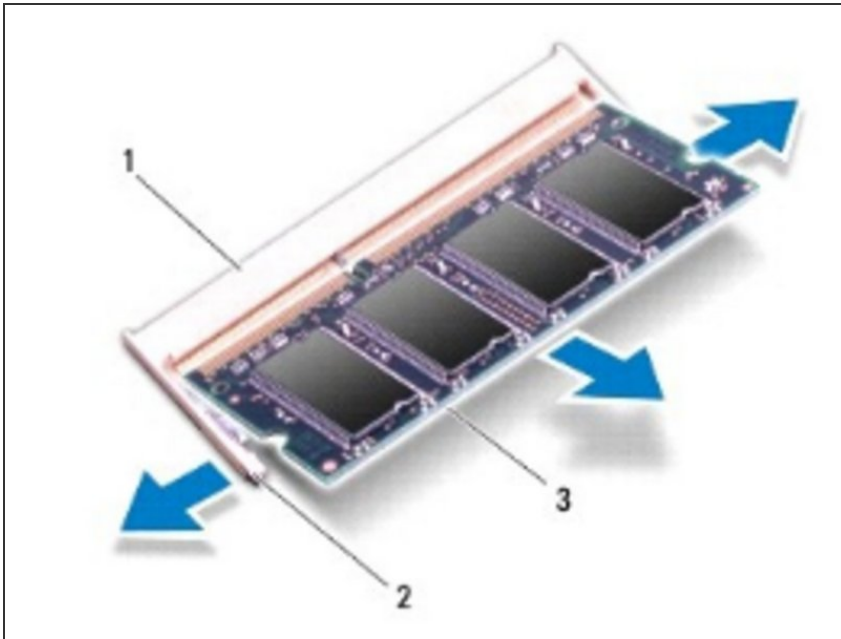

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer.

**⚠ CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


## Step 2 — Removing the Memory Module

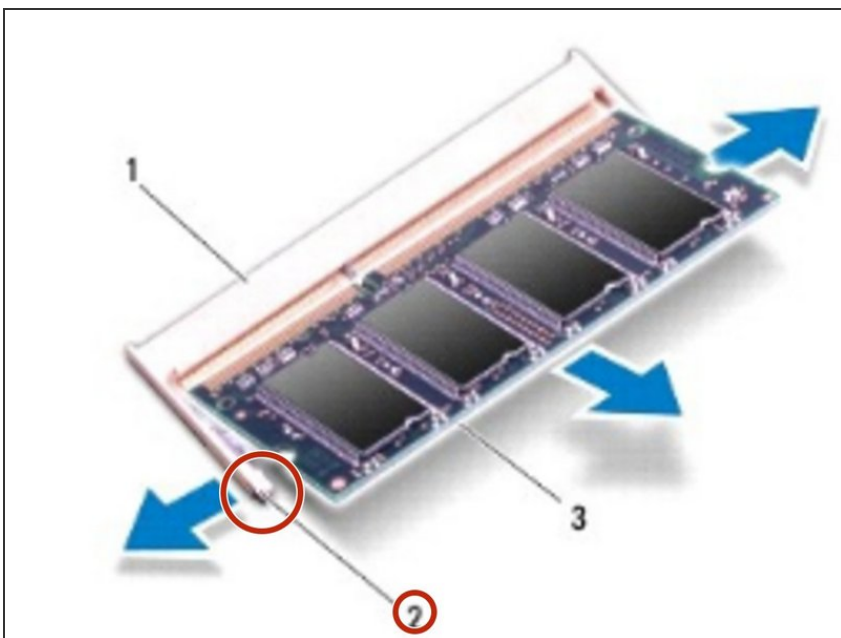

**⚠ CAUTION:** To prevent damage to the memory module connector, do not use tools to spread the memory module securing clips.


- Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the memory module pops up.

### Step 3 — Removing the Memory Module

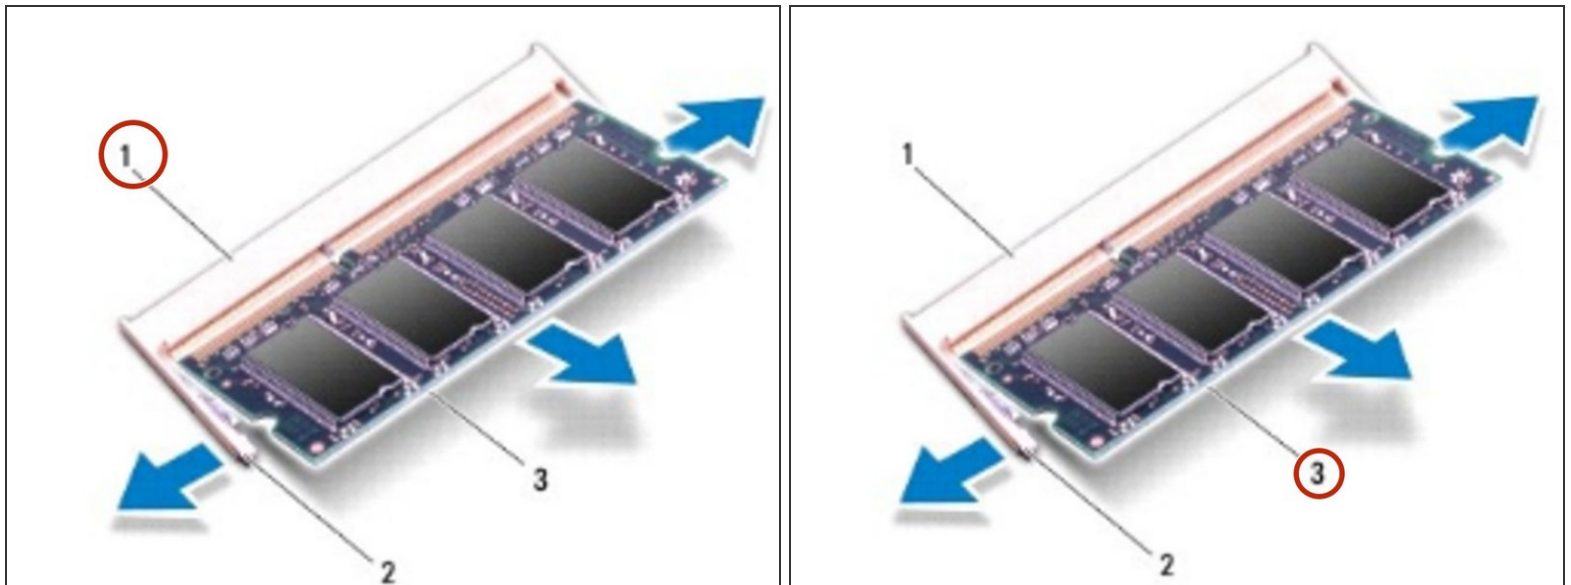

- Remove the memory module from the memory module connector.


### Step 4 — Replacing the Memory Module

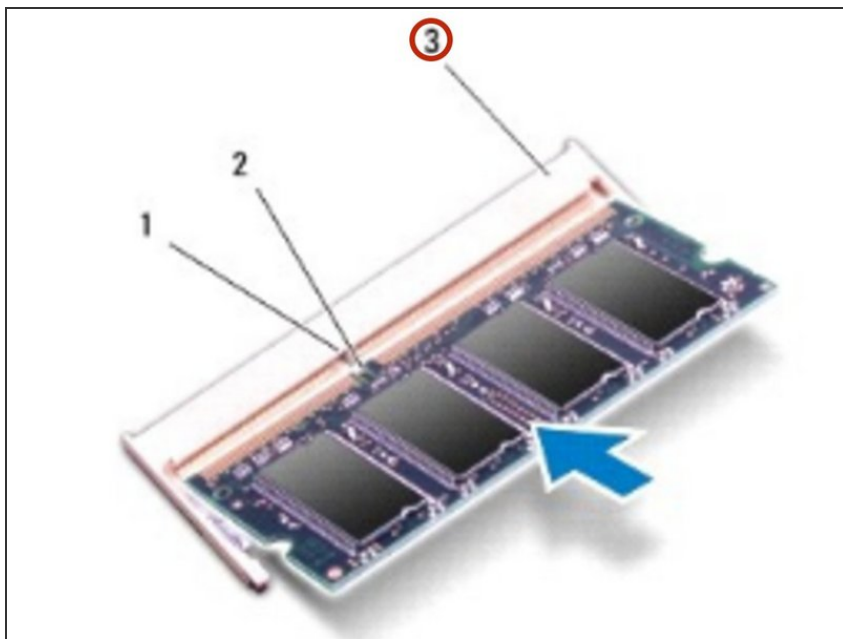

**i** NOTE: If you need to install memory modules in two connectors, install a memory module in the lower connector before you install a module in the upper connector

- Align the notch in the **NEW** memory module with the tab in the memory module connector.

## Step 5 — Installing the Memory Module

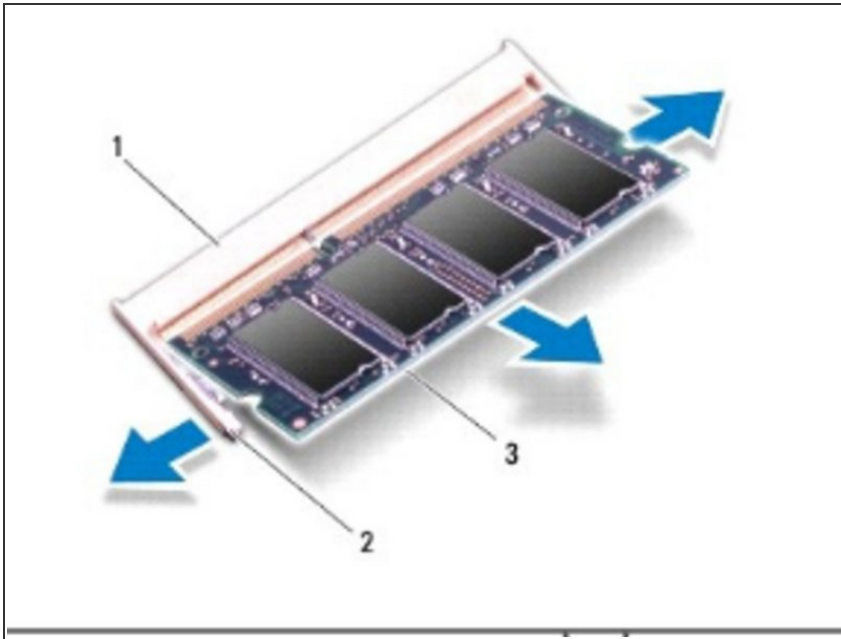

- Slide the memory module firmly into the slot at a 45-degree angle, and press the memory module down until it clicks into place. If you do not hear the click, remove the memory module and reinstall it.
- ⓘ NOTE: If the memory module is not installed properly, the computer may not boot.

This document was last generated on 2019-07-20 05:37:26 PM.