




Alienware M11x Memory Module Replacement

Written By: darrius

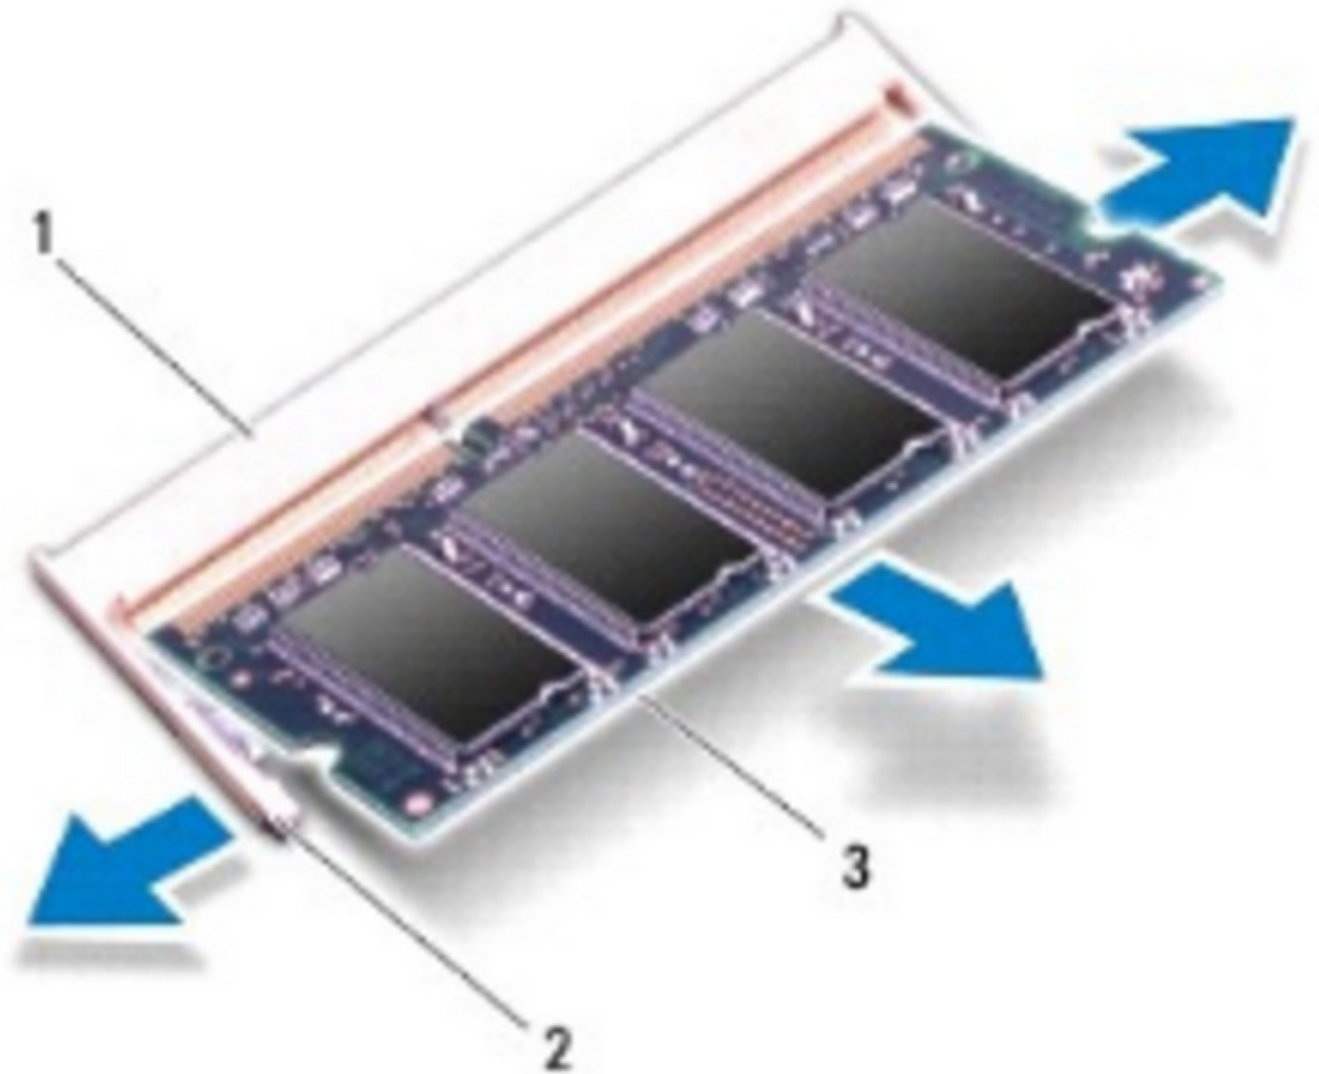


INTRODUCTION

In this guide, we will be showing you how to remove and replace the Memory Module.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Introduction

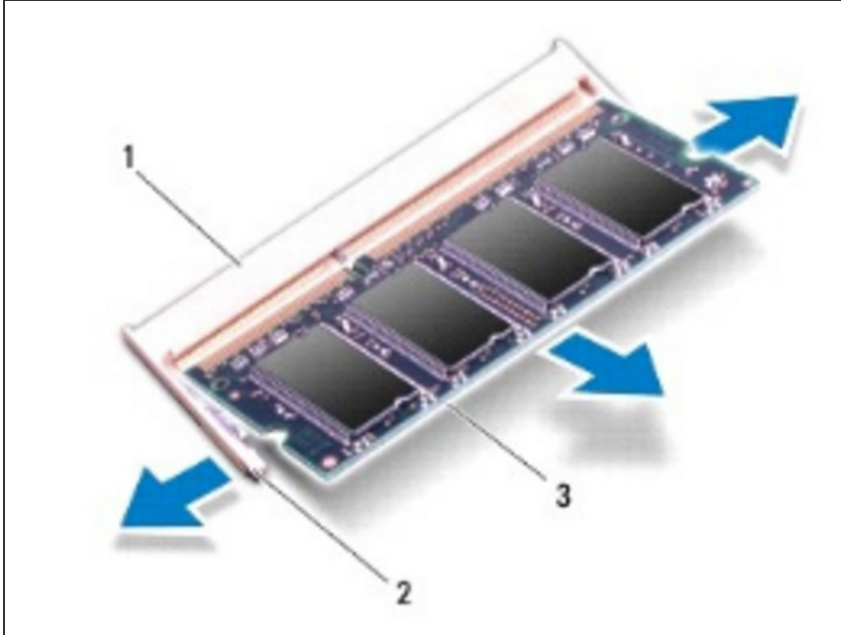

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer.

⚠ CAUTION: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


Step 2 — Removing the Memory Module

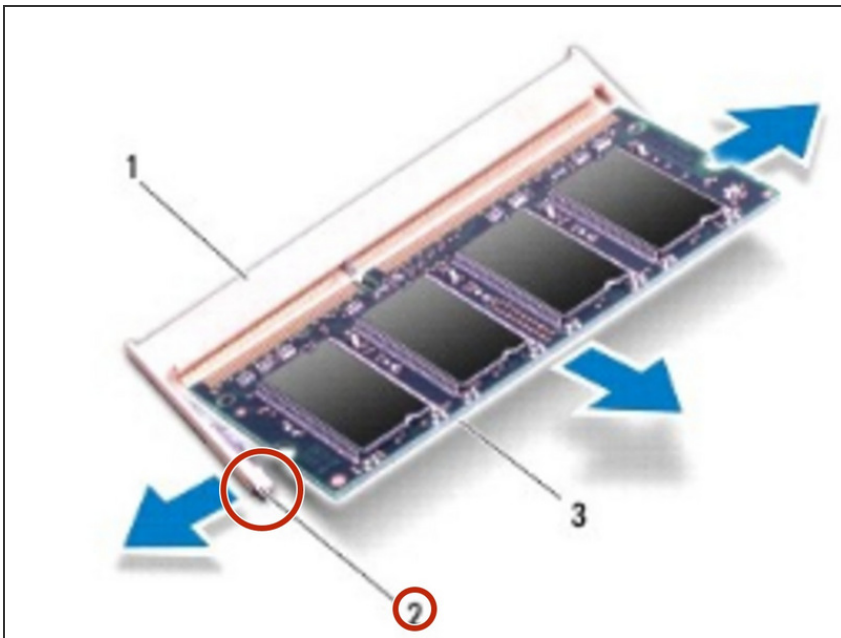

⚠ CAUTION: To prevent damage to the memory module connector, do not use tools to spread the memory module securing clips.


- Use your fingertips to carefully spread apart the securing clips on each end of the memory module connector until the memory module pops up.

Step 3 — Removing the Memory Module

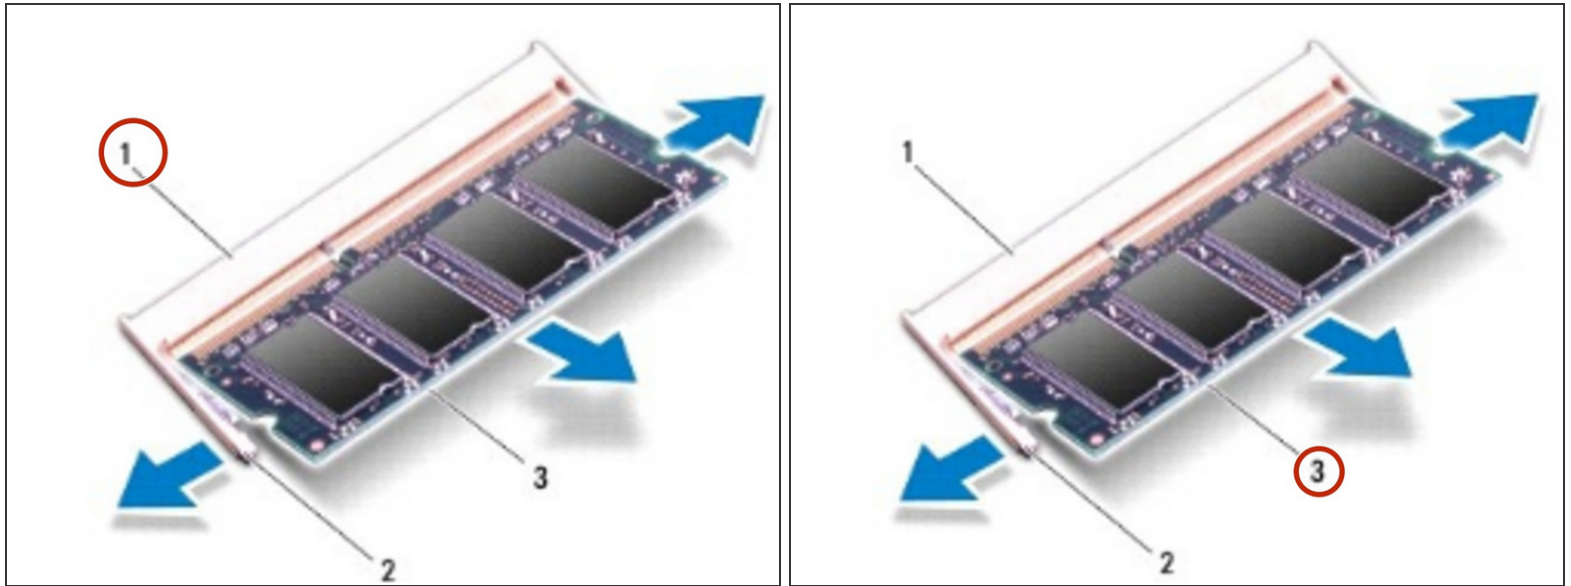

- Remove the memory module from the memory module connector.


Step 4 — Replacing the Memory Module

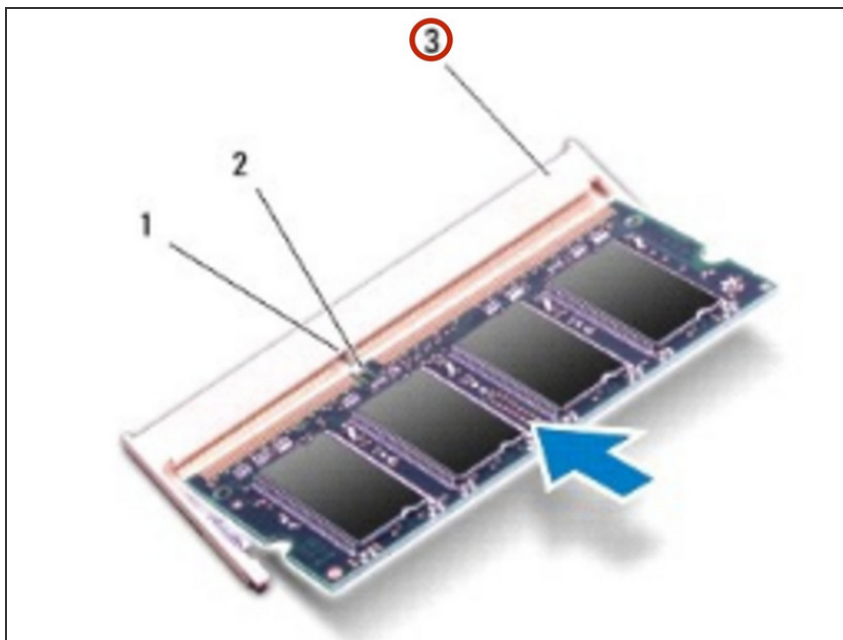

i NOTE: If you need to install memory modules in two connectors, install a memory module in the lower connector before you install a module in the upper connector

- Align the notch in the **NEW** memory module with the tab in the memory module connector.

Step 5 — Installing the Memory Module

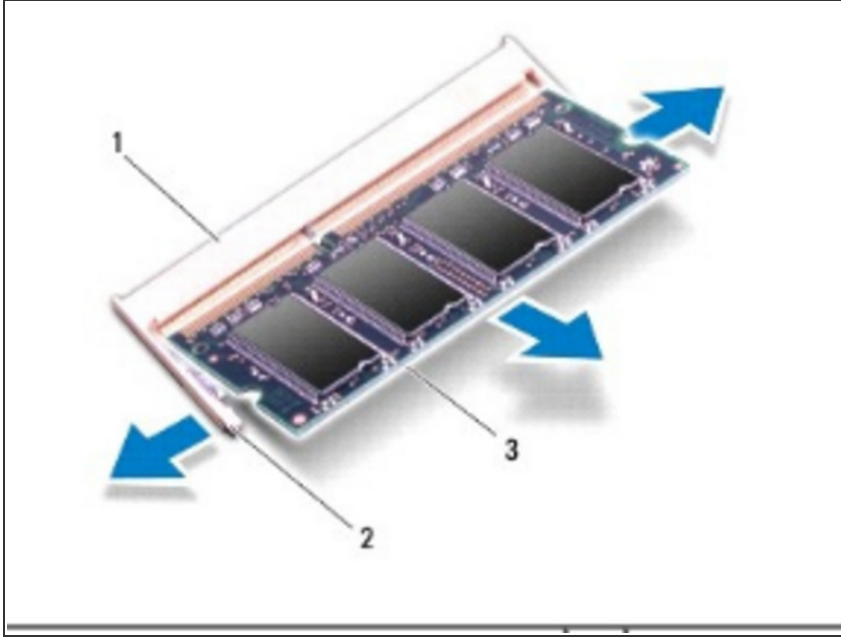

- Slide the memory module firmly into the slot at a 45-degree angle, and press the memory module down until it clicks into place. If you do not hear the click, remove the memory module and reinstall it.

ⓘ NOTE: If the memory module is not installed properly, the computer may not boot.

This document was last generated on 2018-06-17 05:41:34 AM.