



# Asus R510LA-RS71 RAM Replacement

A short and easy guide to replace the RAM for the Asus R510LA-RS71.

Written By: Deliyanis Rosa



---

## INTRODUCTION

If your computer is getting older and running slower and having trouble running multiple programs, then it is probably time to upgrade your RAM. A newer, larger RAM will do wonders for you.

---

### TOOLS:

- [JIS #00 Screwdriver](#) (1)
-

## Step 1 — RAM




- Using the JIS 00 screwdriver, remove the bottom left/right 12.7mm screws located on the back of the laptop.

## Step 2




- Slide and lift off the bottom cover.

### Step 3

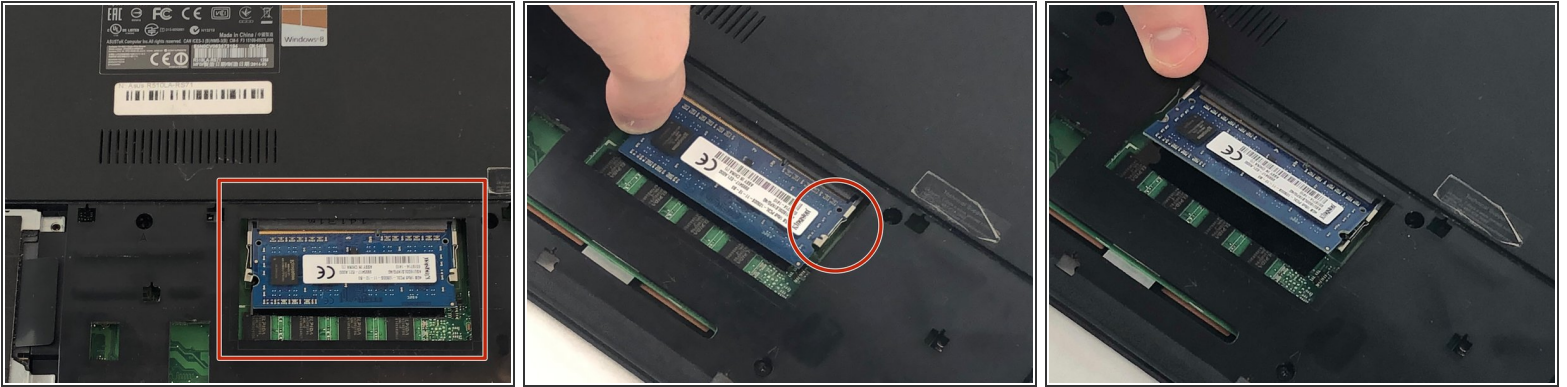

- There should be an exposed area located on the right center of the bottom of the revealed compartment. Move the silver brackets holding the RAM to the side. The RAM will pop out of its hold.

### Step 4

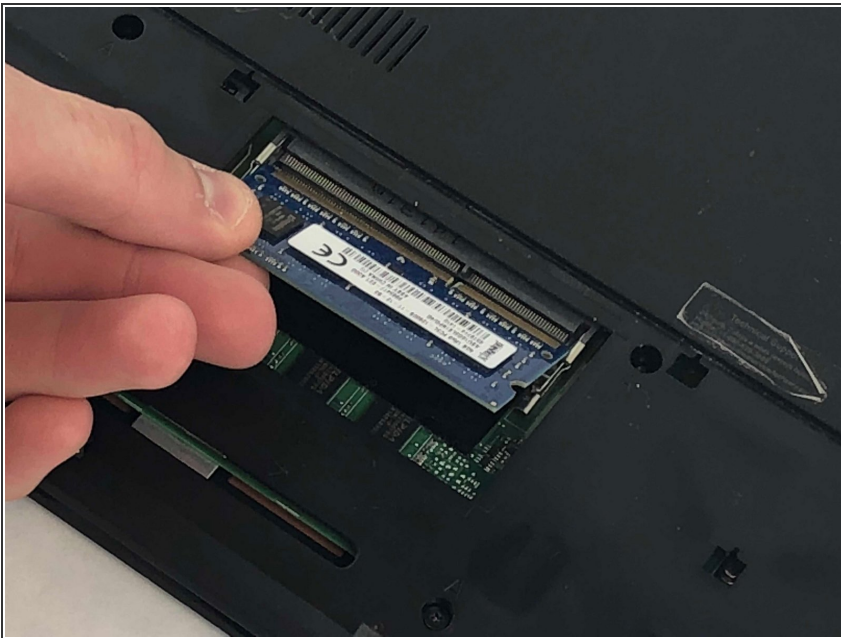

- Remove the RAM

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-18 08:12:39 AM.