



Dell Vostro 3450 ExpressCard Replacement

How to replace the ExpressCard in a Dell Vostro 3450.

Written By: Johnathan Hammond



INTRODUCTION

How to replace the ExpressCard in a Dell Vostro 3450.

Step 1 — Press the ExpressCard



- Press the ExpressCard to release it from the computer.

Step 2 — Slide the ExpressCard



- Slide the ExpressCard out of the computer.
- ☑ If this is all you are doing Follow Step In Reverse if not Go to Next Step.

To reassemble your device, follow these instructions in reverse order.