



Alienware M15x Battery Pack Replacement

How to replace a broken or dead battery in a Alienware M15x.


Written By: Terrence15



INTRODUCTION

In this guide, we will show you how to remove and replace the Battery Pack.


Step 1 — Turn the Computer

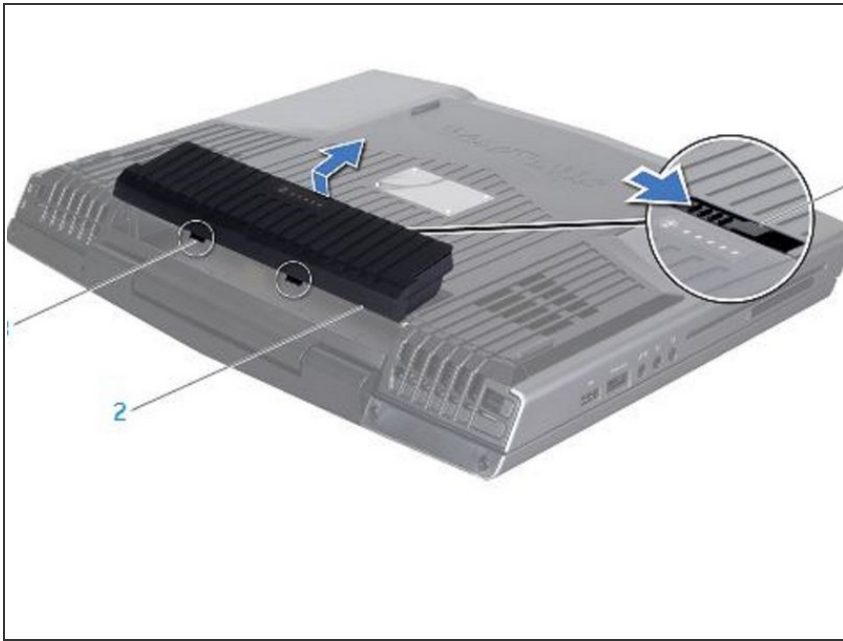

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer.


- Turn the computer over.

Step 2 — Sliding the Battery

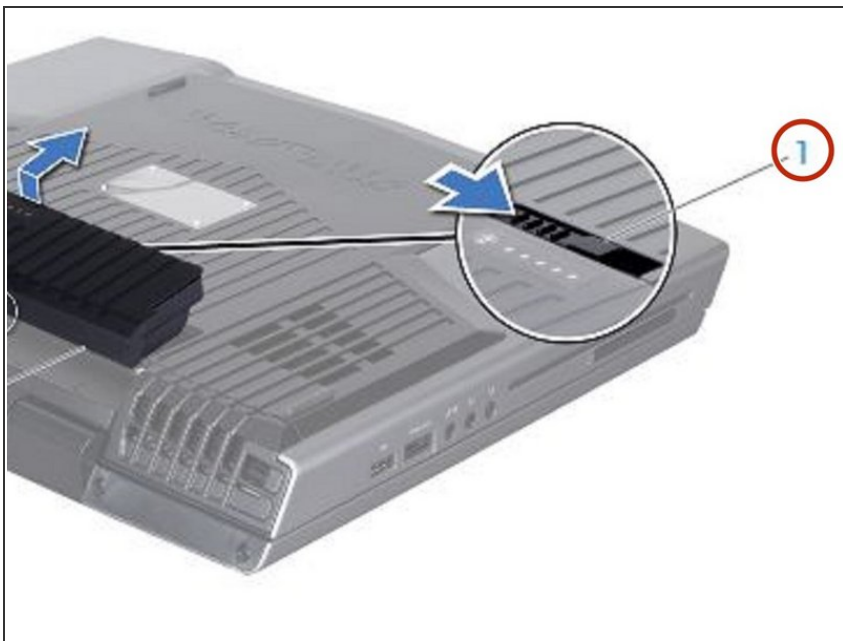

- Slide the battery latch to the unlock position as shown.

Step 3 — Removing the Battery Pack

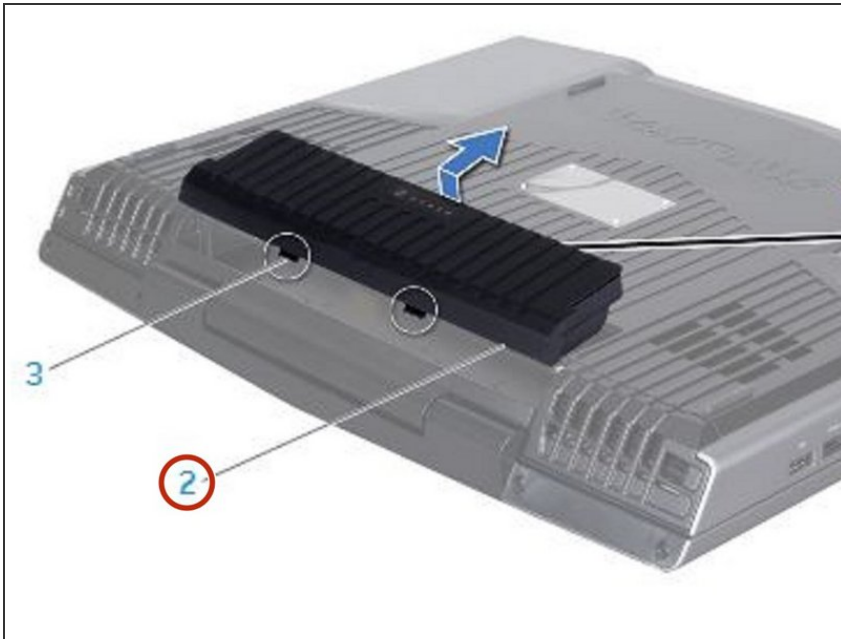


- After the Battery Pack pops up, remove the Battery Pack.

Step 4 — Aligning the Battery Pack Tabs



- Align the battery pack tabs with the slots in the battery bay.

Step 5 — Pushing the Battery Pack

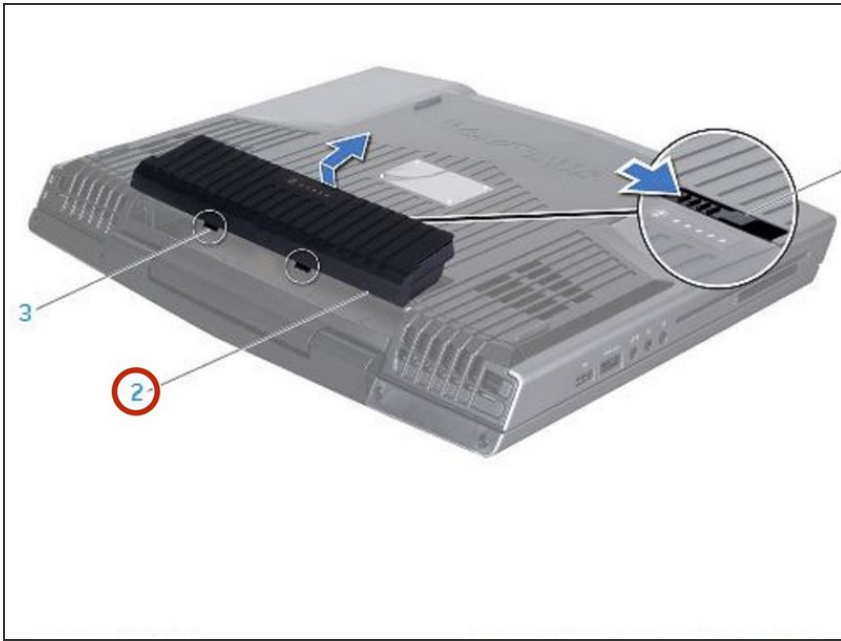

- Push the **NEW** battery pack into the battery bay until the battery pack clicks into place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-01 11:20:16 AM.