



Dell Vostro 3400 Battery Replacement

Written By: Johnathan Hammond



INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.

Step 1 — Sliding the Battery Release Latch



- Slide the battery release latch to the unlock position.

Step 2 — Sliding the Battery Release Latch



- Slide the other battery release latch to the unlock position.

Step 3 — Sliding the Battery



- Slide the battery and remove it from the computer.

This document was last generated on 2019-07-08 08:18:46 PM.