



Dell Vostro 3400 Hard Drive Replacement

Written By: Johnathan Hammond



INTRODUCTION

In this guide, we will be showing you how to remove and replace the Hard Drive.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Sliding the Battery Release Latch




- Slide the battery release latch to the unlock position.

Step 2 — Sliding the Battery Release Latch



- Slide the other battery release latch to the unlock position.

Step 3 — Sliding the Battery

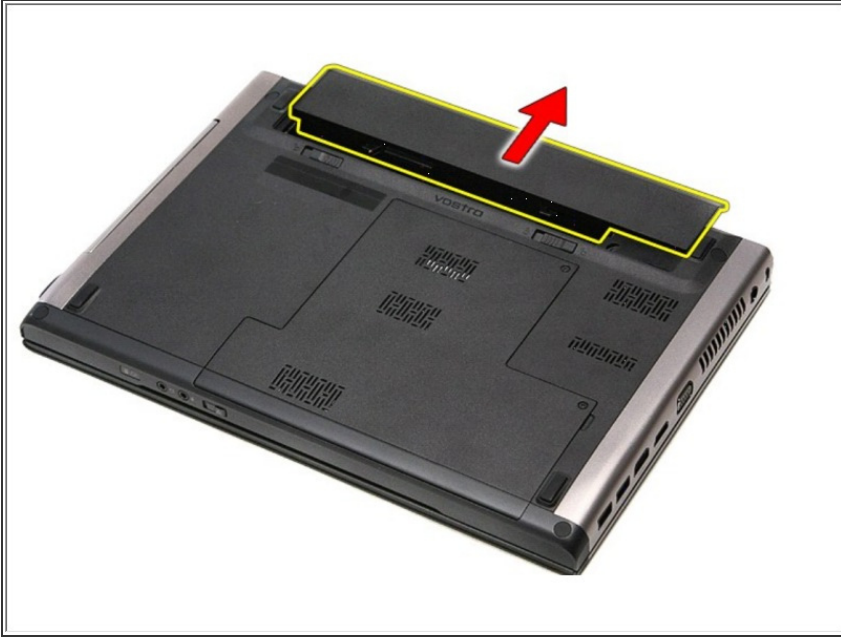

- Slide the battery and remove it from the computer.

Step 4 — Remove the Screws



- Remove the screws that secure the base cover to the computer.

Step 5 — Lifting the Base Cover



- Lift up the base cover and remove it from the computer.

Step 6 — Remove the Screws



- Remove the screws that secure the hard-drive assembly to the computer.

Step 7 — Sliding the Hard-Drive Assembly




- Slide the hard-drive assembly towards the center of the computer.

Step 8 — Lifting the Hard-Drive Assembly



- Lift the hard-drive assembly up and away from the computer.

Step 9 — Remove the Screws

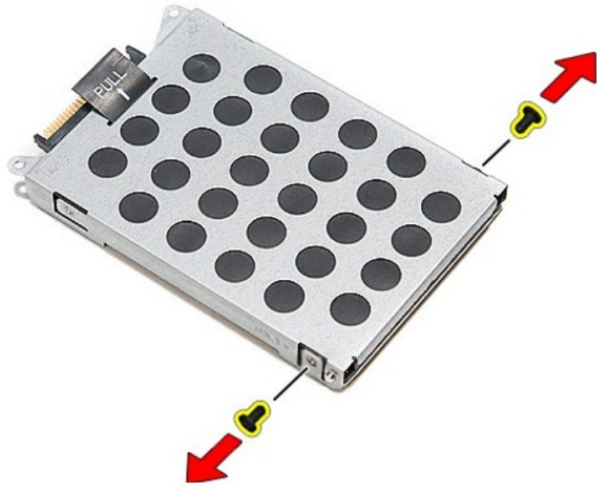


- Remove the screws that secure the hard-drive bracket to the hard drive.

Step 10 — Remove the Hard-Drive Adapter



- Remove the hard-drive adapter from the hard-drive assembly.

Step 11 — Lifting the Hard-Drive Bracket

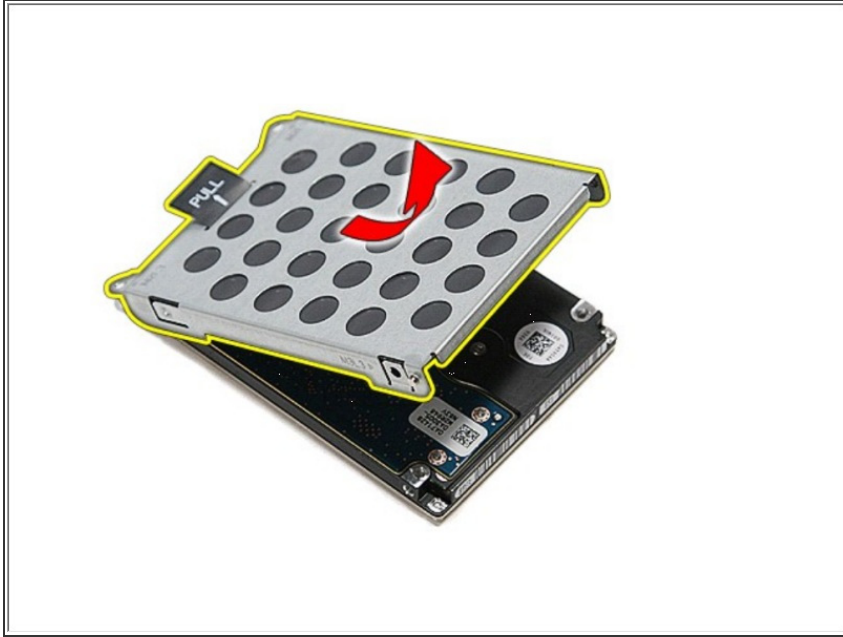

- Lift the hard-drive bracket up and away from the hard drive.

This document was last generated on 2018-05-17 05:25:56 AM.