



# Zoomer Meowzies Battery Replacement

This guide will go over how to remove and replace the batteries in Zoomer Meowzies.

Written By: Mitchell Gentry



## INTRODUCTION

This guide will go over how to remove and replace the batteries in Zoomer Meowzies. Batteries should be removed before starting any guide to avoid an electric shock, and should only be re-inserted once guide is completely finished.



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)



### PARTS:

- [AAA batteries](#) (1)
-

## Step 1 — Battery



- Turn the Zoomer Meowzies over so it is on its back and its stomach is facing up.
- Using the Phillips #1 screwdriver, loosen the screw holding the battery compartment closed.
- ⓘ This screw has a collar that will prevent it from being completely removed and therefore cannot be measured or replaced.



## Step 2



- Lift the compartment cover from the body. Due to the ribbon on the cover, the batteries should pop out as you remove the cover.
- Replace with new batteries using the diagrams located within the compartment as a guide for correct battery orientation.
- ☑ When replacing the batteries, weave the ribbon under each battery for easy removal later.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-05-29 01:32:50 AM.