




Acer Aspire S7-392-6484 Fan Replacement

Replace your fans to improve air flow and cooling in the Acer Aspire.

Written By: Nicholas Wise

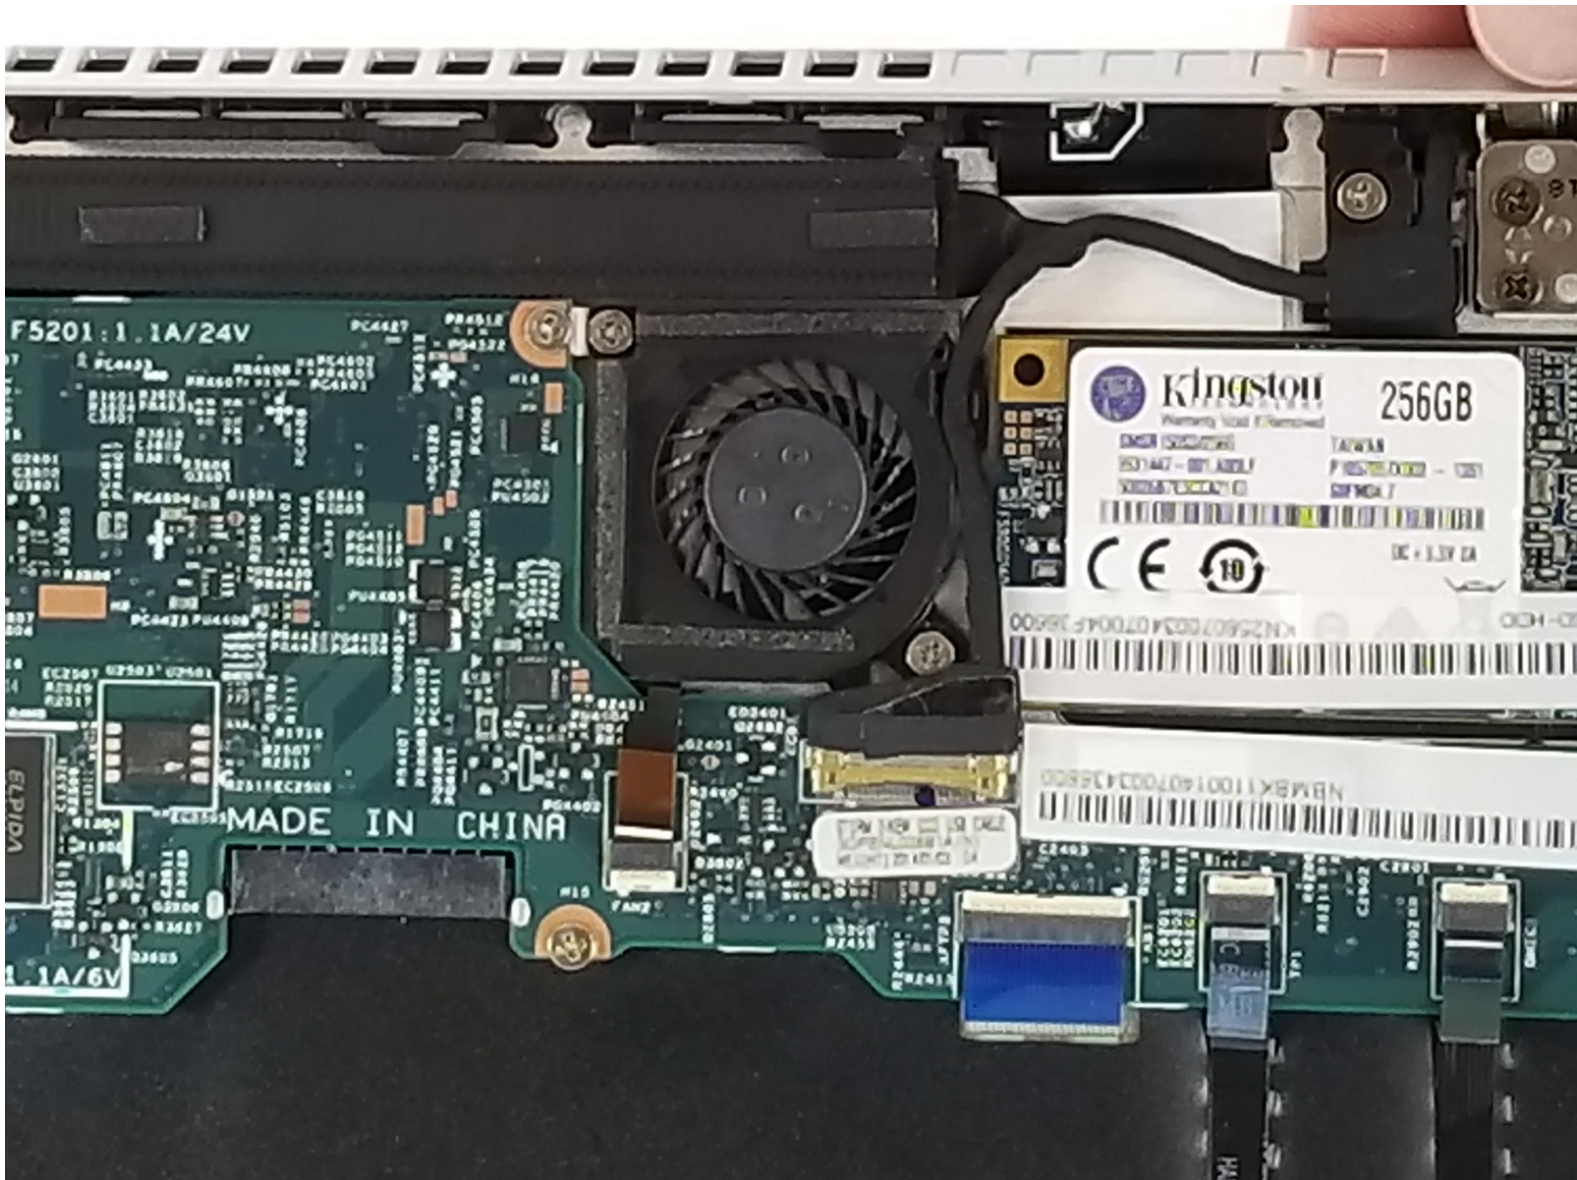


INTRODUCTION

The fan often needs replacement if the device is overheating or making loud noises while running. Some common tools will be needed for this replacement, such as a T6 Torx screwdriver and a Phillips #01 screwdriver. To determine if the fan needs to be replaced, please refer to this device's troubleshooting page.

TOOLS:



- [Phillips #1 Screwdriver](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Fan

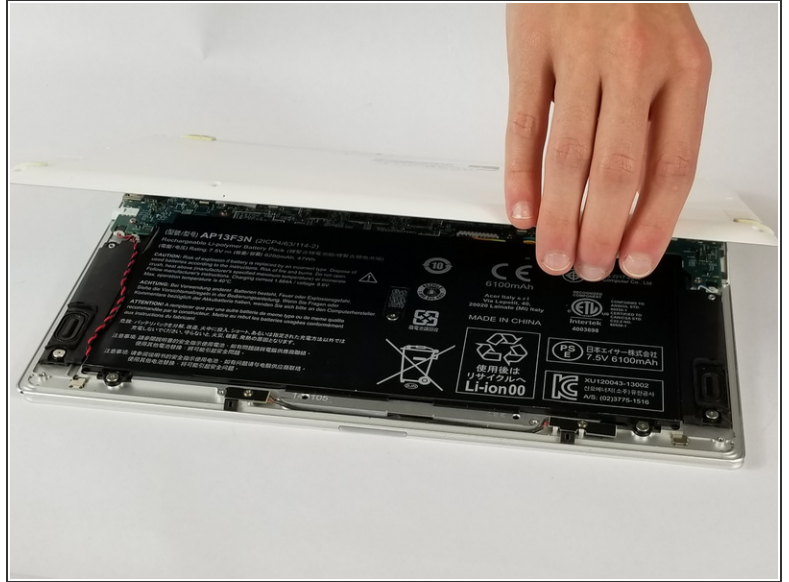

- Remove the back panel by unscrewing all marked 3mm screws with a T6 Torx screwdriver.
- Remove these screws with a T6 Torx screwdriver, but note that these feet screws are 4mm in length.

Step 2

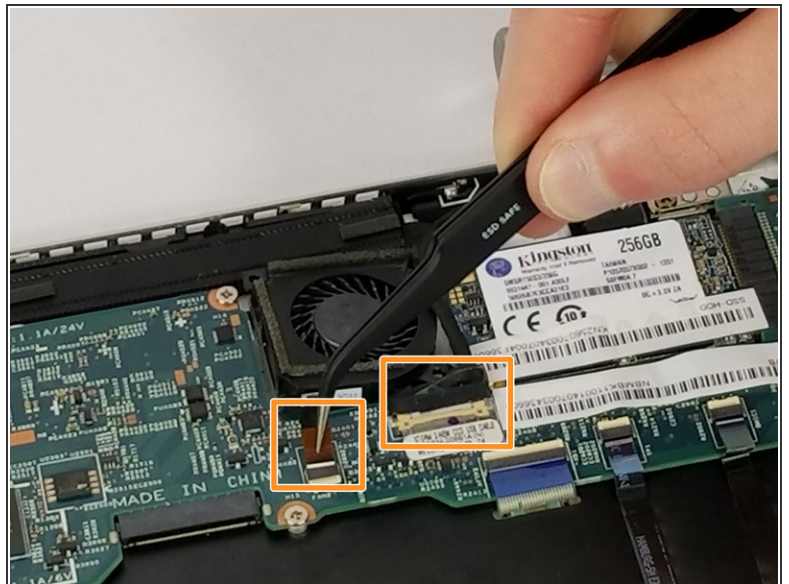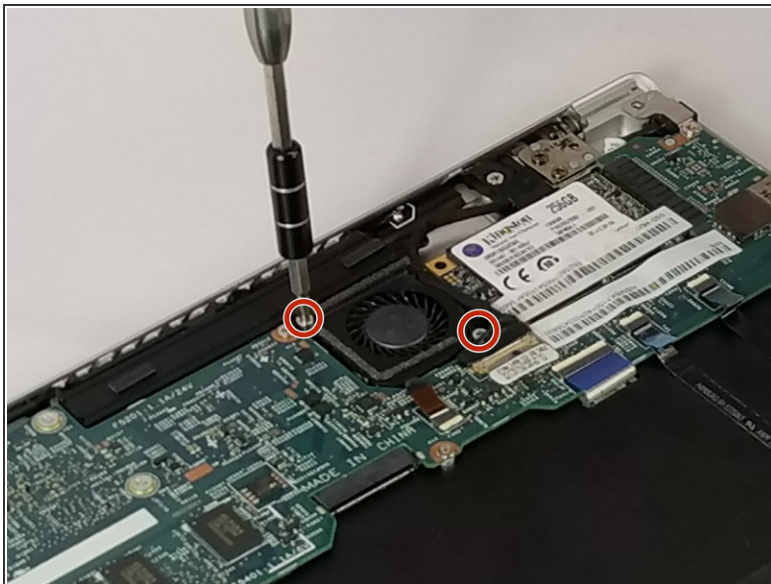

- Unscrew the marked 2mm screws with a Phillips #01 screwdriver.
- Remove the fan by disconnecting the marked tabs.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-05-23 07:40:15 PM.