



# Acer Aspire S7-392-6484 Hard Drive Replacement

Replace your hard drive to return speed and efficiency to your Acer Aspire.


Written By: Nicholas Wise



 **TOOLS:**



- [Phillips #1 Screwdriver](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Fan

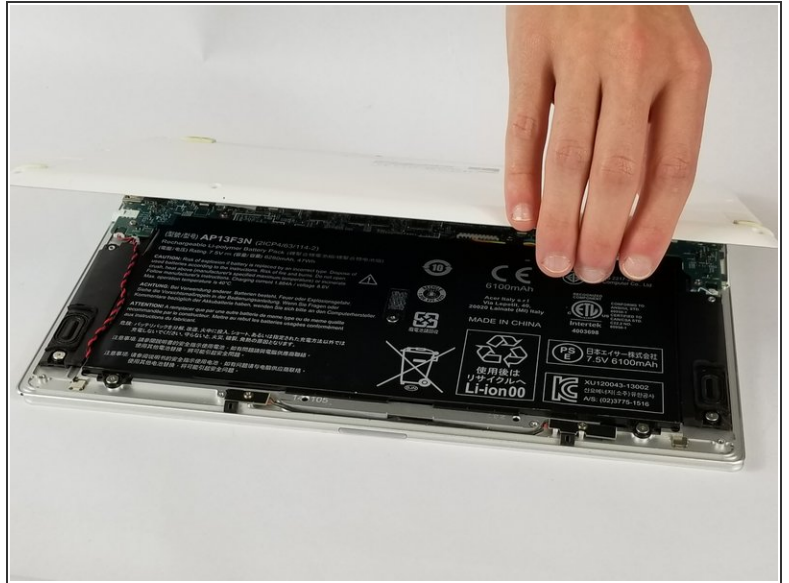


- Remove the back panel by unscrewing all marked 3mm screws with a T6 Torx screwdriver.
- Remove these screws with a T6 Torx screwdriver, but note that these feet screws are 4mm in length.

## Step 2

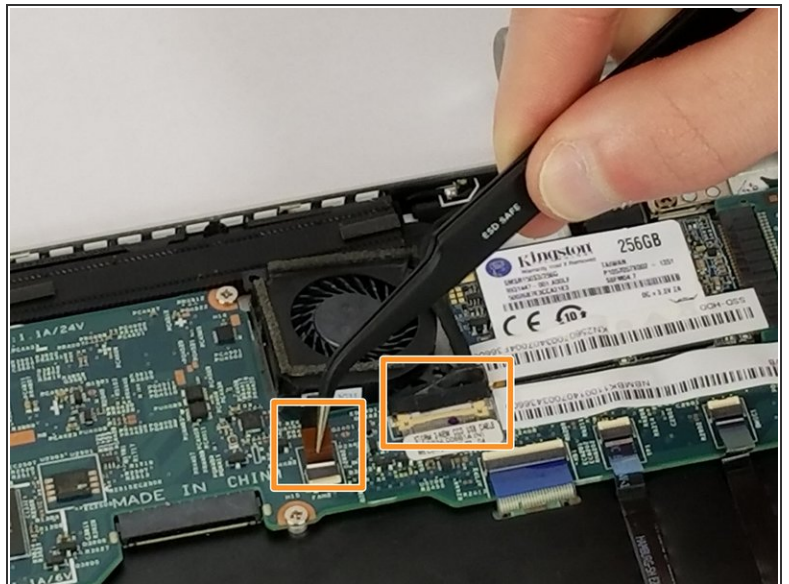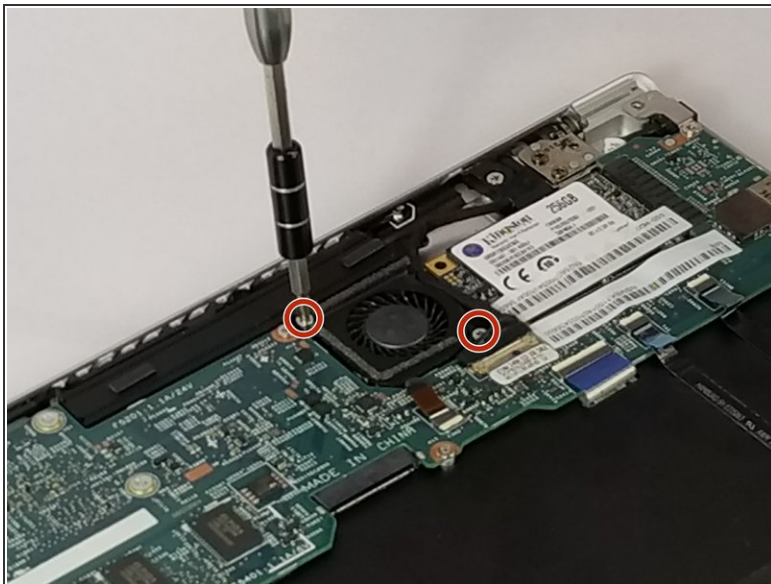


- Unscrew the marked 2mm screws with a Phillips #01 screwdriver.
- Remove the fan by disconnecting the marked tabs.

### Step 3 — Hard Drive

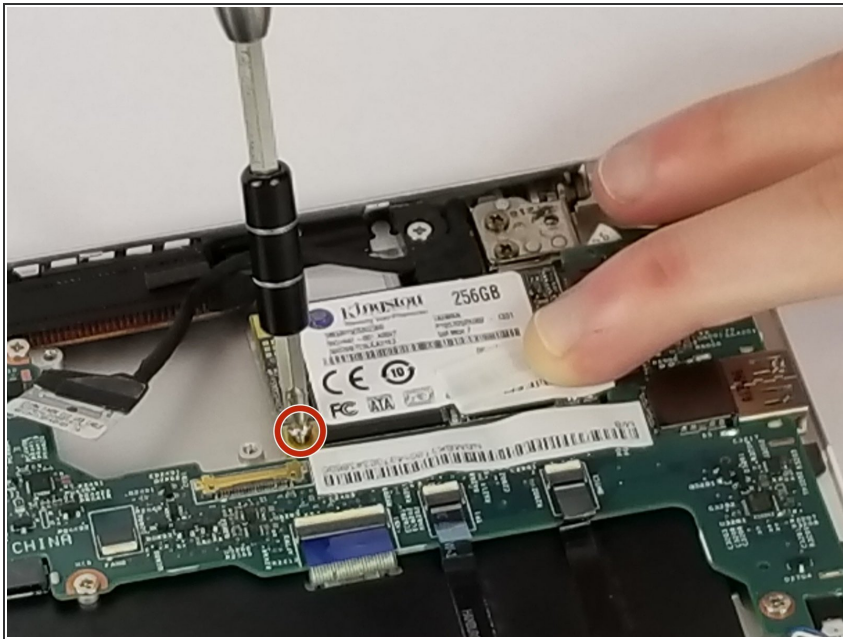

- Remove the marked 2mm screw with a Phillips #01 screwdriver.

### Step 4

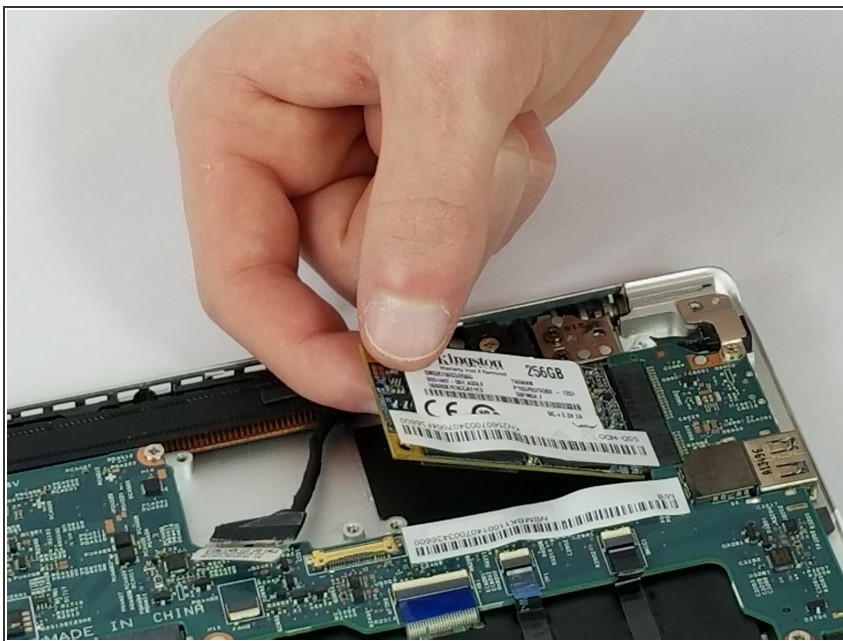

- ⚠ Remove the hard drive by pulling it away horizontally from its connection.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-23 01:57:39 AM.