



# Acer Aspire M5-583P-9688 Hard Drive Replacement

A guide that shows how to replace the hard drive on the Acer Aspire-583P-9688 laptop.

Written By: Collin Steel



---

## INTRODUCTION

This guide will show how to remove and replace the hard drive of an Acer 583P-9688.



### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)



### PARTS:

- [Acer Apire M5-583P Hard drive](#) (1)
-

## Step 1 — Hard Drive

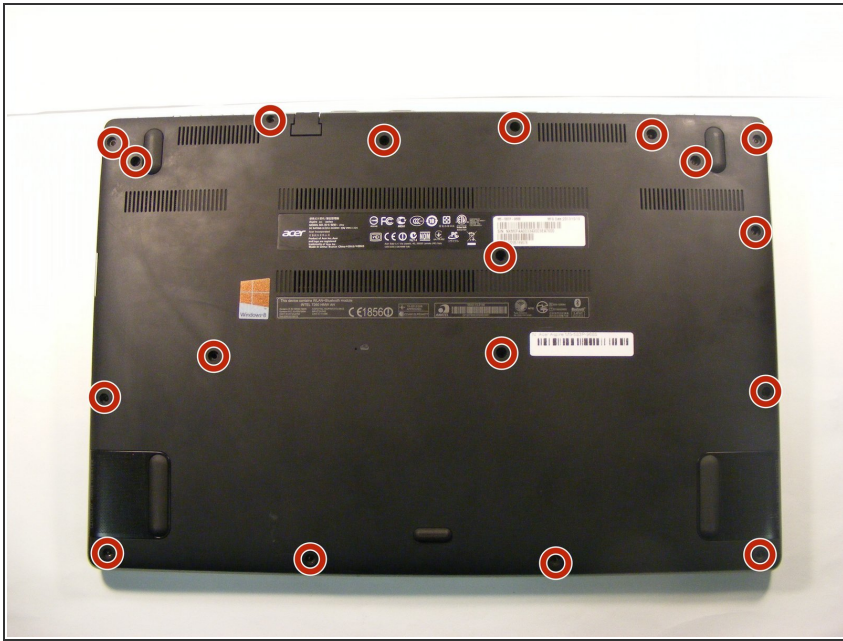



- Remove the 18 marked screws (2.12 mm) using a Phillips #1 head screwdriver.

## Step 2



- Use the spudger to slowly work your way around the perimeter starting at the marked location to pop the bottom cover off.

## Step 3

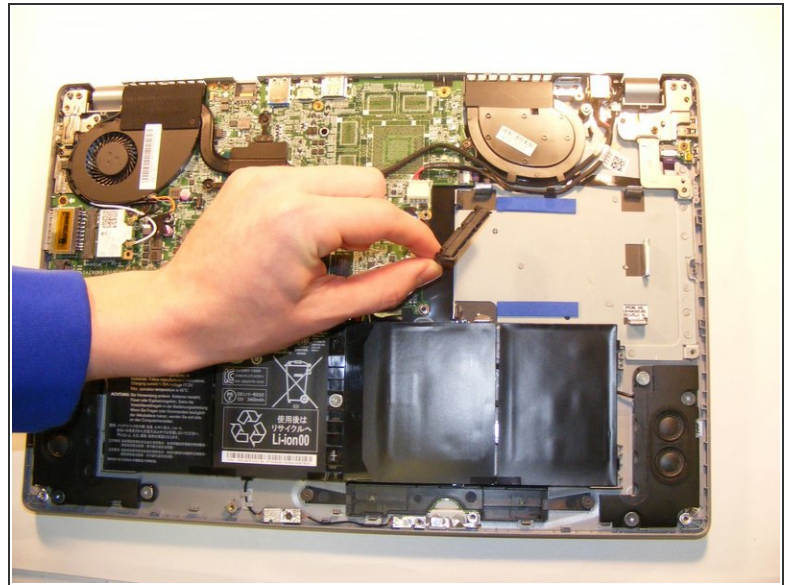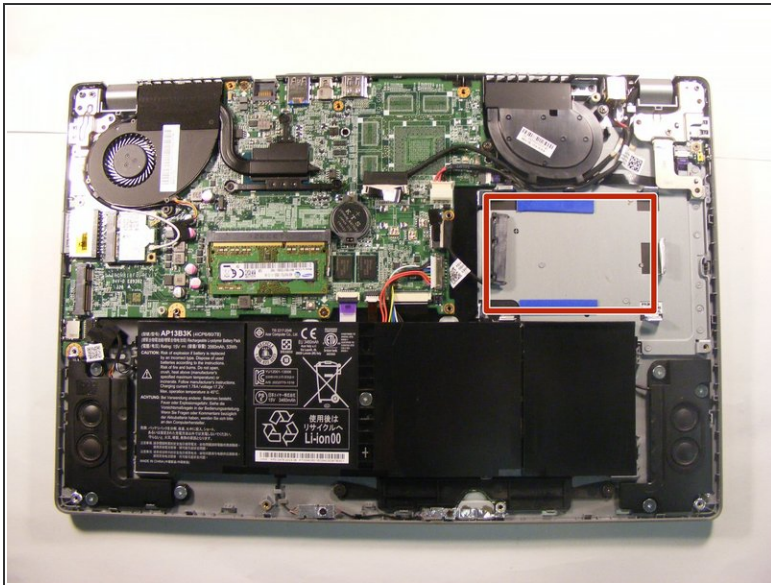

**i** This particular laptop does not have a hard drive. The red rectangle is where your hard drive will be.

- To remove the hard drive, carefully take it out of the brackets holding it in place. Once you have it out of the brackets, remove the connector from the hard drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-19 07:06:25 AM.