



Memorex CD Alarm Clock Radio Speakers Replacement

This guide will show how to replace the speakers on the Memorex CD Alarm Clock Radio.

Written By: Elijah Val Verde



 **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
- [Portable Soldering Iron](#) (1)

 **PARTS:**

- [Memorex CD Alarm Clock Speakers](#) (1)

Step 1 — Memorex CD Alarm Clock Radio Disassembly





- Locate the 'OPEN' tab on the battery compartment.
- Pull the tab upwards and remove the cover using your finger.
- Remove the batteries.

Step 2





- Locate the screws on the bottom of the device that hold the upper and lower halves together.
- Remove the (5) 19mm screws.
- Grasp the top and bottom and gently pull apart.

Step 3 — Speakers

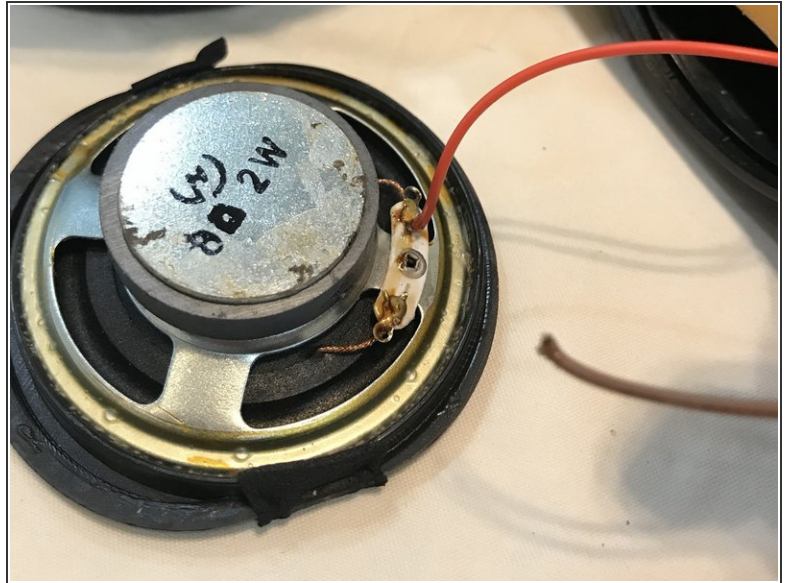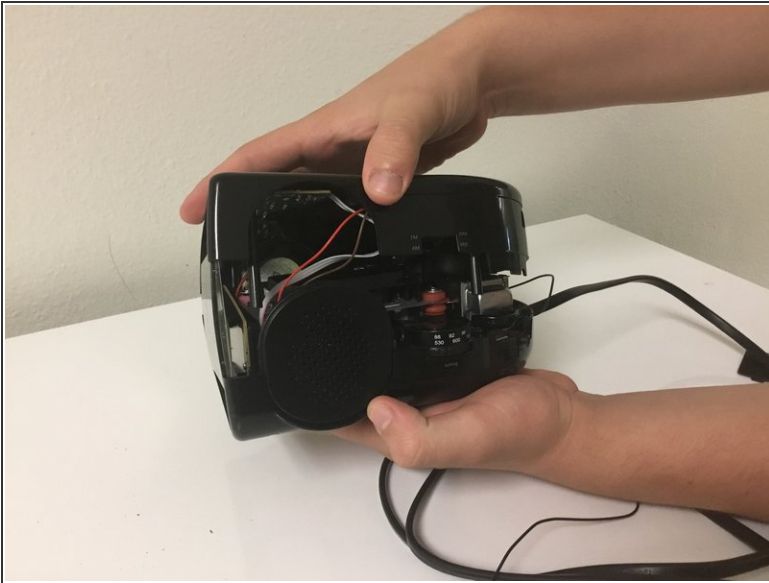

- Speaker will come out with a firm tug from its seated position.
- Remove speaker from alarm clock.

Step 4

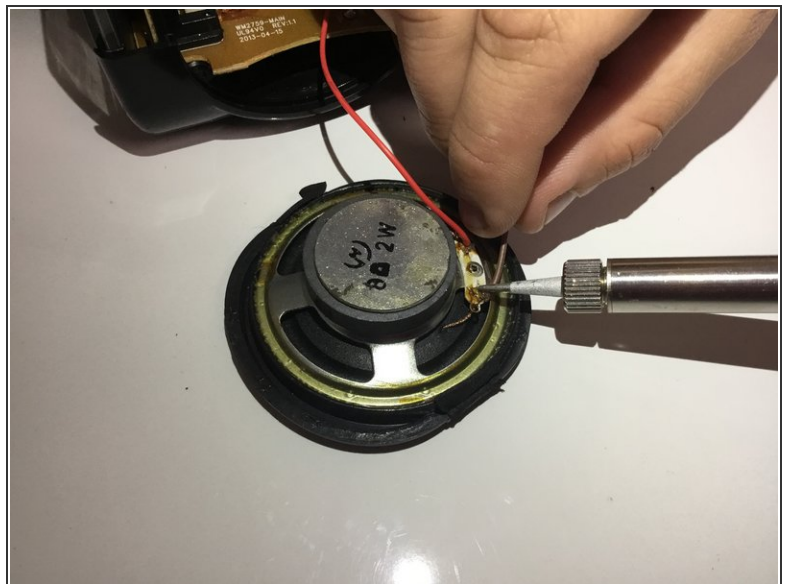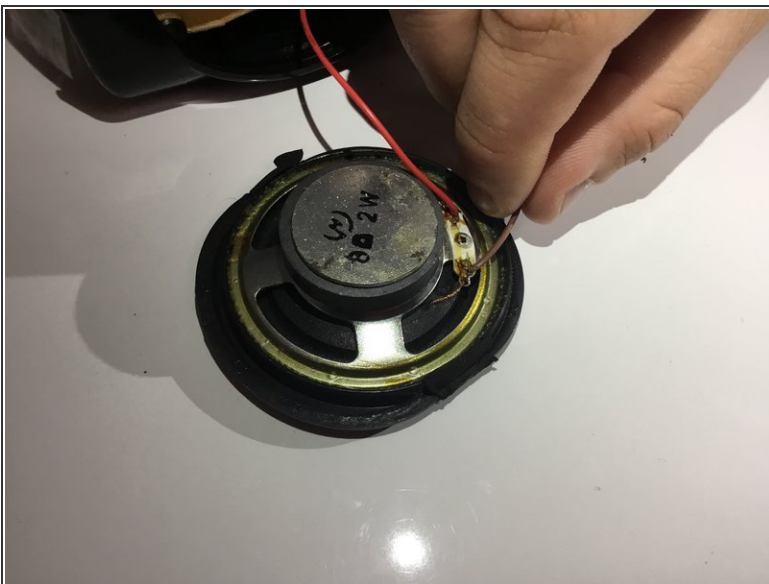

- Soldering will be required to install the wires to your new speaker.

To reassemble your device, follow these instructions in reverse order.