



# Memorex CD Alarm Clock Radio Antenna Replacement

This guide will show you how to replace the antenna on the Memorex CD Alarm Clock Radio.

Written By: Aubrey Frank



 **TOOLS:**

- [Soldering Iron](#) (1)
  - [Solder](#) (1)
  - [Soldering Tweezers](#) (1)
-

## Step 1 — Memorex CD Alarm Clock Radio Disassembly




- Locate the 'OPEN' tab on the battery compartment.
- Pull the tab upwards and remove the cover using your finger.
- Remove the batteries.

## Step 2



- Locate the screws on the bottom of the device that hold the upper and lower halves together.
- Remove the (5) 19mm screws.
- Grasp the top and bottom and gently pull apart.

### Step 3 — Antenna

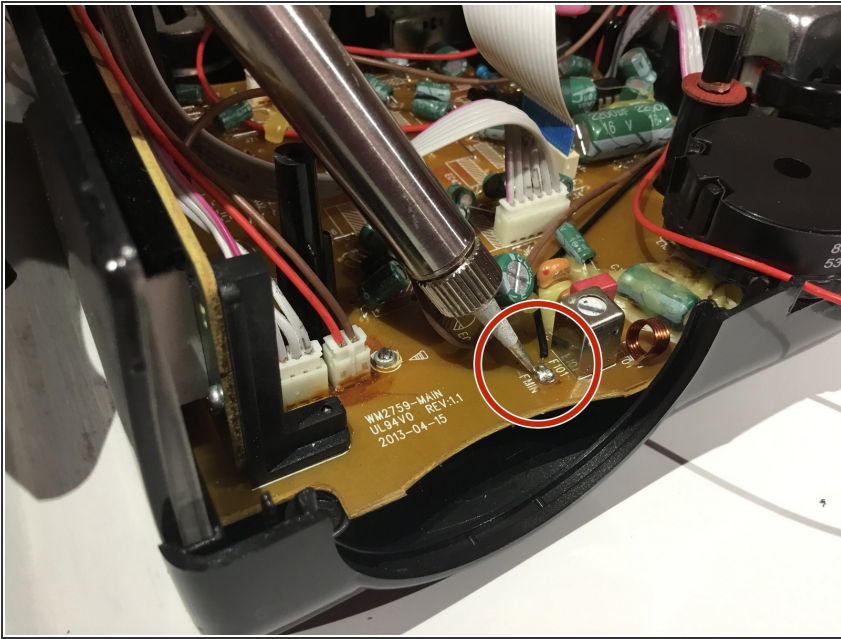

- Locate the small silver transistor between the front left speaker and the tuning knob. The antenna should be attached directly below the transistor.
- [Deolder](#) the antenna wire from the circuit board, and remove the wire.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 10:14:47 PM.