



Insignia NS-VCS14SL7 Stick Vacuum Power Button Replacement

Use this guide to troubleshoot and replace the Insignia NS-VCS14SL7 stick vacuum power button.

Written By: Thibaut Pilot



INTRODUCTION

The Insignia 2-in-1 stick vacuum power button can suddenly stop working or become jammed. In either case, use this guide to fix or replace the power button.

TOOLS:


- [Phillips #2 Screwdriver](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Stick Vacuum Power Button



- Remove the four 12mm Phillips screws , and the one large 32mm Phillips head bolt from the vacuum handle.
- Pull up on the back cover of the vacuum handle and remove it.

Step 2

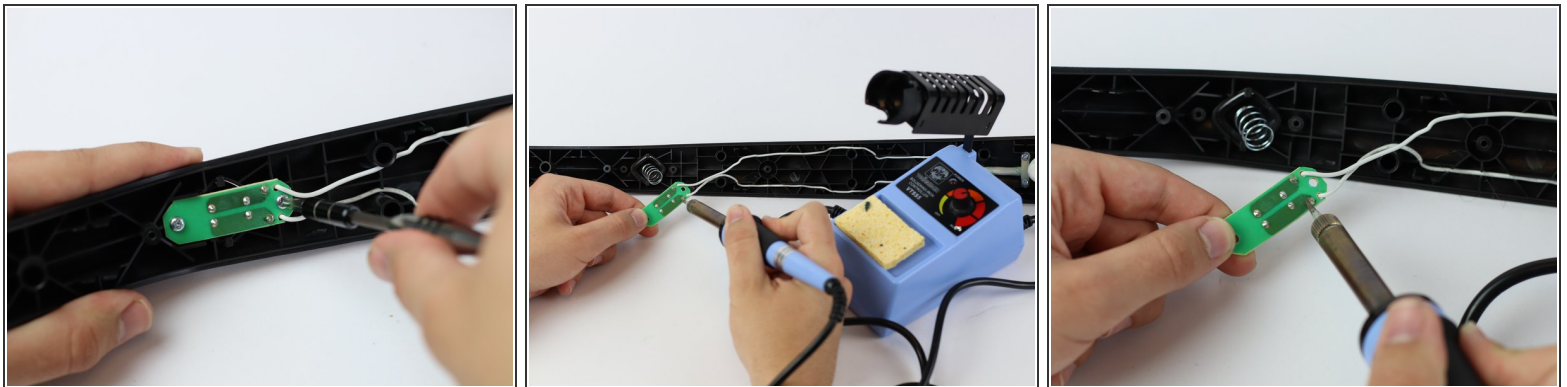

- Remove the two 10mm Phillips #2 screws on the back of the green printed circuit board.
- ⓘ If the circuit board needs to be replaced, locate where the two white wires are soldered to the board, and de-solder the connection.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-20 06:50:14 PM.