



Ring Video Doorbell Camera Replacement

A replacement guide for the Ring Video Doorbell Camera

Written By: Isaiah Wilson




INTRODUCTION

In this guide, you will be shown how to take apart and replace the camera of the Ring Video Doorbell step-by-step. You will need a Phillips screwdriver size PH00 and a Plastic Tool Opener.

TOOLS:




- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Camera

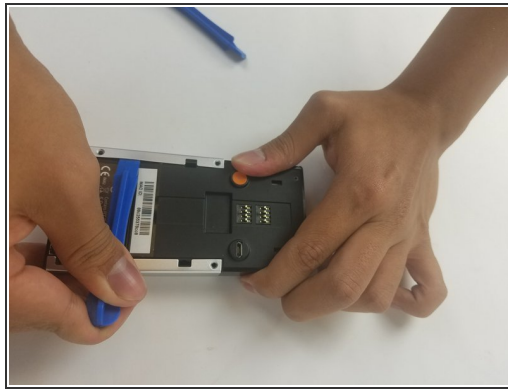


- Start by using the PH00 Phillips Screwdriver to take out the 6 1 mm screw's on the bottom of the device.
- Pry open the aluminum plate using the Plastic Opening Tool(s).
- Remove the 2 1. mm screws using the PH00 Phillips Screwdriver.

Step 2

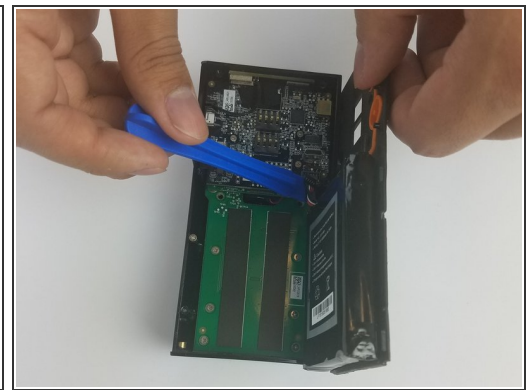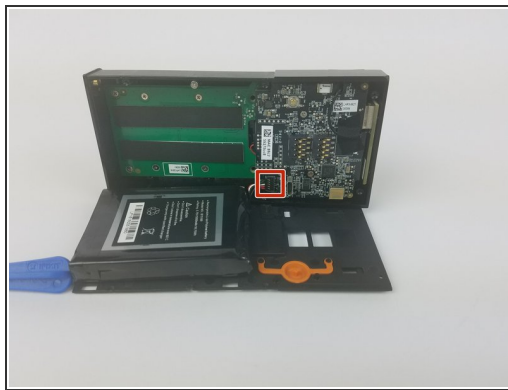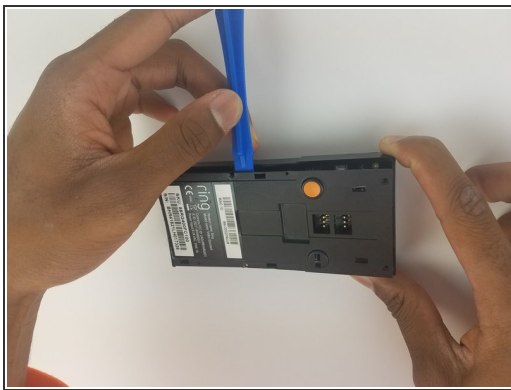


- Pry open the back case as shown using the Plastic Opening Tool.
- Disconnect the battery from motherboard by carefully pulling up on the connector.

Step 3

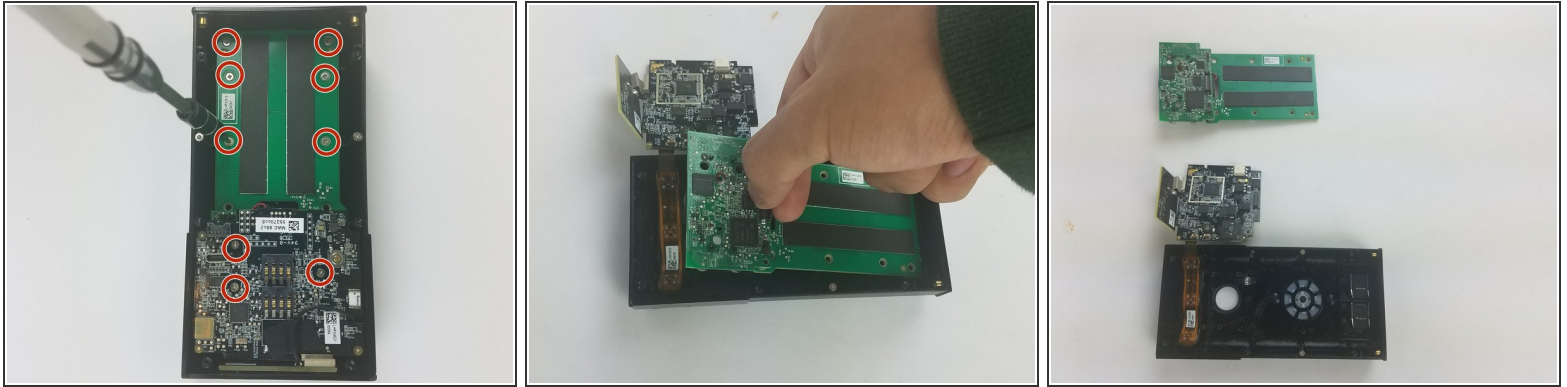


- Unscrew the 9 1 mm screws using a PH00 Phillips Screwdriver.
- Carefully detach the motherboard, from the housing unit using your hands.

Step 4

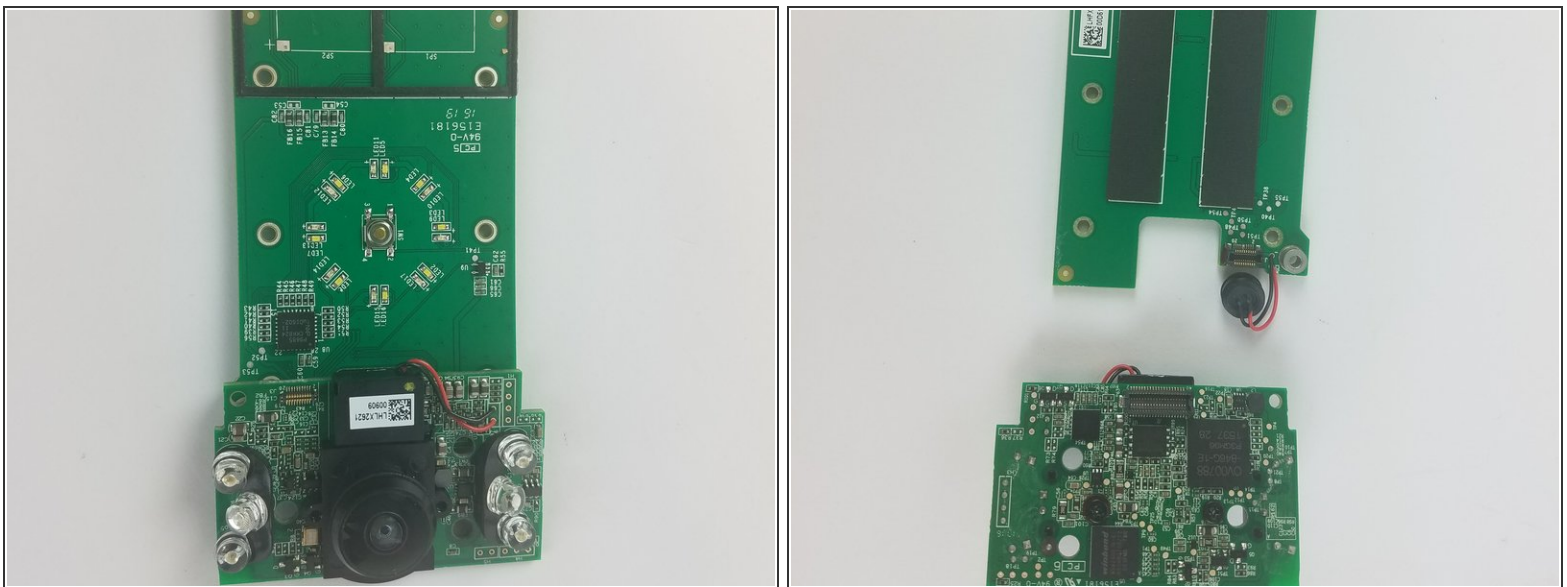

- Using the Plating Tool Opener, carefully disconnect the ribbon cable that attaches the camera to the housing.
- Replace camera, and follow the steps in reverse order to reassemble

Step 5

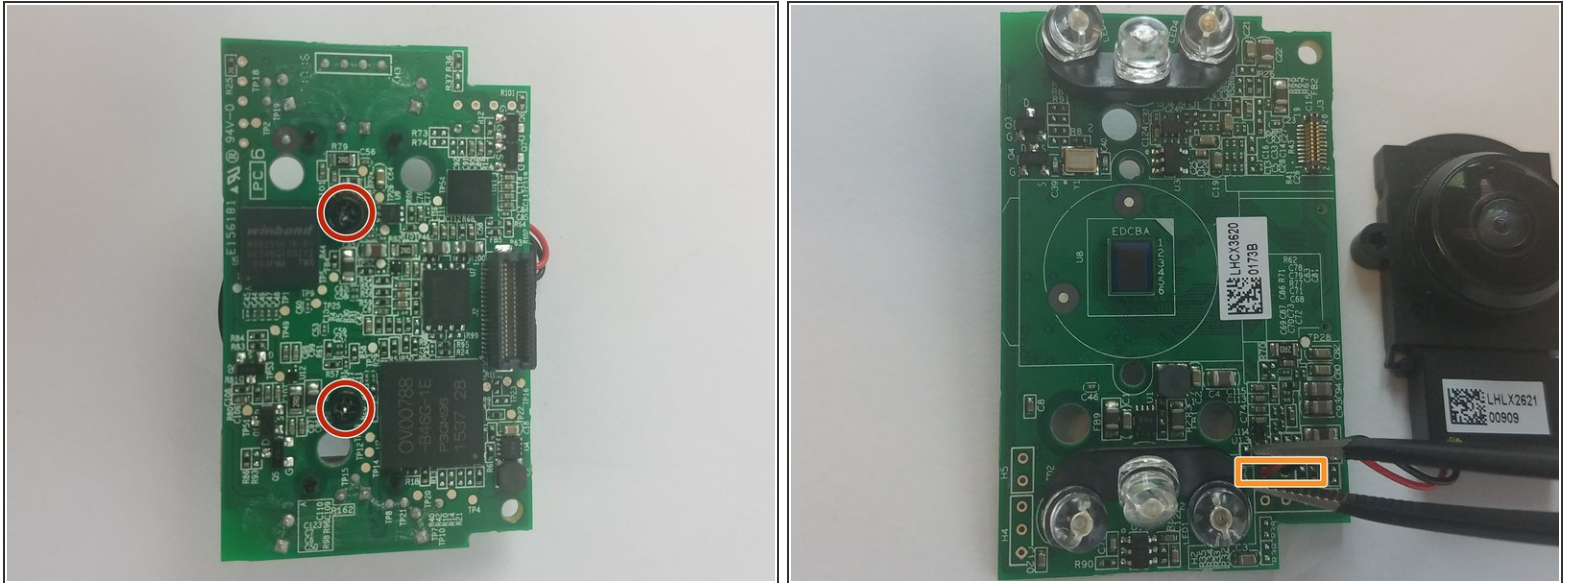

- Unscrew the two 1 mm screws using the PH00 Philips Screwdriver.
- Detach the black and red wire connected to the motherboard, using the tweezers, to remove the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-10 07:16:14 PM.