



Ring Video Doorbell Speakers Replacement

This guide will take you step by step on how to remove and replace the speakers.

Written By: Oscar Pascual-Diego




INTRODUCTION

This guide begins after completing the motherboard replacement guide. All you will need for speaker replacement is a plastic opening tool. Speaker replacement may be needed if you are having sound issues.

TOOLS:



- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Motherboard

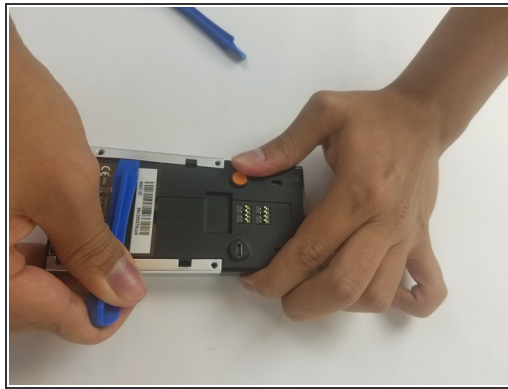


- Start by using the PH00 Phillips Screwdriver to take out the 6 1 mm screw's on the bottom of the device.
- Pry open the aluminium plate using the Plastic Opening Tool(s).
- Remove the 2 1 mm screws using the PH00 Phillips Screwdriver.

Step 2

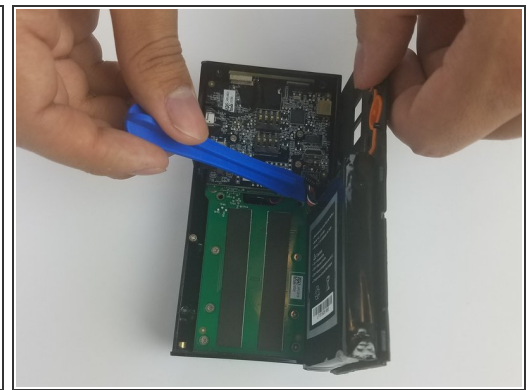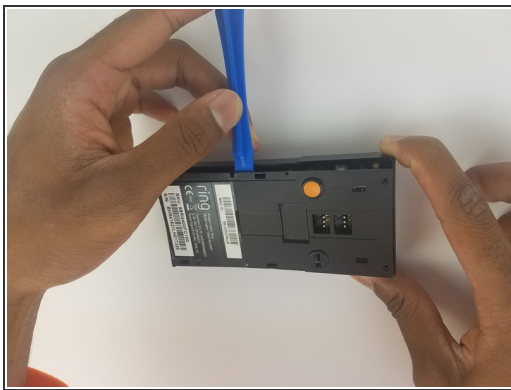


- Pry open the back case as shown using the Plastic Opening Tool.
- ⚠️ Disconnect the battery from motherboard by carefully pulling up on the connector.

Step 3

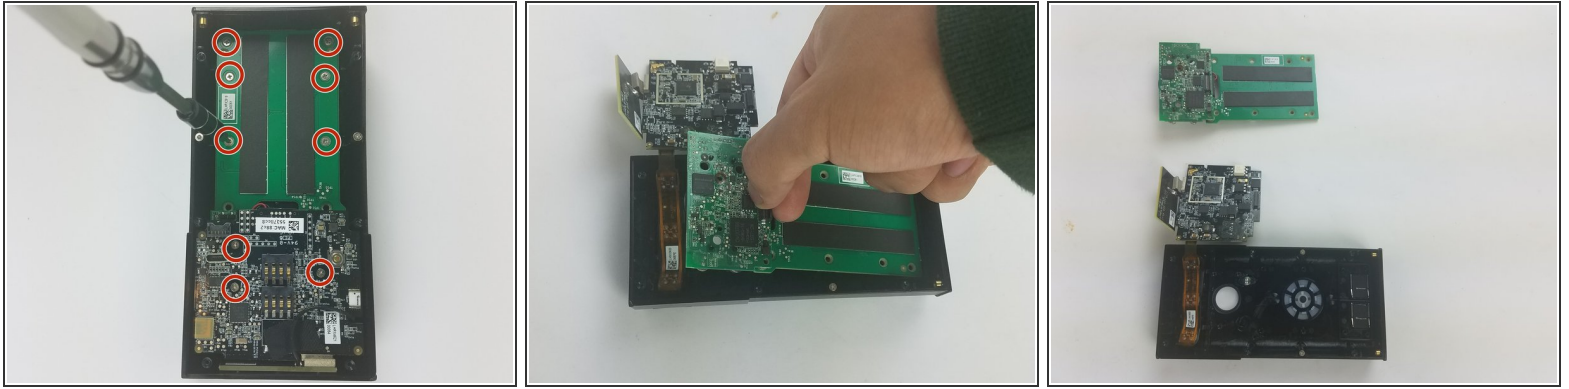

- Unscrew the 9 1 mm screws using a PH00 Phillips Screwdriver.
- ⚠ Carefully detach the motherboard, from the housing unit using your hands.

Step 4

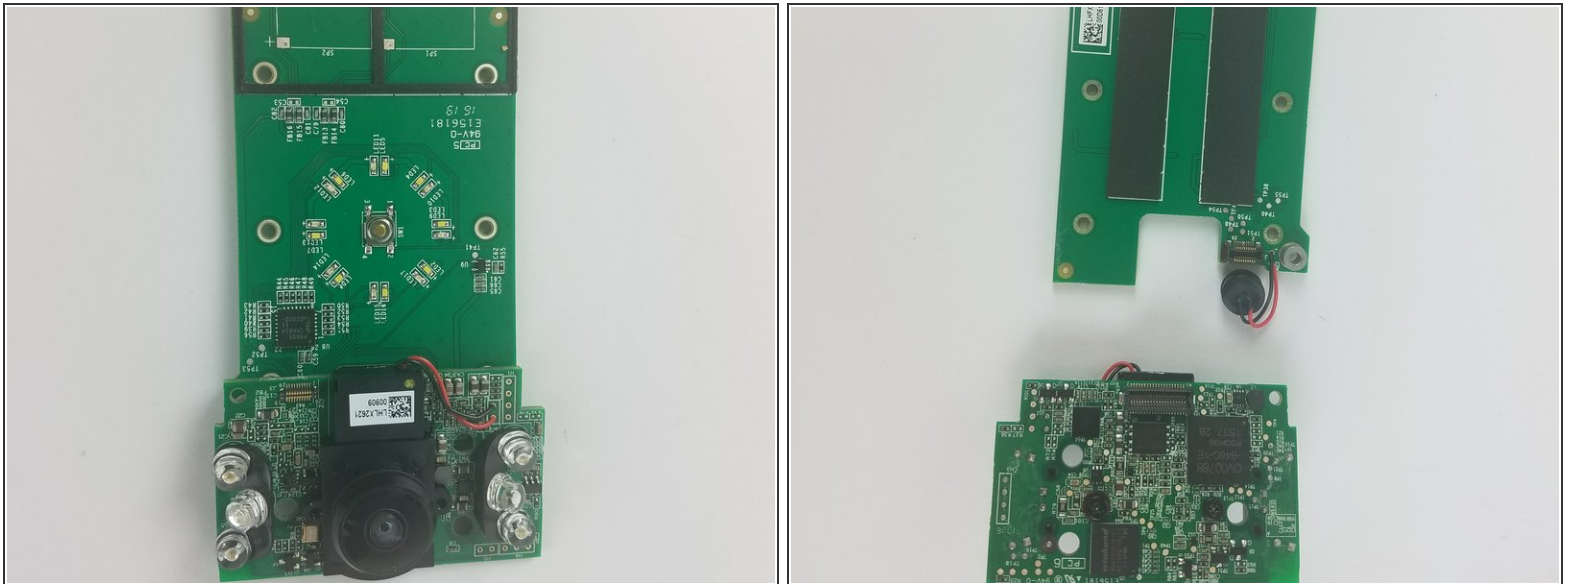


- Detach the upper part of the motherboard from the bottom, using your hands.

Step 5 — Speakers



- Speakers are two small rectangles located above the button of the doorbell.

Step 6

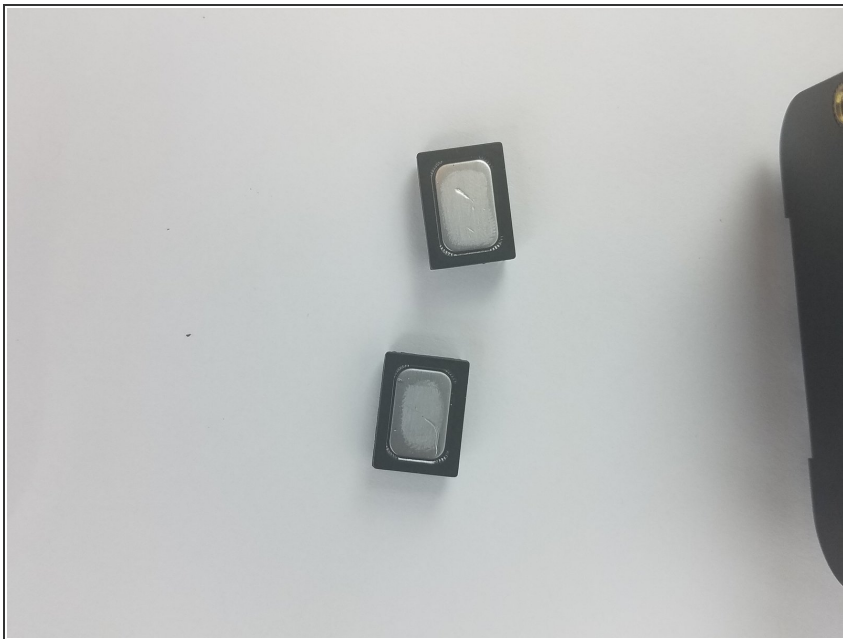

- To remove the speakers pry each one out carefully with a plastic opening tool.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-19 07:49:11 AM.