



# Ring Video Doorbell Battery Replacement

In this guide, you will be shown how to replace the battery of the Ring Video Doorbell step-by-step.

Written By: Abdulrahman



## INTRODUCTION


In this guide, you will be shown how to take apart the housing unit in order to replace the battery of the Ring Video Doorbell, step-by-step. You will need only a Plastic Tool Opener for this.

---

### TOOLS:




- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery

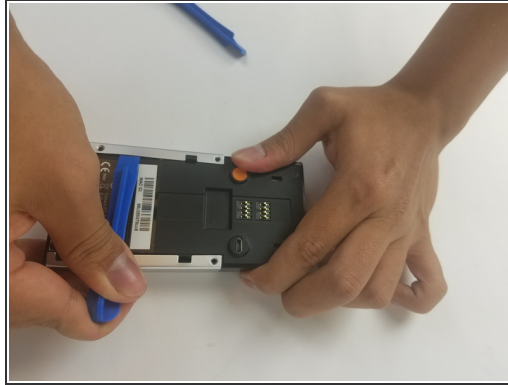

- Start by using the PH00 Phillips Screwdriver to take out the 6 1 mm screw's on the bottom of the device.
- Pry open the aluminium plate using the Plastic Opening Tool(s).
- Remove the 2 1. mm screws using the PH00 Phillips Screwdriver.

## Step 2

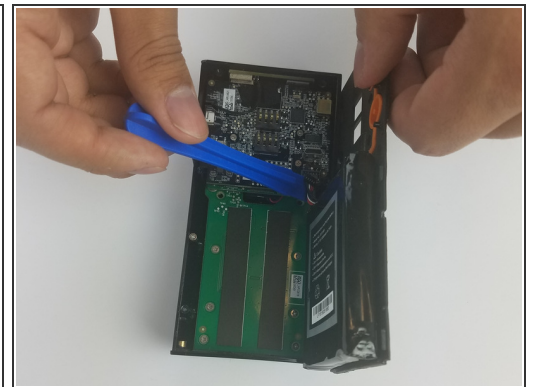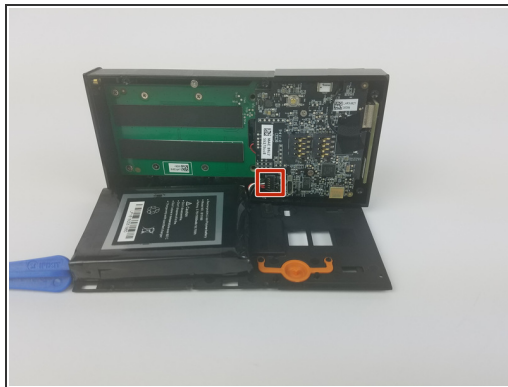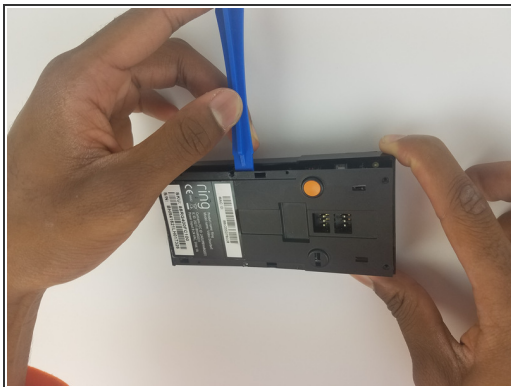

- Pry open the back case as shown using the Plastic Opening Tool.
- ⚠️ Disconnect the battery from motherboard by carefully pulling up on the connector.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-06-02 02:47:06 AM.