



Ring Video Doorbell Battery Replacement

In this guide, you will be shown how to replace the battery of the Ring Video Doorbell step-by-step.

Written By: Abdulrahman




INTRODUCTION

In this guide, you will be shown how to take apart the housing unit in order to replace the battery of the Ring Video Doorbell, step-by-step. You will need only a Plastic Tool Opener for this.

TOOLS:




- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

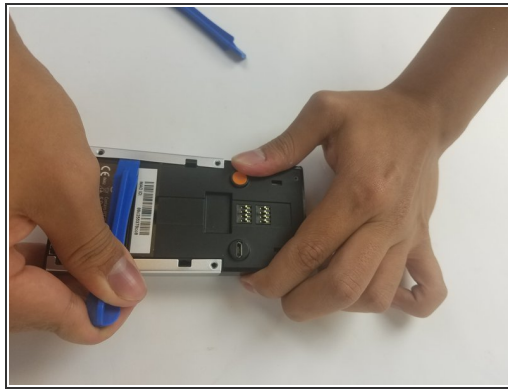

- Start by using the PH00 Phillips Screwdriver to take out the 6 1 mm screw's on the bottom of the device.
- Pry open the aluminium plate using the Plastic Opening Tool(s).
- Remove the 2 1. mm screws using the PH00 Phillips Screwdriver.

Step 2

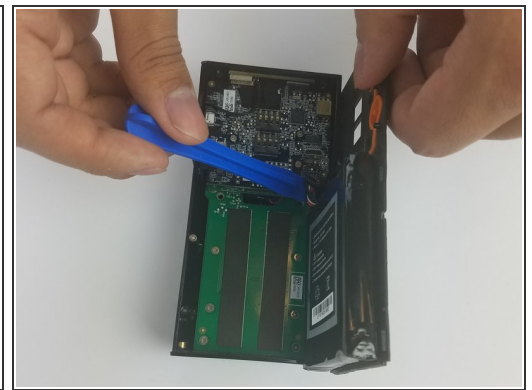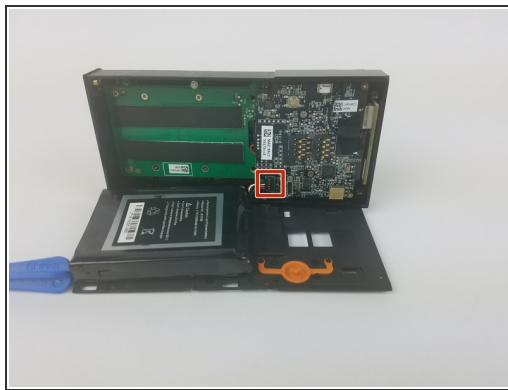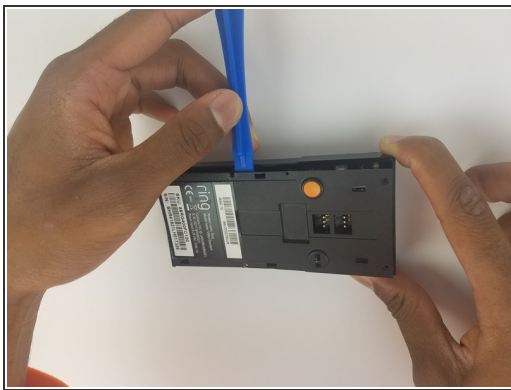

- Pry open the back case as shown using the Plastic Opening Tool.
- ⚠ Do **NOT** lift the case of all the way, there is still a cable connecting the two pieces.
- Disconnect the battery from motherboard by carefully pulling up on the connector.

To reassemble your device, follow these instructions in reverse order.